 
 


- 8 The *Date and Time Setup* screen opens. Press **▲** or **▼** to highlight **Use this date and time**, then press **SELECT**.
OR

Press **▲** or **▼** to highlight **Set date and time manually**, then press **SELECT** and follow the on-screen instructions to set your time zone, daylight saving option, and date and time.

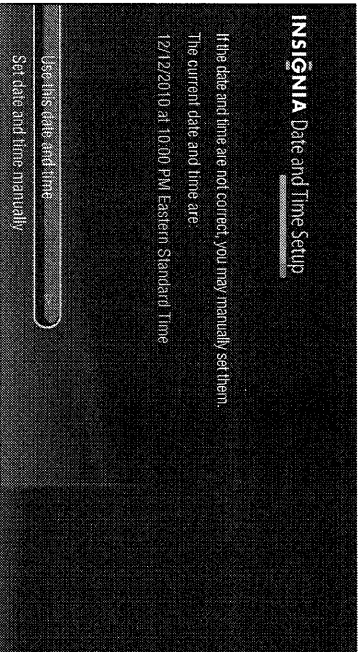

- 9 The *Congratulations* screen opens. Press **TiVo** to enjoy your new TV.

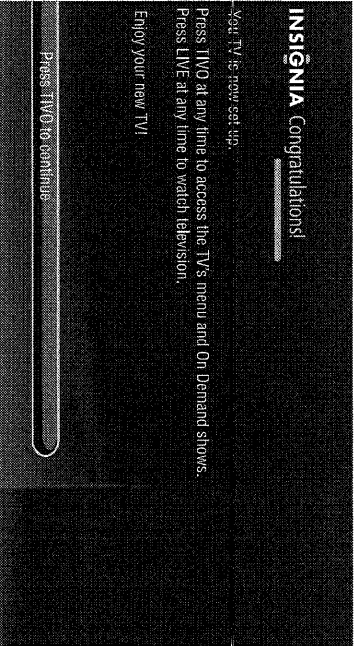

- 10 If you skipped the channel scan in Step 6 because you are using a cable or satellite TV box, your TV switches to the active input source that you connected the cable or satellite box to before displaying the *Home* menu.

www.insigniaproducts.com

Programming your universal Insignia remote control

Note

 
To use the on-screen setup for your remote control, the remote control must be in RF mode. If the remote control is not in RF mode, the *RF Remote Control Required* screen opens when you try to enter the *Remote control setup* menu. Follow the on-screen instructions to switch your remote control to RF mode.

Programming the mode buttons


You can program the mode buttons on your TV remote control (**DVD**, **STB**, or **AUX**) to control the corresponding device using your TV remote control.

To program the mode buttons:


- 1 Press **TiVo**. The *Home* screen opens. Press **▲** or **▼** to select **Settings**, then press **►** or **SELECT**.
- 2 Press **▲** or **▼** to highlight **Settings**, then press **►** or **SELECT**.

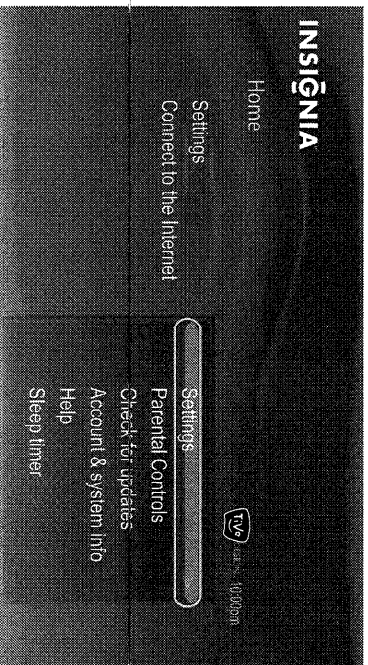

 
3 Press **▲** or **▼** to highlight **Devices**, then press **►** or **SELECT**.

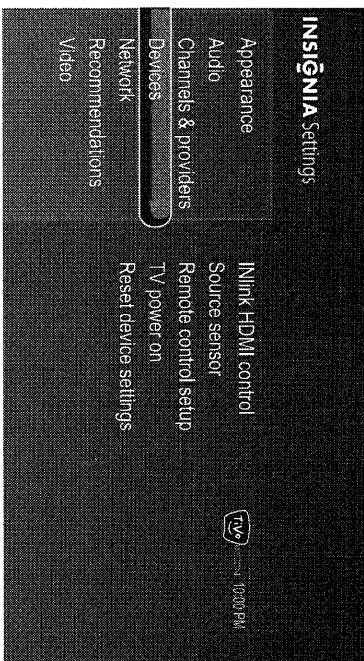

 
4 Press **▲** or **▼** to highlight **Remote control setup**, then press **►** or **SELECT**. If your remote control is not in RF mode, follow the on-screen instructions to switch to RF mode.

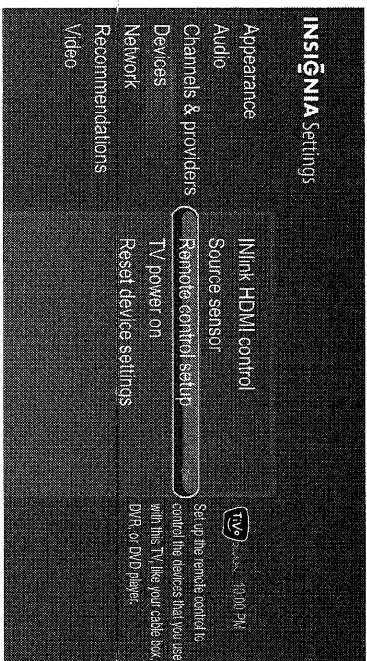

 5 Press **▲** or **▼** to highlight the mode button on your remote control that you want to program (**DVD**, **STB**, or **AUX**), then press **►** or **SELECT**.

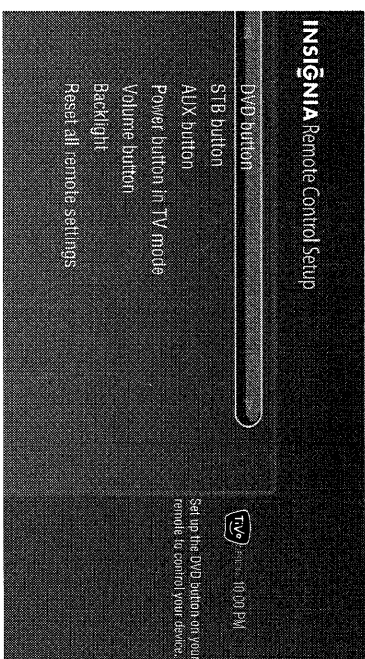

 6 Press **▲** or **▼** to highlight the device you want to control with the button you are programming, then press **►** or **SELECT** and follow the on-screen instructions.

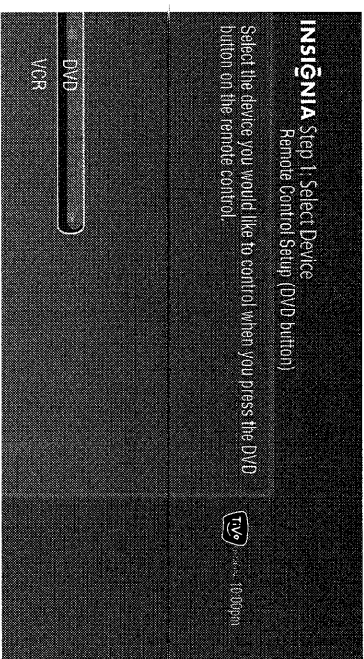


7 Repeatedly press **►** to highlight the list of brands, press **▲** or **▼** to highlight the brand of your device, then press **SELECT**.


Note

You can narrow down the brand or model number list by entering the first one or two letters or numbers of your device brand and model number using the on-screen keyboard.

 
- 8 Repeatedly press **▶** to highlight the list of models, press **▲** or **▼** to highlight the model number of your device, then press **SELECT**.
- 9 Follow the on-screen instruction to test the remote control on the device.

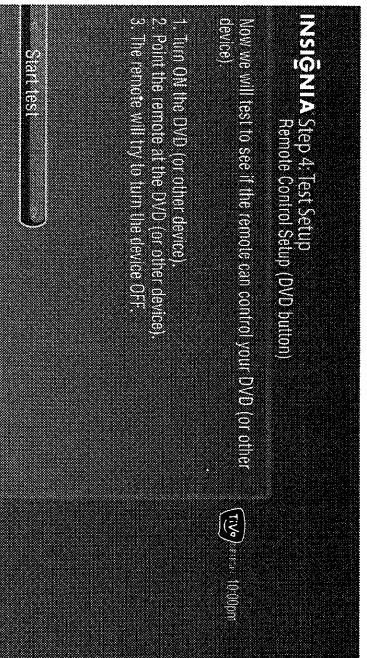

 - 10 Press **▲** or **▼** to highlight **Yes, continue**, then press **SELECT**.

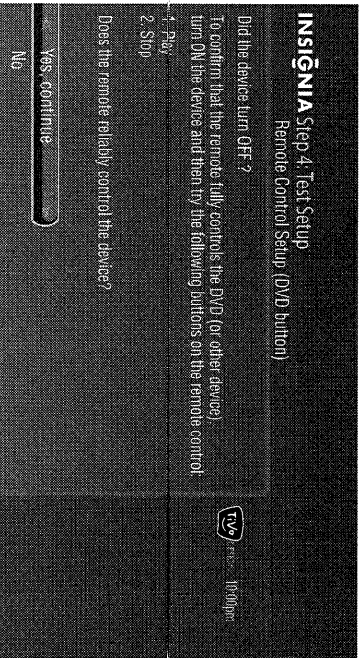

 - 11 Press **▲** or **▼** to highlight the input jack you want to assign to this button, then press **SELECT**. When you press the mode button, your TV switches to the input source you selected for the device.
- If you do not want to switch to the input source you selected for the device when you press the mode button, select **I don't want to automatically switch inputs**, then press **SELECT**.

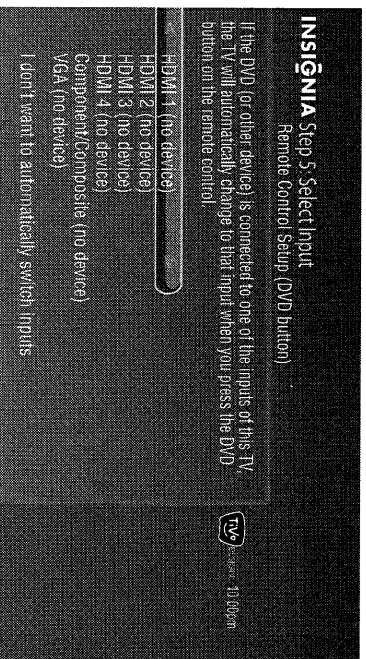

- 12 Press **▲** or **▼** to highlight the device you want to turn on and off when you press the power button in this mode, then press **SELECT**. A check mark appears next to the selected device. Press **▲** or **▼** to highlight **Use these settings**, then press **SELECT**.

