 


### Remote control

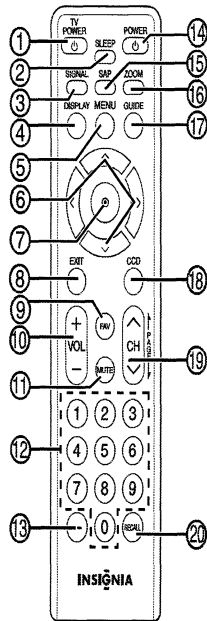

No.	Button	Description
14	POWER	Press to turn your converter box on or off.
15	SAP	Press to select a secondary audio program (SAP) for the current TV program.
16	ZOOM	Press to select the aspect ratio.
17	GUIDE	Press to open the Simple Guide.
18	CCD	Press to select the closed caption mode, if available.
19	CH $\wedge$ / PAGE $\uparrow$ CH $\vee$ / PAGE $\downarrow$	Press to go to the next or previous channel, or press to go to the next or previous page in the Channel Edit or Block Channel menu.
20	RECALL	Press to go to the last viewed channel.

**Note**

 
If you use a universal remote control, you can use it to control your converter box.  
To program the universal remote control to control your converter box, set the remote control's operation mode to Set-Top Box, then set your remote control to the manufacturer codes for LG or Zenith.

No.	Button	Description
1	TV POWER	Press to turn the TV on or off.
2	SLEEP	Press to set the Sleep timer.
3	SIGNAL	Press to view the signal strength for the current channel. You will also hear a series of beeps. The faster the beeps sound, the stronger the signal is.
4	DISPLAY	Press to view information about the program on the current TV channel.
5	MENU	Press to open or close the on-screen menu.
6	$\wedge$ $\vee$ $>$ $<$	Press to highlight options in a menu.
7	$\bullet$ (Select)	Press after you enter a channel number with the button numbers to tune to the channel immediately. In on-screen menus, press to select a highlighted option.
8	EXIT	Press to close any on-screen display or menu and return to normal TV viewing.
9	FAV	Press to select a channel from the Favorites list.
10	VOL+/VOL-	Press to increase or decrease the volume.
11	MUTE	Press to turn off the sound. Press again to restore the sound.
12	Numbers	Press to enter a channel number or parental control password.
13	—	Press to enter a sub channel number. For example, to enter sub channel 1 for the main channel 2, press 2, press this button, then press 1. For more information about sub channels, see "Digital sub channels" on page 2.

### Installing the remote control battery

**To install the remote control battery:**

- 1 Remove the battery compartment cover on the back of the remote control.
- 2 Insert one AAA battery into the battery compartment. Make sure that the + and - on the battery align with the + and - in the battery compartment.

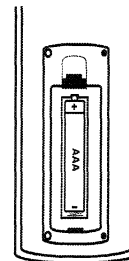

- 3 Replace the battery compartment cover.

- 3 Press  $\wedge$  or  $\vee$  to select **Canadian Rating**, then press  $>$  or  $\odot$ .
- 4 Press  $\wedge$  or  $\vee$  to select **English** or **French**, then press  $>$  or  $\odot$ .
- 5 Select **English** for Canadian programs that have English ratings. Select **French** for Canadian programs that have French ratings.
- 6 Select a rating, then press  $\odot$ .

For English ratings:

- **C**—Programs intended for children under 8.
- **C8+**—Programs generally considered acceptable for children 8 and over.
- **G**—General audience.
- **PG**—Parental guidance.
- **14+**—Programs that contains themes or content which may not be suitable for viewers under 14.
- **18+**—Adult program.

For French ratings:


- **G**—General programs intended for audience of all ages.
- **8 ans+**—Not recommended for young children.
- **13 ans+**—Programs may not be suitable for children under 13.
- **16 ans+**—Programs not suitable for children under the age of 16.
- **18 ans+**—Programs restricted to adults.

### Downloading rating information

 You can update rating information if the station downloadable rating information.

#### To download rating information:


- 1 Press **MENU**. The **SETUP** menu opens.

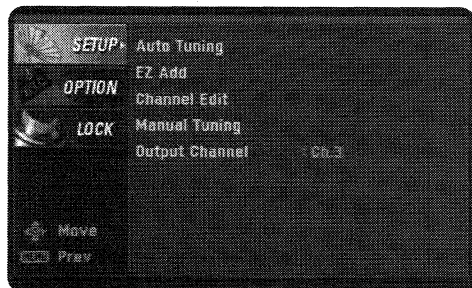

- 2 Press  $\wedge$  or  $\vee$  to select **LOCK**, then press  $>$  or  $\odot$ . The **LOCK** menu opens.

#### Note

 You must enter the password to open the Lock menu. The default password is **7777**.

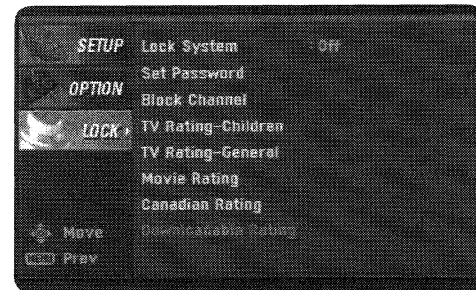

- 3 Press  $\wedge$  or  $\vee$  to select **Downloadable Rating**, then press  $>$  or  $\odot$ .
- 4 Press  $\wedge$  or  $\vee$  to select a rating title or TV rating, then press  $>$  or  $\odot$ .
- 5 Press  $\wedge$  or  $\vee$  to select a rating, then press  $\odot$ .

#### Note

If information is not downloaded from the TV station, the Downloadable Rating option is not available. Rating information is automatically downloaded while watching DTV channels. It may take several seconds. The Downloadable Rating option is available for use after rating information is downloaded from the TV station. However, depending on the information from the TV station, it may not be available for use. Rating levels differ depending on the broadcasting station. The default option name and Downloadable Rating changes depending on the downloaded information. The on-screen display for Downloadable Rating options appear in the language that the TV station sends. The rating titles (for example Humor) and TV ratings (for example MH, H, or VH) may differ depending on the TV station.

### Programming the remote control

You can control the power button on the TV with the supplied remote control. To do this, you need to program the remote control.

#### To program the remote control:

- 1 Determine if the TV is a model that can be controlled by the remote control. See "Controllable TV brands" on page 14.
- 2 Turn on the TV.
- 3 While you press and hold **TV POWER** on the remote control, press **CH  $\wedge$**  or **CH  $\vee$**  one or more times until the TV turns off. Each time you press one of these buttons, the remote control sends a manufacturer code (between 1 and 45) to the TV.

**Controllable TV brands**

Abex	Carver	Harvard	Masushita	Portland	Supreme
Admiral	Celebrity	Havermy	Megatron	Prima	SVA
Advent	Celera	Hello Kitty	Memorex	Prism	Sylvania
Aiko	Changhong	Himitsy	MGA	Proscan	Symphonic
Akai	Citizen	Hisense	Midland	Proton	Tandy
America Action	Clarion	Hitachi	Mitsubishi	Quasar	Tatung
Anam	Contec	Infinity	Motorola	Radio Shack	Technics
Anam National	Durabrand	Insignia	MTC	RCA	Techwood
AOC	Electroband	JBL	Multitech	Realistic	Teknika
Apex Digital	Elektra	JCB	NAD	Runco	Thomas
Audiovox	Emerson	Jensen	NEC	Sampo	TMK
Baysonic	Envision	JVC	Nikko	Samsung	Toshiba
Bell&Howell	Fisher	KEC	Norcent	Samsux	Totevision
Crown	Funai	Kenwood	NTC	Sansui	TVS
Curtis Mathes	Futuretech	KLH	Onwa	Sanyo	Vector Research
CXC	GE	KTV	Optimus	Scotch	Victor
Daewoo	Gibraltar	LG	Orion	Scott	Vidikron
Craig	GoldStar	Lloyd's	Panasonic	Sears	Vidtech
Crosley	Grunpy	LXI	Penney	Sharp	Wards
Bradford	Haier	Magnasonic	Philco	Sheng Chia	White Westinghouse
Broksonic	Hallmark	Magnavox	Philips	Simpson	Yamaha
Candle	Harley Davidson	Magnin	Pilot	Sony	Zenith
Carnivale	Harman/Kardon	Marantz	Poptonica	Soundesign	