


Remote control

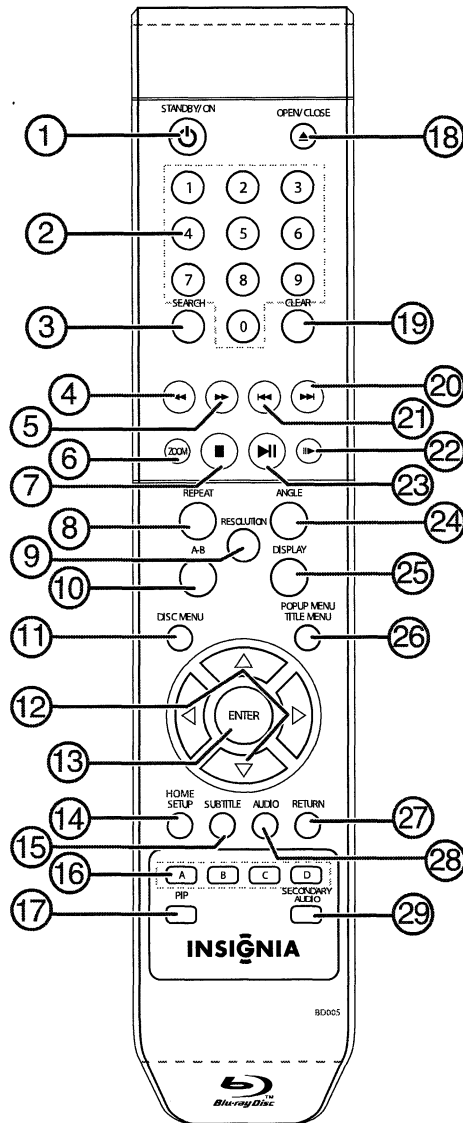

#	Item	Description
①	⏻ STANDBY/ON	Press to turn on your player or put your player in standby mode. When your player is in standby mode, power is still entering your player. To disconnect power, unplug the power cord.
②	Number buttons	In playback mode, press SEARCH , then press the number buttons to enter a title, chapter, track, or time. In menu mode, press to enter numbers.
③	SEARCH	Press to search for a title, chapter, or specific time on a disc. For more information, see "Searching for a title, chapter, or elapsed time" on page 24.
④	⏮ (fast reverse)	Press to fast reverse. Each time you press this button, the fast-reverse speed decreases from Fast x 2, Fast x 4, Fast x 8, Fast x 16, Fast x 32, Fast x 64, Fast x 128. Press ⏸ (play/pause) to resume normal playback.

#	Item	Description
5	▶▶ (fast forward)	Press to fast forward. Each time you press this button, the fast-forward speed increases from Fast x 2, Fast x 4, Fast x 8, Fast x 16, Fast x 32, Fast x 64, Fast x 128. Press ▶ (play/pause) to resume normal playback.
6	ZOOM	Press to zoom in on a video. Each time you press this button, the magnification level changes. This button is only used for DVD discs or picture files. Press to stop playback.
7	■ (stop)	To resume playback, press ◀▶ ▲ or ▼ to select DVD/BD-ROM, then press ENTER. Depending on the disc, playback starts where it stopped or at the beginning of the disc. If you press ■ (stop) twice, playback stops completely. To start playback again, press ▶ (play/pause).
8	REPEAT	Press to repeat the current title, chapter, track, or repeat all. For more information, see "Repeating a title, chapter, or CD track" on page 25.
9	RESOLUTION	Press to select the video resolution. For more information, see "Selecting the video output resolution" on page 31.
10	A-B	Press to create a playback loop. For more information, see "Creating a playback loop on a DVD or audio CD" on page 25.
11	DISC MENU	During DVD playback, press to open the DVD root menu where you can select DVD playback options. (This button is valid for DVDs that have a multi-layer menu.)
12	◀▶ ▲ ▼	If a disc menu opens when playing a Blu-ray Disc or DVD, press to select a menu option. During media file browsing, press to select a file on the popup menu. When a menu is open, press to select an option, then press ENTER.
13	ENTER	Press to confirm selection in a menu.
14	HOME/SETUP	Press to stop disc playback and enter home screen. When accessing connected applications such as Cinemanow, Pandora, or Netflix, pressing HOME/SETUP will stop the application and return you to home screen.
15	SUBTITLE	Press to select a subtitle language or to turn subtitles off.
16	A (red), B (green), C (yellow), D (blue)	When playing a Blu-ray Disc that has a Java™ application, press to control playback. For more information, see the documentation that came with the Blu-ray Disc.
17	PIP	Press to turn PIP (picture-in-picture) mode on or off. For more information, see "Using PIP (picture-in-picture) mode" on page 25.
18	▲ OPEN/CLOSE	Press to open or close the disc tray.
19	CLEAR	Press to clear an input error.
20	▶▶ (next)	Press to go to the next title, chapter, or track.
21	◀◀ (previous)	Press to go to the previous title, chapter, or track.