

REMOTE CONTROL

Table 1: Remote Control Functions

Button	Function	DVD	VCD	TUNER	CD/MP3/USB
Name	Ref#	DVD	VCD	TUNER	CD/MP3/USB
MENU	1	Enter the main menu of the disc	Turn on/off PBC when playing VCD		
TITLE	2	Enter the title menu of the disc			
MUTE	3	Toggle on/off audio output	Toggle on/off audio output	Toggle on/off audio output	Toggle on/off audio output
POWER/⏻	4	Turn the power on/off	Turn the power on/off	Turn the power on/off	Turn the power on/off
AUDIO	5	Change the audio language for disc playback			
REPT A-B	6	Setup to repeat playback from time frame A to time frame B	Setup to repeat playback from time frame A to time frame B		
REPT	7	Repeat playback of current chapter	Repeat playback of current chapter		Repeat playback of current track
SRC	8	Select playing mode	Select playing mode	Select playing mode	Select playing mode
SUBTITLE	9	Language selection for subtitle			
DISP/CLEAR	10	Display playback information Delete entry or move backwards to correct error in Direct Access mode	Display playback information Delete entry or move backwards to correct error in Direct Access mode		
PRESET ▲	11			Navigate the preset station list	
PRESET ▼	12			Navigate the preset station list	
ANGLE	13	Play back disc in different angle for a scene	Play back Picture CD with different angle of picture displayed		
▶▶	14	Fast forward the disc content	Fast forward the disc content	Changes station up one increment	Fast forward the disc content
VOL -	15	Decrease volume	Decrease volume	Decrease volume	Decrease volume
VOL +	16	Increase volume	Increase volume	Increase volume	Increase volume
◀◀	17	Select the previous chapter for playback	Select the previous chapter for playback	Search an available radio station by decreasing tuning frequency	Select the previous track for playback
▶/	18	Pause playback/start playback	Pause playback/start playback		Pause playback/start playback
▶▶	19	Select the next chapter for playback	Select the next chapter for playback	Search an available radio station by increasing tuning frequency	Select the next track for playback
⏻	20	Stop playback/end call	Stop playback/end call	End call	Stop playback/end call
GOTO/↵	21	Go to specific time frame and playback/dial call	Go to specific time frame and playback/dial call	Enter radio station directly	Dial call when Bluetooth connected

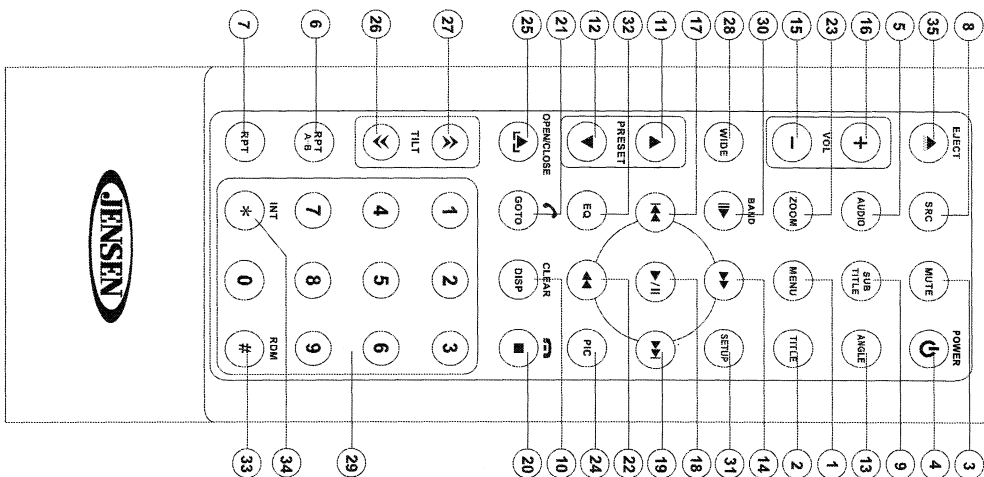 


Table 1: Remote Control Functions

Button		Function			
Name	Ref#	DVD	VCD	TUNER	CD/MP3/USB
◀▶	22	Slow playback/fast rewind playback	Slow playback/fast rewind playback	Changes station down one increment	
ZOOM	23	Zoom In/out on an image	Zoom In/out on an image		
PIC	24	Display set-up parameters	Display set-up parameters		
OPEN/CLOSE	25	Open/close the TFT monitor	Open/close the TFT monitor	Open/close the TFT monitor	Open/close the TFT monitor
∨	26	Decrease monitor tilt angle	Decrease monitor tilt angle	Decrease monitor tilt angle	Decrease monitor tilt angle
∧	27	Increase monitor tilt angle	Increase monitor tilt angle	Increase monitor tilt angle	Increase monitor tilt angle
WIDE	28	Select display mode: FULL or NORMAL	Selects display mode: FULL or NORMAL		
1, 2, 3, 4, 5, 6, 7, 8, 9, 0 (Numeric keypad)	29	Directly access chapter		1-6 selects preset for current band	Directly access track
⏮/BAND	30	Slow motion playback	Slow motion playback	Change AM/FM band	
SETUP	31	Display Setup menu	Display Setup menu	Display Setup menu	Display Setup menu
EQ	32	Modify equalizer settings	Modify equalizer settings	Modify equalizer settings	Modify equalizer settings
RDM	33	Play all chapters in random order			Play all tracks in random order
INT	34				Play the first ten seconds of each track
EJECT	35	Eject disc	Eject disc	Eject disc	Eject disc

OPERATING INSTRUCTIONS

Power On / Off

Press the **⊕/SRC** button (9) on the unit (or the **⊕** button (4) on the remote control) to turn the unit on. The buttons on the front of the unit light up and the current mode status appears in the LCD (7). You can also turn on the unit by pressing the **OPEN** button (1) and opening the TFT screen.

Press and hold the **⊕** button to power off the unit. The monitor is drawn back into the main compartment.

Audible Beep Confirmation

An audible beep tone confirms each function selection. The Beep tone can be disabled through the Setup menu.

 
Mute

Press the **MUTE** button (3) on the remote control to mute the volume from the unit. Press the **MUTE** button again to restore the volume. If the monitor is closed, "MUTE" is displayed on the LCD. When the monitor is open, the yellow volume icon appears on the TFT with an "X" through it. Adjusting the volume or using any of the audio setup features cancels the mute function.

Playing Source Selection

Press the **SRC** button (9) on the front panel or the **SRC** button (8) on the remote to change between available playing sources. The playing mode is displayed on the TFT and LCD screens.

External peripheral devices can be connected to this unit via the rear RCA inputs or the **AV INPUT** connector (10) on the front of the unit. Select "AUX-IN1" to access an auxiliary device connected to the **AV INPUT** on the front panel. Select "AUX IN2" mode to access a device connected to the rear **AUX IN** connectors.

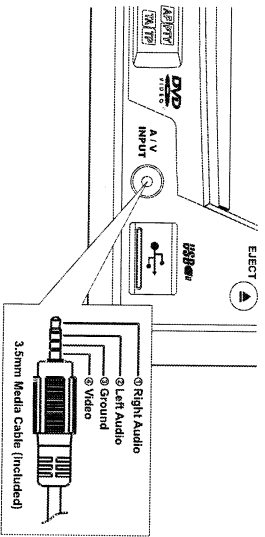

Connect the external device to the 3.5mm Media Cable and then plug the cable into the **AV INPUT** connector (10) on the front of the radio. Select "AUX IN1" mode to access an auxiliary device connected to the **AV INPUT** on the front of the radio. You cannot directly control external devices connected to the **AV INPUT**.

Volume Adjustment

To increase or decrease the volume level, turn the rotary encoder (5) on the front panel or press the **VOL+/VOL-** buttons (15, 16) on remote control. The volume ranges from "0" to "40". The LCD or TFT screen displays the volume level for 3 seconds.

Steering Wheel Control (SWC)

The VM9213 is compatible with the PAC (Pacific Accessory Corporation) steering wheel control adapter SWI-PS. A 3.5mm female connector (labeled "SWC Interface") on the back of the head unit allows connectivity to the PAC adapter. Please refer to the instructions included with the PAC adapter for detailed installation information.

SWC Functions

The following controls are available for most vehicles:

1. Vol Down
2. Vol Up
3. Mute
4. Seek Down / Previous Track / ** Preset Down
5. Seek Up / Next Track / ** Preset Up
6. SRC (Source)
7. ** Select
8. ** Select
9. Band

** If additional steering wheel control buttons are available on the vehicle, function 7 / 8 may be assigned the "Select" feature. This feature / function may not be available on some vehicles.

 
Select Operation

If "Select" (function 7 or 8) is held down and function 4 is pressed momentarily, Preset Up will be selected. If "Select" (function 7 or 8) is held down and function 5 is pressed momentarily, Preset Down will be selected.

Audio Control Menu

The Audio Control feature allows you to easily adjust your audio system to meet the acoustical characteristics of your vehicle, which vary depending on the type of vehicle and its

measurements. Proper setting of the Fader and Balance boosts the effects of the cabin equalizer. Press the **EQ** button on the touch screen to display the audio menu.

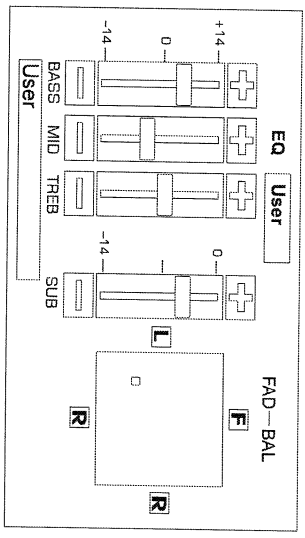

To adjust an audio feature:

1. Use the touchscreen, or press the (**>>**) / (**<<**) buttons (14, 22) on the remote control to highlight the audio feature to be adjusted.
2. Touch the screen to select the highlighted option.
3. Touch the +/- buttons on the screen or press the [**<<**, **>>**], **>>**, or **<<** buttons (17, 19, 14, 22) on the remote control to adjust the selected feature to the desired setting.


Table 4: Audio Adjustments

EQ	Audio Function	Adjustable Range
	User	
	Rock	
	Hip Hop	
	Dance	
	Latin	
	Rave	
	Urban	
	Acoustic	
BASS		-14 to +14
MID		-14 to +14
TREB		-14 to +14
SUB		-14 to 0
BAL-FAD		Grid

NOTE: The EQ mode will automatically change to "USER" when individual audio functions are adjusted.

The Audio menu will automatically exit after a few seconds of inactivity. To exit quickly, touch the top left corner of the screen or press and hold the **AUDIO** button (5).

System Reset

To correct a system halt or other illegal operation, use the tip of a pen  [RESET] Button to press the reset button (12) located on the front bottom-right corner of the unit. After a system reset, the unit restores all factory default settings.

NOTE: If the unit is reset while a DVD is playing, the DVD resumes play once the reset is complete.
