


Remote Control

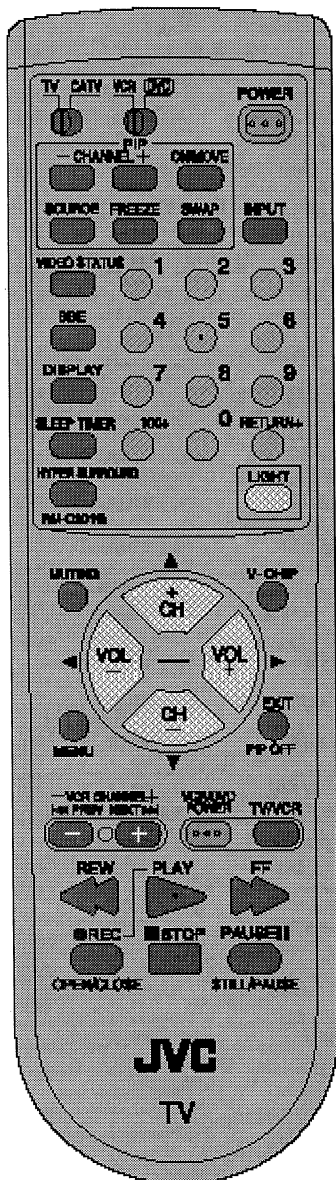

Remote Control Basics

- Before you can operate the remote control, you must first install the batteries (included). See "Changing the Batteries" at the bottom of this page for instructions. (For an illustration, please see page 7.)
- Press the POWER button to turn the television on or off.
- Make sure the TV/CATV switch is set to TV. Move the switch to CATV only if you need to operate a cable box.
- Slide the VCR/DVD selector switch to VCR to control a VCR, slide to DVD to control a DVD player. Please see pages 18 to 20 for instructions on programming your remote control to operate a Cable box, VCR or DVD player.
- Press the CH+ and CH- buttons to scan through the channels. Tap the CH+ or CH- button to move through the channels one channel at a time.
- To move rapidly through the channels using JVC's **Hyperscan** feature, press and hold CH+ or CH-. The channels will zip by at a rate of five channels per second.
- Press VOL+ or VOL- to raise or lower the volume. An indicator bar will appear onscreen to show you the television volume level.
- The CH+/- and VOL+/- buttons are also used to navigate JVC's onscreen menu system.
- You can directly access specific channels using the 10-key pad.
- For more information on remote control button features, see pages 40 to 45. For information on using the onscreen menus, see page 21.

Notes: Remote control model RM-C301G is shown at the left. A different model remote control may have come with your television.

Changing the Batteries

Push down on the remote's back cover and slide towards the bottom to remove it.

Insert two AA batteries (supplied), carefully noting the "+" and "-" markings on the batteries and on the remote control. To avoid a potential short circuit, insert the "-" end first. Be sure to use only size AA batteries.

When batteries are installed, slide the cover back into place (until it clicks into position).

- If the remote control acts erratically, replace the batteries. Typical battery life is six months to one year. We recommend using alkaline batteries for longer battery life.

When you change the batteries, try to complete the task within three minutes. If you take longer than three minutes, the remote control codes for your VCR, DVD, and/or Cable Box may have to be reset (see page 18-20).

Remote Programming

Setting the CATV, VCR and DVD Codes

You can program your remote to operate your cable box, satellite receiver, VCR or DVD player by using the instructions and codes listed below. If the equipment does not respond to any of the codes listed below or to the code search function, use the remote control supplied by the manufacturer.

Cable Box or Satellite codes

The remote control is programmed with CATV and/or Satellite codes for power on, power off, channel up, channel down, and 10 key operation.

- 1) Find the CATV/Satellite brand from the list of codes shown below.
 - 2) Slide the 2-way selector switch to "CATV".
 - 3) Press and hold down the DISPLAY button.
 - 4) With the DISPLAY button held down, enter the first code number listed using the 10 key pad.
 - 5) Release the DISPLAY button.
 - 6) Confirm the operation of the Cable Box/Satellite receiver.
- If your CATV or Satellite box does not respond to the first code, try the others listed. If it does not respond to any code, try the Search Codes Function, on page 50.

Cable Box	CODES	Cable Box	CODES	Digital Satellite Systems	CODES
ABC	024	Fuuser	032	EchoStar	100, 113, 114
Archer	032, 025	RCA	081, 070	Express VU	100, 113
Cableview	061, 032	Realistic	032	G.E.	108
Citizen	022, 061	Regal	068, 064, 040, 041, 042, 045, 088	G.I.	108
Curtis	068, 068	Regency	034	Gradiente	112
Diamond	024, 032, 026	Rembrandt	037, 032, 051, 038	Hitachi	104, 111
Eagle	029	Samsung	061	HNS (Hughes)	104
Eastern	034	Selenia Atlanta	067, 058, 058	Panasonic	105
GC Brand	032, 061	SLMark	061, 047	Philips	102, 103
Gemini	022, 048	Sprucer	061, 068	Primestar	108
General Instrument	085, 024, 025, 028, 027, 020, 021, 022, 067, 023	Stargate	032, 061	Proscan	106, 109, 110
Hamlin	040, 041, 042, 046, 058, 084	Telesatcom	087	RCA	106, 109, 110
Hitachi	048, 024	Teleview	047, 061	Sony	107
Jerrold	085, 024, 025, 028, 027, 020, 021, 022, 067, 023	Tecscan	044	Star Choice	104, 108
Macom	048, 060, 061, 064	Tocom	035, 036, 066	Tohiba	101
Magnavox	033	Tohiba	060	Uniden	102, 103
Memorex	090	Unika	032, 026		
Movietime	032, 061	Universal	022, 032		
Oak	038, 037, 048	Videoway	062		
Panasonic	055, 058, 060, 071	Visionstar	028, 030		
Paragon	063	Zenith	063, 046		
Philips	028, 028, 030, 062, 063, 031, 068	Zenith/Drake Satellite	046		
Pioneer	047, 062				
Pulsar	061, 032				

Remote Programming

VCR codes

The remote control is programmed with VCR codes for power on, power off, play, stop, fast-forward, rewind, pause, record, channel up, and channel down operation.

- 1) Find the VCR brand from the list of codes shown below.
 - 2) Slide the first 2-way selector switch to "TV" and the other 2-way selector switch to "VCR".
 - 3) Press and hold down the DISPLAY button.
 - 4) With the DISPLAY button held down, enter the first code number listed with the 10 key pad.
 - 5) Release the DISPLAY button.
 - 6) Confirm the operation of the VCR.
- If your VCR does not respond to the first code, try the others listed. If it does not respond to any code, try the Search Codes Function, on page 50.
 - Some manufacturer's VCR's may not respond to the TV/VCR button, even if other buttons work properly.
 - To record, hold down the REC button on the remote and press PLAY.

VCRs	CODES	VCRs	CODES	VCRs	CODES
Admiral	035	Murantz	003, 004, 005	Samsung	037, 060, 062, 033, 039
Aiwa	027, 032, 095	Marta	064	Santron	039
Alcal	029, 072, 073, 074	Memorex	024, 057	Sansui	003, 028, 020, 062
Audio Dynamic	003, 005	MGA	038, 040, 047, 048, 041, 042	Sanyo	063, 067, 081, 071
Bell & Howell	063, 071	Minolta	068, 045, 083	Scott	059, 060, 062, 087, 039, 040, 047, 048, 039, 020
Brotaonic	020, 026, 094	Mitsubishi	036, 040, 047, 048, 041, 042, 078, 080	Sears	093, 094, 096, 098, 088, 000, 001
Canon	023, 025	Multitech	047, 027, 082	Shinton	075
CCE	043	NEC	003, 004, 005, 000	Sharp	035, 038, 080, 088
Citizen	064	Olympic	024, 023	Signature 2000	027, 036
Cnalg	063, 029, 084	Optimus	028, 021, 036, 064	Singer	075
Curtis Mathes	045, 024, 027, 093	Orion	028, 020	Sony	028, 029, 030, 053, 054, 055
Daewoo	043, 059, 024, 082	Panasonic	023, 024, 021, 022	SV 2000	027
DBX	003, 004, 005	Penney	024, 058, 048, 063, 003, 004, 005, 088	Sylvania	031, 023, 024, 027
Dimensia	045, 093	Pentax	068, 006, 045, 083	Symphonic	027, 081
Emerson	043, 026, 077, 081, 025, 042, 020, 076	Philco	031, 024, 027, 023, 026, 020, 043	Tashiro	064
Fisher	083, 086, 067, 065, 071, 081	Phillips	031, 023, 024, 088	Tekung	003, 004, 006
Funai	027, 028, 020, 000	Pioneer	023	Teac	003, 004, 027, 005
G.E.	033, 045, 024	Proscan	048, 068, 023, 024, 031, 046, 059, 080, 083, 087, 083	Technics	021, 022, 023, 024
Go Video	087, 051, 049, 050, 089	Quasar	021, 022, 023, 024	Teknika	024, 027, 070
Goldstar	064	Radio Shack	033, 024, 063, 086, 067, 040, 027	Tohiba	068, 048, 078
Gradiente	083, 084, 081, 000, 001	RCA	033, 048, 068, 023, 024, 031, 045, 059, 060, 083, 094, 085, 087, 093	Vector Research	005
Hitachi	023, 045, 068, 027, 061, 083	Realistic	024, 063, 036, 067, 040, 027	Wards	036, 038, 067, 044, 064
Instant Replay	024, 023			Yamaha	089, 003, 004, 005
Jensen	008			Zenith	044, 082, 084, 084
JVC	000, 001, 002, 003, 004, 005				
Kenwood	003, 004, 064, 005				
LXI	027, 064, 058, 085, 086, 083, 087				
Magnavox	031, 023, 024, 068				

Remote Programming

DVD codes

The remote control is programmed with DVD codes for power on, power off, play, stop, fast-forward, rewind, previous chapter, next chapter, tray open/close, and still/pause operation.

- 1) Find the DVD player brand from the list of codes shown below.
 - 2) Slide the first 2-way selector switch to "TV" and the other 2-way selector switch to "DVD".
 - 3) Press and hold down the DISPLAY button.
 - 4) With the DISPLAY button held down, enter the first code number listed with the 10 key pad.
 - 5) Release the DISPLAY button.
 - 6) Confirm the operation of the DVD player.
- If your DVD player does not respond to the first code, try the others listed. If it does not respond to any code, try the Search Codes Function, on page 50.
 - After you program your remote, some DVD buttons may not work properly. If some buttons do not work properly, use the remote control which came with your DVD player.

DVD Player	CODES	DVD Player	CODES
Alwa	043	Haite	033
Apex	040	RCA	021, 028
Danon	020, 037	Sampo	034
Hitachi	030, 031	Samsung	030
JVC	000	Sharp	028
Kenwood	035	Sylvania	038
Konka	039	Sony	024, 045, 046, 047
Mitsubishi	025	Technics	020
Onkyo	041	Toshiba	023
Ortron	044	Wave	042
Panasonic	020	Yamaha	020
Philips	023, 036	Zenith	027, 032
Pioneer	022		