



GETTING STARTED

REMOTE CONTROL


RM-C755



Changing and Inserting Batteries.

Use only size AA batteries.

- 1** Push down on the triangle on the remote's back cover, and slide the cover off to remove it.
- 2** Insert the two supplied AA batteries, carefully noting the "+" and "-" markings on the batteries and remote control. **To avoid a short circuit, insert "-" end first.**
- 3** Snap the cover back into place.

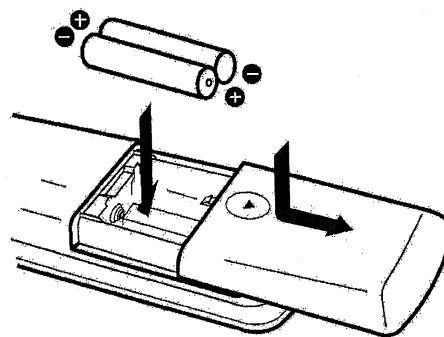

NOTES:

- Once the batteries are in the remote and you have confirmed that the remote is working, you must program the remote to operate your particular brand of VCR and/or cable box.
- If it takes you more than 3 minutes to change the batteries, you might have to reprogram the CATV and/or VCR codes.
- If the remote control acts erratically, replace the batteries. Battery life is usually one year.
- We recommend the use of alkaline batteries for longer battery life.

GETTING STARTED



POWER

- Make sure that the TV/CATV switch is set to TV. Switch to CATV only to operate a cable box.
- Press the POWER button on the remote control or the TV front panel. The On Timer lamp will glow red.
- The first time you turn on the TV, the "Plug In Menu" will appear. You should turn to the Plug In Menu section (page 15) now to learn more about this menu.
- To turn the power off, press the POWER button again. The On Timer lamp will go out.
- When the TV is off, the On-Timer lamp remains on while the On/Off Timer function is active, but at a reduced brightness.

ADJUSTING VOLUME

- 1** Press the VOLUME button on the front panel or remote control. The volume sidebar will appear.



- 2** Press the MUTING button to instantly turn the volume off. To restore the volume to the previous level, press the MUTING button again.

CHANGING CHANNELS

- 1** 10 key direct access.

Press the numbers on the remote's 10 key pad. For single-digit channel numbers press 0 then the number. For channels above 100, press the 100+ button plus the 2-digit number.

- 2** CHANNEL +/- button.

- **To scan the channels one at a time**, press the remote's CHANNEL +/- button and release.

- 3** Return.

Press and release the RETURN+ button to return to the previous channel. First, select a channel (game #1). Then, select another channel (game #2) with the 10 key pad and push the RETURN+ button to flip directly back and forth.

- 4** Return+ .

Press and hold down the RETURN+ button for three seconds. The message, "RETURN CHANNEL PROGRAMMED !" will appear and you can scan as you wish. Press RETURN+ again and you will go back to the Return+ channel.

To cancel a Return+ channel, press and hold down the RETURN+ button for another three seconds and the message, "RETURN CHANNEL CANCELLED !" appears.

- Pressing a number key or turning the set off will also cancel a Return+ channel.



GETTING STARTED

SETTING THE CATV & VCR CODES

Many CATV & VCR brands have more than one code. If the first code in the list does not work, try the other codes listed. If your CATV box or your VCR do not respond to any of the codes listed for the manufacturer, use the remote control for that accessory to operate it.

CABLE BOX OR SATELLITE SETUP

- 1) Determine the correct code from the "CATV & Satellite Codes" chart below.
- 2) Slide the 2-Way Mode Selector Switch to CATV.
- 3) Press and hold down the DISPLAY button.
- 4) Enter the 2-digit code with the 10 key pad while continuing to hold down the DISPLAY button.
- 5) Release the DISPLAY button.
- 6) Confirm the operation of the cable box.

CATV & Satellite Codes

CABLE BOXES	CODES	CABLE BOXES	CODES	CABLE BOXES	CODES
ABC	35 01 11 02 33 91 55	Memorex	07	Starquest	04
Antronix	44	Movietime	32 39 29 42 44 88 40 38 60	Sylvania	19 35
Archer	29 01 44 88 91 63 42 30 52 76	NSC	38 40 32	Tandy	62
Belcor	82	Oak	11 46 10 12 47	Teknika	74 54
Cablestar	82	Panasonic	16 17	Telecaption	92 77
Cabletenna	29 01 44 88 91 76	Paragon	07	Television	32 40 42 78 94
Cableview	63 44 42 30 52 88	Philips	13 20 23 24 96 30 84	Texscan	18 19 35
Century	63 44 42 30 52 88	Pioneer	05 06 78	Tocom	33 34 48 49 01 42 91 73
Citizen	63 44 42 30 52 88	Popular Mechanics	59	Toshiba	36 07 66 70
Colour Voice	23	Pulsar	63 44 42 30 52 88 07	Tusa	04
Comtronice	42 21	Quest	01 02 03 04 34 55 83 85 91 93	TV86	40
Contec	10		95	Uniden Satellite	65 69
Curtis	08 09 56 61 87 90	RCA	16 17	Unika	29 01 44 88 91 63 42 30 52
Diamond	29 01 44 88 91 76	Realistic	51 44 88 53		76
Drake	37 67 71	Recoton	59 63 44 42 30 52 88	United Artists	11
Eagle	13 22 58 62 20 40 26 21	Regal	14 41	United Cable	01
Eastern	28 99	Regency	28 99	Universal	42 43 44 52 63 88 82
Focus	59	Rembrandt	32 39 29 42 44 88 02 60	Videoway	07 50 23 45
GC Electronics	63 44 42 30 52 88 82	Runco	07	Vid Tech	64
Gemini	04 85 32 30	Salora	68 72	Vidter	64
General Electric	57	Samsung	16 17 06 32 40 42 78 94	Viewstar	13 22 58 62 20 40 26 21
General Instruments	01 02 03 04 34 55 83 85 91 93	Scientific Atlanta	08 09 56 61 87 90	Zenith	07 50 23 75
	95	Sheritech	27	Zentek	59
Gerrard	63 44 42 30 52 88	Signal	13 22 58 62 20 40 26 04 42 32		
Hamlin	14 15 28 41 99		42 78 94 21	DIGITAL	
Hitachi	31 79 02 80	Signature	02	SATELLITE	
Hytex	11	SL Marx	32 40 42 78 94 63 44 30 52 88	SYSTEMS	
Jerrold	01 02 03 04 34 55 83 85 91 93	Sprucer	16 17		
	95	Standard Components	32 39 29 42 44 88 18 60		
Macom	31 79 80	Starcom	01 04 55	RCA	97
Magnavox	25 26 13	Stargate	32 40 42 78 94 04 63 44 30 52	Sony	98
Matsushita	16 17		88		

VCR SETUP

The remote is pre-programmed with the VCR codes for power on and power off, play, stop, record, pause, fast-forward, rewind, and channel up and down.

- 1) Determine the correct code from the "VCR Codes" chart (page 13).
- 2) Slide the 2-Way Mode Selector Switch to TV.
- 3) Press and hold down the DISPLAY button.
- 4) Enter the 2-digit code with the 10 key pad while continuing to hold down the DISPLAY button.
- 5) Release the DISPLAY button.
- 6) Confirm the operation of the VCR.

When you record a channel, press the PLAY button while continuing to hold down the REC button.

GETTING STARTED



VCR Codes

VCRs	CODES	VCRs	CODES	VCRs	CODES
Admiral	84 40 07 31 06 65	Headquarter	16	Pulsar	34 35 46 47 18 24 03 94 52 15
Aiko	46	Hi-Q	08		27 89 32 90 91 83
Aiwa	31 35 94 27 03 87 34 28 26 29	Hitachi	39 02 25 89 94 28 64 70 81	Quarter	16
Akai	32 33 20 26 28 64 21	Homeline	89 15 31 36 46 47 79 94	Quartz	16
American High	01 05	Images	90 91	Quasar	65 01 02 05 06 41 42 71 04 18
Asha	03	ITT	28 15 26 29 53 55 59		03 56 92 72
Astra	03 94 52 15 27 89 32 90 91 83	J.C. Penney	65 02 15 27 03 05 94	Radix	15
Audio Dynamics	26 27 88 97 64	Jensen	26 29 28 64	Radio Shack	31 15
Audiovox	15	JVC	00 85 28 15 26 29 64 53 55 59	Randex	89 15 31 36 46 47 79 94
Aventura	31 35 94 27 03 87 34 28 26 29	Kenwood	26 28 29 27 64 16	RCA	98 03 02 05 06 56 57 72 34 04
Beaumarck	98 03 02 05 06 56 57 72 34 04	KLH	35 43		99 70 75
	99 75	Kodak	01 05 15	Realistic	65 07 15 16 08 31 32 01 05 84
Belcor	34 35 46 47	Lloyd	31 35 94 27 03 87 34 28 26 29		40 09 03
Bell & Howell	16 08 76	Lloyd's	11	Ricoh	30
Broksonic	10 12 35 87 77 78	Logik	31 35 94 27 03 87 34 28 26 29	Runco	24
Calix	15	LXI	15	Sanky	18 24 07 84
Candle	03 94 52 15 27 89 32 90 91 83	Magnasonic	34 35 46 47 03 94 52 15 27 89	Sansui	43 31 26 28 64 29 03
Canon	65 01 02 05 06 41 42 71 04 18		32 90 91 83	Samsung	03 94 52 15 27 89 32 90 91 25
	03 56 92 22	Magnavox	65 18 05 25 31 01 24 06 56 35		83
Capehart	34 35 46 47		94 27 03 87 34 28 26 29	Sanyo	16 08 76 03
Carrera	03 94 52 15 27 89 32 90 91 83	Magnin	03 94 52 15 27 89 32 90 91 83	Scott	10 11 19 74 87 25 12 14
Carver	18 24	Marantz	27 21 01 05 18 24	Sears	02 15 16 09 08 61 34 19 65 31
CCE	35 46	Marta	89 15 31 36 46 47 79 94		67 01 05 39 51 73 70 00 85
Citizen	89 15 31 36 46 47 79 94	Matsui	03 94 52 15 27 89 32 90 91 26	Semitsu	34 35 46 47
Classic	89 15 31 36 46 47 79 94		31 16 29 83	Sharp	84 40 07 31 06 65
Colortyne	27 21 01	Matsushita	01 05	Shintom	35 43
Colt	35	Megasonic	02 15 16 09 08 61 34 19 65 31	Shogun	03 94 52 15 27 89 32 90 91 83
Craig	03 08 15 43 31 26 28		67	Signature	65 01 02 05 06 41 42 71 04 18
Crosley	31 35 94 27 03 87 34 28 26 29	MEI	01 05		03 56 92 84 40 07 31 06
Curtis	34 35 46 47 03 94 52 15 27 89	Memorex	65 15 08 31 07 16 01 05 18 84	Singer	35 43
	32 90 91 83		03 24	Sony	23 30 38 50 49 16 17 01 05 48
Curtis Mathes	65 01 02 05 06 41 42 71 04 18	MGA	19 92 20 21 67 80 95 45	Soundesign	31 35 94 27 03 87 34 28 26 29
	03 56 92	MGN	03 94 52 15 27 89 32 90 91 83	STS	02 39
Cyberex	03 94 52 15 27 89 32 90 91 83	MGN Technology	03	Sylvania	65 96 18 05 31 25 01 19 45
Daewoo	34 35 46 47 25	Midland	98 03 02 05 06 56 57 72 34 04	Symphonic	31 35 94 27 03 87 34 28 26 29
Daytron	34 35 46 47		99 75	Syqmax	34 35 46 47
DBX	26 27 88 97 64	Minolta	39 02 25 89 94 70	Tatung	26 29 28 64
Denon	98 03 02 05 06 56 57 72 34 04	Mitsubishi	19 92 20 21 67 80 95 29 45	Teac	31 35 94 27 03 87 34 28 26 29
	99 75	Mont. Ward	65 01 02 05 06 41 42 71 04 18		64
Dumont	03 94 52 15 27 89 32 90 91 83		03 56 92 84 40 07 31 06	Technics	65 01 02 05 06 41 42 71 04 18
Dynatech	31 35 94 27 03 87 34 28 26 29	Motorola	01 05 07 84		03 56 92
Dynatone	89 15 31 36 46 47 79 94	MTC	31 35 94 27 03 87 34 28 26 29	Technivox	89 15 31 36 46 47 79 94
Electrohome	19 92 20 21 67 80 95 15 45		52 15 89 32 90 91 83	Teknika	31 36 65 01 15 05
Electron	98 03 02 05 06 56 57 72 34 04	Multitech	31 35 94 27 03 87 34 28 26 29	Telefunken	11 31
	99 75	NAD	54	Thomas	31 35 94 27 03 87 34 28 26 29
Electroponic	28 15 26 29 53 55 59	National	98 03 02 05 06 56 57 72 34 04	TMK	11 31 03
Emerex	38		99 75	Toshiba	02 25 73 19 45 09
Emerson	10 87 11 12 13 14 08 15 86 37	NEC	26 27 88 97 28 64 29	Totevision	03 94 52 15 27 89 32 90 91 83
	62 19 25 65 58 78 77 31 45 20	Nikko	89 15 31 36 46 47 79 94	Unitech	03 94 52 15 27 89 32 90 91 83
	21 60 66	Noblex	03	Vector	25
Encore	65 01 02 05 06 41 42 71 04 18	Olympus	65 01 02 05 06 41 42 71 04 18	Vector Research	27 21 01
	03 56 92		03 56 92	Video Concepts	27 21 01 25 20
Everex	39 02 25 89 94 70	Optimus	54 15 07 84	Videosonic	26 27 31 16 29 03
Fisher	08 09 51 16	Optonica	84 40 07 31 06 65	Wards	31 01 05 02 08 07 84 40 35 06
Fuji	01 05 23	Panasonic	65 01 02 05 06 41 42 71 04 18		56 25 03
Funai	31 35 94 27 03 87 34 28 26 29		03 56 92 72 82	XR-1000	31 35 94 27 03 87 34 28 26 29
Garrard	31	Paxsonic	03 94 52 15 27 89 32 90 91 83		01 05
GE	65 03 04 05 06 56 01 57	Penney	01 05 15 27 02 39 51 03	Yamaha	26 27 31 16 29 28 64
Goldstar	89 15 31 36 46 47 79 94 27	Pentax	65 02 39 70	Zenith	93 23 24 30 18
Go Video	90 91	Philco	65 01 02 05 06 41 42 71 04 18		
Gradiente	31		03 56 92 34 35 46 47		
Granada	65 01 02 05 06 41 42 71 04 18	Philips	65 96 18 05 31 25 01 40		
	03 56 92	Pilot	89 15 31 36 46 47 79 94		
Grundig	01	Pioneer	39 02 25 89 94 54 44 29 70		
Harley Davidson	31 35 94 27 03 87 34 28 26 29	Portland	34 35 46 47		
Harmon/Kardon	21 19 27 20	Proscan	98 03 02 05 06 56 57 72 34 04		
Harvard	35 43		99 75		
Harwood	35	Protec	35		