 
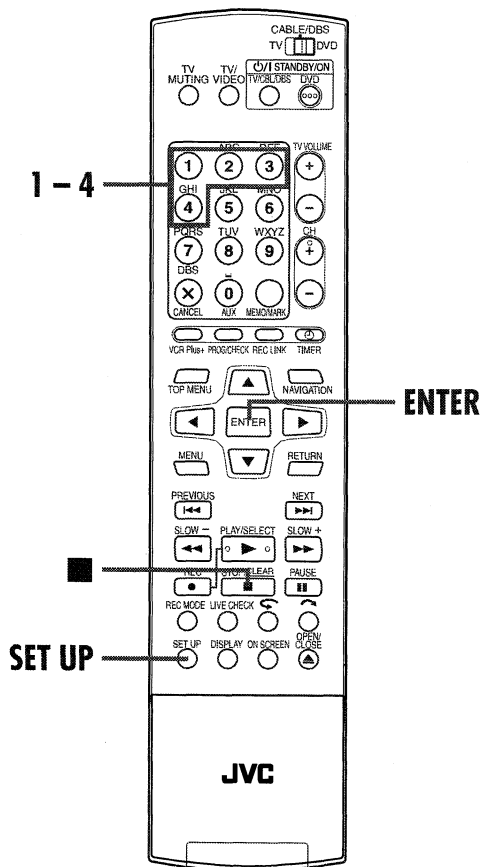 


# Remote Control Functions

## Remote 1/2/3/4 Code Switching

The Remote is capable of controlling four JVC video units independently. Each of the units can respond to one of four codes (1, 2, 3 or 4). The Remote is preset to send 3 code signals because your unit is initially set to respond to 3 code signals. You can easily modify your unit to respond to 1, 2 or 4 code signals.

Slide the TV/CABLE/DBS/DVD switch to DVD.

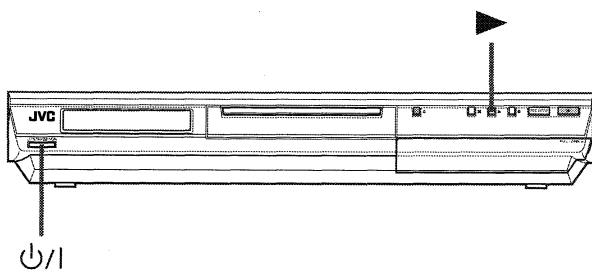

### On the Remote

Keep pressing SET UP down during steps 1 - 2.

#### 1 Change the remote control code.

Press the number key "1" for 1, "2" for 2, "3" for 3 or "4" for 4.

#### 2 Set the remote control code.

Press ENTER to set the code.

### On the unit

#### 3 Turn off the unit.

Press  $\odot$ /I on the unit.

#### 4 Display the code.

Press  $\blacktriangleright$  on the unit for over 5 seconds while the unit is turned off.

- The code currently set appears on the front display panel.

#### 5 Change the unit's code.

Press  $\blacksquare$  on the Remote.

- The code currently set on the Remote blinks on the front display panel for approximately 5 seconds, and is applied to the unit.

### NOTE:

 
When "POWER SAVE" is set to "ON" (pg. 99), it is not possible to change the remote code.

## TV Multi-Brand Remote Control

Your Remote can operate the basic functions of your TV set. In addition to JVC TVs, other manufacturer's TVs can also be controlled.

**Before performing the following steps:**

- Turn off the TV using its Remote.
- Slide the TV/CABLE/DBS/DVD switch to TV.

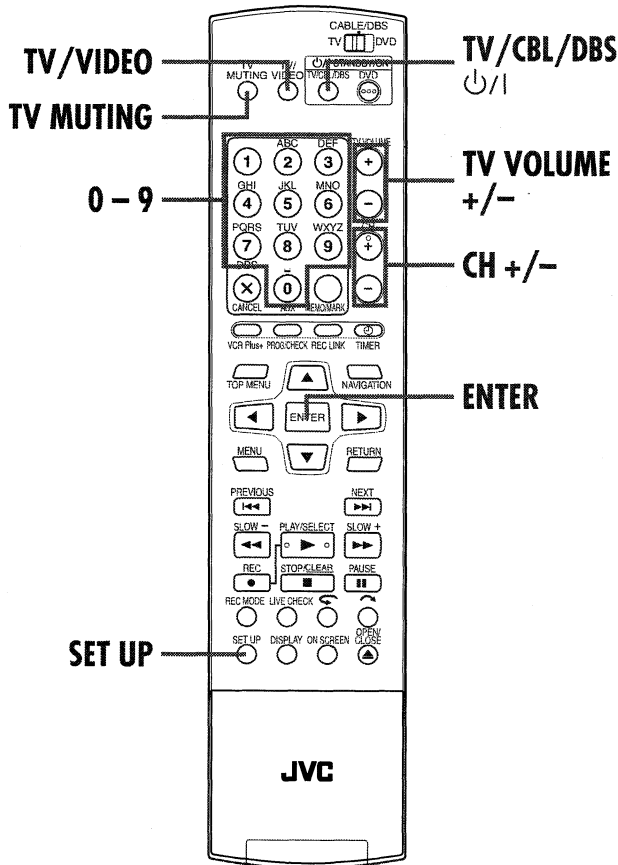

### 1 Set the TV brand code.

Keep pressing **SET UP** down during step 1. Enter your TV's brand code using the **number keys**, then press **ENTER**.

Press **TV/CBL/DBS** on the unit's Remote to turn on the TV and try operations (step 2).

- Once you have set the Remote to operate the TV, you do not have to repeat this step until you replace your Remote's batteries.
- Some brands of TVs have more than one code. If the TV does not function with one code, try entering another.

### 2 Operate the TV.

Press the corresponding button: **TV/CBL/DBS**, **TV/VIDEO**, **CH +/-**, **TV VOLUME +/-**, **TV MUTING**, **number keys**.

- For some brands of TVs, you must press **ENTER** after having pressed the **number keys**.

BRAND NAME	CODE
JVC	01, 03
HITACHI	10
MAGNAVOX	02
MITSUBISHI	03
PANASONIC	04, 11
RCA	05
SHARP	06
SONY	07
SAMSUNG	12
SANYO	13
SEARS	13
TOSHIBA	08
ZENITH	09

 
**IMPORTANT:**

Although the supplied Remote unit is compatible with JVC televisions, as well as many other models, it may not work with your TV or in some instances, may have limited function capability.

## Cable Box Multi-Brand Remote Control

Your Remote can operate the basic functions of your cable box set. In addition to JVC cable boxes, other manufacturer's cable boxes can also be controlled.

Slide the TV/CABLE/DBS/DVD switch to CABLE/DBS.

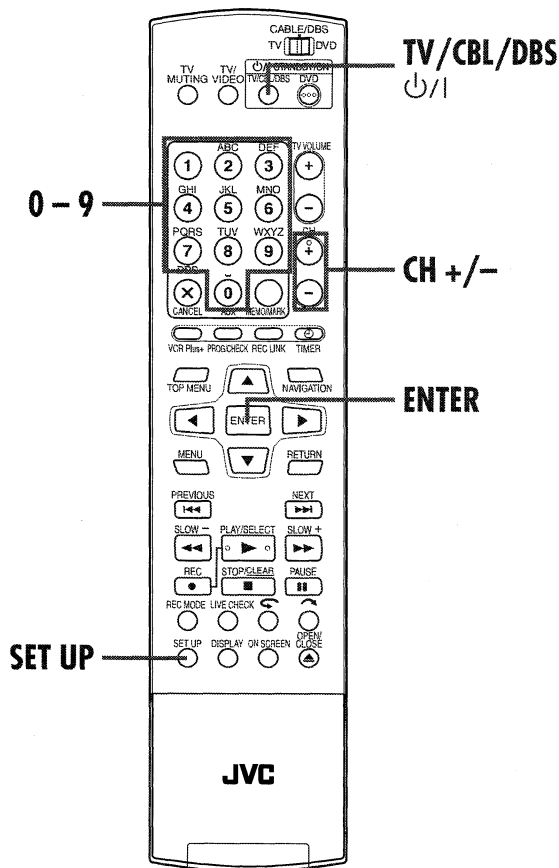

### IMPORTANT:

It may not work with your cable box, or in some instances, may have limited function capability.

### NOTES:

- You must set the cable box brand for your Remote and the cable box brand for your Controller (pg. 29) separately. The list of cable box brands that can be controlled by your Remote is different from the list of brands that can be controlled by your controller.
- It's not possible to set the Remote for both your cable box and a DBS receiver at the same time. You can only set the Remote to operate one of these units at a time.

## 1 Set the cable box brand code.

Keep pressing **SET UP** down during step 1.

Enter your cable box's brand code using the **number keys**, then press **ENTER**.

Press **TV/CBL/DBS**  $\updownarrow$  on the unit's Remote to turn on the cable box and try operations (step 2).

- Once you have set the Remote to operate the cable box, you do not have to repeat this step until you replace your Remote's batteries.
- Some brands of cable box have more than one code. If the cable box does not function with one code, try entering another.

## 2 Operate the cable box.

Press the corresponding button: **TV/CBL/DBS**  $\updownarrow$ , **CH +/-**, **number keys**.

 
- For some brands of cable box, you must press **ENTER** after having pressed the **number keys**.
- The **number keys** may not function with some cable boxes.

BRAND NAME	CODE
ARCHER	01, 05, 17
CABLETENNA	01, 17
CABLEVIEW	15, 16, 17, 21, 25
CITIZEN	15, 16, 17, 21, 25
CURTIS	02
DIAMOND	01, 17
GC BRAND	15, 16, 17, 21, 25
GEMINI	15
GENERAL INSTRUMENTS	01, 04, 06, 11, 12, 15, 28
HAMLIN	10, 18, 23
JASCO	15
JERROLD	01, 04, 06, 11, 12, 15, 28
NOVAVISION	02
OAK	07
PANASONIC	13, 14
PULSER	15, 16, 17, 21, 25
RCA	13, 14
REGAL	10, 18, 23
REMBRANDT	01, 16, 17
SAMSUNG	05, 16, 24
SCIENTIFIC ATLANTA	02
SIGMA	07
SL MARX	05, 16, 17, 24, 25
SPRUCER	13, 14
STARGATE	05, 15, 16, 17, 21, 24, 25
TELEVIEW	05, 16, 24
TOCOM	01, 04, 16
UNIKA	01, 17
UNIVERSAL	16, 17, 25
VIDEOWAY	03, 09, 22
ZENITH	03, 09, 22

# DBS Receiver Multi-Brand Remote Control

Your Remote can operate the basic functions of your DBS (Direct Broadcast Satellite) receiver set. In addition to JVC DBS receivers, other manufacturer's DBS receivers can also be controlled.

Slide the TV/CABLE/DBS/DVD switch to CABLE/DBS.

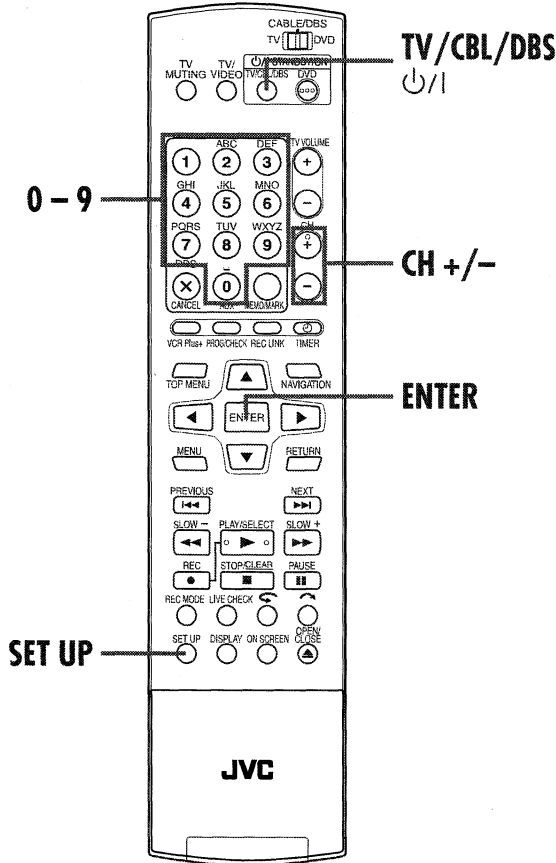

## IMPORTANT:

Although the supplied Remote unit is compatible with JVC DBS receivers, as well as many other models, it may not work with your DBS receiver, or in some instances, may have limited function capability.

## 1 Set the DBS receiver brand code.

Keep pressing **SET UP** down during step 1. Enter your DBS receiver's brand code using the **number keys**, then press **ENTER**.

Press **TV/CBL/DBS**  $\updownarrow$  on the unit's Remote to turn on the DBS receiver and try operations (see step 2).

- Once you have set the Remote to operate the DBS receiver, you do not have to repeat this step until you replace your Remote's batteries.
- Some brands of DBS receiver have more than one code. If the DBS receiver does not function with one code, try entering another.

## 2 Operate the DBS receiver.

Press the corresponding button: **TV/CBL/DBS**  $\updownarrow$ , **CH +/-**, **number keys**.

- For some brands of DBS receiver, you must press **ENTER** after having pressed the **number keys**.
- The **number keys** may not function with some DBS receivers.

BRAND NAME	CODE
JVC (DISH Network)	51
ECHOSTAR (DISH Network)	51
SONY (DSS)	41
RCA (DSS)	40

## NOTES:

- You must set the DBS receiver brand for your Remote and the DBS receiver brand for your Controller (see pg. 32) separately.
- It's not possible to operate a DBS receiver that is not equipped with a remote sensor.
- It's not possible to set the Remote for both your DBS receiver and a cable box at the same time. You can only set the Remote to operate one of these units at a time.