
Remote Control

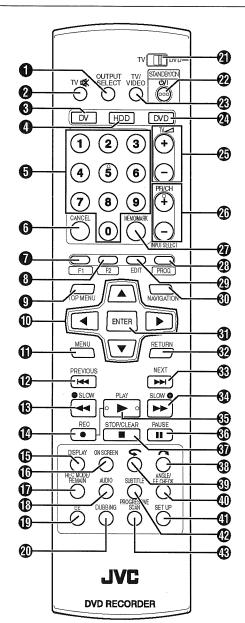

Output Select Button (OUTPUT SELECT)

 Switches between "ALL" (DV/HDD/DVD output) and "DV" (DV output) when pressed. When "ALL" is selected, DV, HDD or DVD signals are output from the [DV/HDD/DVD OUTPUT] connectors on the rear panel depending on the deck selected. When "DV" is selected, DV signals are output regardless of the deck selected.

ATTENTION:

If "DV" is selected, "DV" and "OUTPUT DV" blink on the front display panel and TV screen respectively when EDIT or NAVIGATION is pressed while in the HDD/DVD deck mode. Press OUTPUT SELECT to stop the blinking and return to the previous display.

- 2 TV Muting Button (TV ☼) □ pg. 56
- DV Button* ☞ pg. 33
- This button will not function during navigation mode or set up mode.
- This button will not function during navigation mode or set up mode.
- Number Keys ☞ pg. 56Cancel Button (CANCEL) ☞ pg. 30
- 7 F1 Button 🖙 pg. 65
- F2 Button ☞ pg. 62, 63
- ① Top Menu Button (TOP MENU) ☞ pg. 23

- Selection Keys (△▽◁▷) □ pg. 19
- Menu Button (MENU) ™ pg. 23
- P Reverse Skip Button (◄◄) ™ pg. 23, 32, 36 Previous Button (PREVIOUS) pg. 26
- Reverse Search Button (◄◄) (HDD & DVD deck)
 pg. 23,
 - Rewind Button (◄◄) (DV deck) r pg. 33 Reverse Slow Button (SLOW -) r pg. 23
- (1) Record Button ()
- Display Button (DISPLAY) 🖙 pg. 25, 34
- (f) On-Screen Button (ON SCREEN) ₪ pg. 16, 27
- Recording Mode Button (REC MODE) is pg. 49 Remain Button (REMAIN) r pg. 25
- ⊕ Audio Button (AUDIO)
 □ pg. 26
- (EE Button 🖙 pg. 36
- 1 Dubbing Button (DUBBING) pg. 45
- TV/DVD switch pg. 20, 56
- STANDBY/ON Button (₺/I)
- ▼ TV/VIDEO Button
 ▼ pg. 56
- DVD Button*
 pg. 22
 - This button will not function during navigation mode or set up mode.
- TV Volume Buttons (TV∠1+/-) r
 pg. 56
- TV Program Buttons (PR/CH +/-) pg. 56
 - Input Select Button (INPUT SELECT +/-) pg. 49, 51
- Memo Button (MEMO) ™ pg. 39, 42 Mark Button (MARK) is pg. 25
- Programming Button (PROG): Not use on this unit.
- ② Edit Button (EDIT)
 □ pg. 39
- Mavigation Button (NAVIGATION) pg. 38, 44
- ⑥ Enter Button (ENTER) ™ pg. 20
- Return Button (RETURN) pg. 26, 28
- Forward Skip Button (►►)
 pg. 23, 36
 - Next Button (NEXT) pg. 26
- Forward Search Button (►►) (HDD & DVD deck)
 pg. 23,
 - Fast Forward Button (▶▶) (DV deck) r pg. 33 Forward Slow Button (SLOW +) Pg. 23
- ⊕ Play Button (►)
 □ pg. 22, 31
- Pause Button (II) □ pg. 22, 31
- ⑥ Stop Button (■) 🖙 pg. 22, 31
- Clear Button (CLEAR) r pg. 30
- Skip Search Button (→) □ pg. 24, 31, 34, 36
- (a) Instant Replay Button ((a)) pg pg. 24, 32, 34, 36, 37 (a) Angle Button (ANGLE) (DVD deck only) pg. 25 EE Check Button (EE CHECK) pg. 36
- 4 Set Up Button (SET UP) pg. 20, 58
- Subtitle Button (SUBTITLE)
 pg. 26
- Progressive Scan Button (PROGRESSIVE SCAN)
 pg. 65

How To Use

Before use, insert two AA size batteries into the remote control with the polarity (⊕ and ⊝) matched correctly as indicated on the battery compartment or on the lid.

The remote control can operate most of your unit's functions, as well as basic functions of TV sets of JVC and other brands. (ne pg. 56)

- Point the remote control toward the receiving window.
- The maximum operating distance of the remote control is

NOTE:


If the remote control doesn't work properly, remove its batteries, wait a short time, replace the batteries and then try again.

Remote Control Functions

Remote Control 1/2/3/4 Code Switching

The remote control is capable of controlling four JVC video units independently. Each of the units can respond to one of the four codes (1, 2, 3 or 4). The remote control is preset to send code 3 signals because your unit is initially set to respond to code 3 signals. You can easily modify your unit to respond to code 1, 2 or 4 signals.

Slide the TV/DVD switch to DVD.

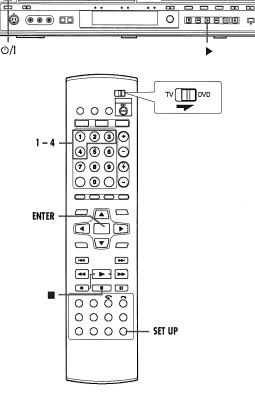

- Keep pressing SET UP down during step 1.
- Press the number key "1" for 1, "2" for 2, "3" for 3 or "4" for 4 to change the remote control code, then press ENTER.
- Press ()/I on the unit to turn off the unit.
- Press ▶ on the unit for over 5 seconds while the unit is turned off. The current code appears on the front display panel.
- Press on the remote control to change the unit's code. The new code blinks on the front display panel for approximately 5 seconds, and is applied to the unit.


TV Multi-Brand Remote Control

Your remote control can operate the basic functions of your TV set. In addition to JVC TVs, other manufacturer's TVs can also be controlled.

- Turn off the TV using its remote control.
- Slide the TV/DVD switch to TV.

IMPORTANT:

Although the provided remote control unit is compatible with JVC televisions, as well as many other models, it may not work with your TV, or in some instances, may have limited function capability.

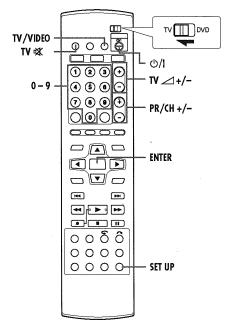

- Keep pressing SET UP down during step 1.
- I Enter your TV's brand code using the **number keys**, then press ENTER.
- **2** Press ७/I on the unit's remote control to turn on the TV and try operations (see step 3).
- Once you have set the remote control to operate the TV, you do not have to repeat this step until you replace your remote control's batteries.
- Some brands of TVs have more than one code. If the TV does not function with one code, try entering another.
- 3 Press the corresponding buttons to operate the TV: ①/I, TV/ VIDEO, PR/CH +/-, TV ✓ +/-, TV ⋘, number keys.
- For some brands of TVs, you must press ENTER after having pressed the number keys.