


Remote control unit

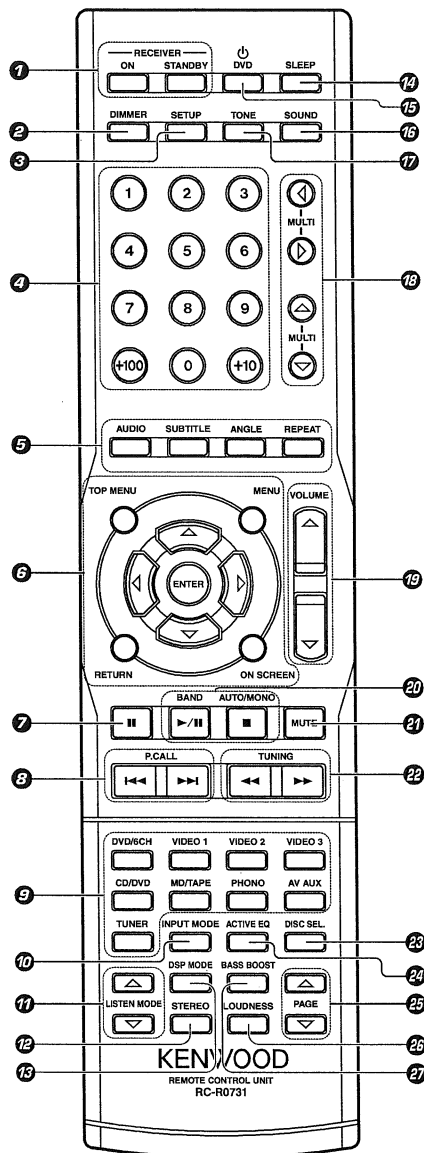

- 1 **RECEIVER ON key** Use to turn the receiver on. - [17]
- 2 **RECEIVER STANDBY key** Use to turn the receiver off (standby). - [17]
- 3 **DIMMER key** Use to adjust the brightness of the display. - [30]
- 4 **NUMERIC keys** Use to select preset radio stations. - [25]
- 5 **AUDIO key** Use to operate the DVD player.
- 6 **SUBTITLE key** Use to select the speakers' settings etc. - [17]
- 7 **ANGLE key** Use to operate the DVD player.
- 8 **REPEAT key** Use to operate the DVD player.
- 9 **TOP MENU key** Use to operate the DVD player.
- 10 **MENU key** Use to operate the DVD player.
- 11 **RETURN key** Use to operate the DVD player.
- 12 **ON SCREEN key** Use to operate the DVD player.
- 13 **ENTER key** Use to operate the DVD player.
- 14 **II key** Use to operate the DVD player.
- 15 **P.CALL <</> keys** Use for selection adjustments during sound, set up and preset channel functions. - [25]
- 16 **Input Selector keys (DVD/6CH, VIDEO 1, VIDEO 2, VIDEO 3, CD/DVD, MD/TAPE, PHONO, AV AUX, TUNER)** Use to select the input sources. - [20]
- 17 **INPUT MODE key** Use to select the Input mode. - [8]
- 18 **LISTEN MODE Δ/▽ keys** Use to select the listening mode. - [28]
- 19 **STEREO key** Use to switch the listen mode to STEREO. - [28]
- 20 **DSP MODE key** Use to select any of the DSP mode. - [30]
- 21 **SLEEP key** Use to set the Sleep timer. - [30]
- 22 **DVD key** Use to turn the DVD player on or off. - [30]
- 23 **SOUND key** Use to adjust the sound quality and the ambience effects. - [21]
- 24 **TONE key** Use to switch the status of TONE control. - [21]
- 25 **MULTI Δ/▽ keys** Use to control a variety of settings. - [20]
- 26 **VOLUME Δ/▽ keys** Use to adjust the receiver's volume. - [24]
- 27 **BAND key** Use to select the broadcast band. - [24]
- 28 **▶/II key** Use to operate the DVD player.
- 29 **AUTO/MONO key** Use to select the auto or manual tuning mode. - [28]
- 30 **■ key** Use to operate the DVD player.
- 31 **MUTE key** Use to temporarily mute the sound. - [21]
- 32 **TUNING <</> keys** Use to operate the tuner mode. - [24]
- 33 **DISC SEL. key** Use to operate the DVD player. - [21]
- 34 **ACTIVE EQ key** Use to select ACTIVE EQ's setting. - [21]
- 35 **PAGE Δ/▽ keys** Use to operate the DVD player. - [21]
- 36 **LOUDNESS key** Use to switch the status of LOUDNESS. - [21]
- 37 **BASS BOOST key** Use to select the maximum adjustment setting for the low frequency range. - [21]

• Some keys can be used for operating KENWOOD DVD players by pressing CD/DVD or DVD/6CH key beforehand. - [33]

Basic remote control operations for KENWOOD DVD players

DVD player operation keys

The remote control of this unit can control KENWOOD DVD players directly without using the remote control supplied with the DVD player.

DV-4900, DV-4070B, DV-2070, DV-203, DVF-9010, DVF-K7010, DVF-5010, DVF-R9030, DVF-R7030, DVF-3530, DV-402, DV-5900, DV-5700, DVF-R9050, DVF-J6050, DV-505, DV-503, DV-502, DVF-3550, DVF-3050, DVF-R4050, DVF-605, DV-6050, DVF-R5060, DVF-3060, DVF-3060K, DV-705, DVF-R5070, DVF-3070, DVF-3080, DVF-N7080, DVF-8100, DVF-3200 and DVF-3250.

How to operate the DVD player with the remote control

1. Press the **DVD** key to turn the DVD player on.
2. Press the **CD/DVD** key or **DVD/6CH** key to operate the functions of the DVD player.
3. Press each key for DVD player operation. Refer to the instruction manual of the DVD players for the detailed operating instructions.
(To return to the receiver operation mode, press other **Input Selector** key.)

DVD player operation keys

You can perform these basic operations using the keys described below when connected to KENWOOD DVD player.

