


Remote control unit

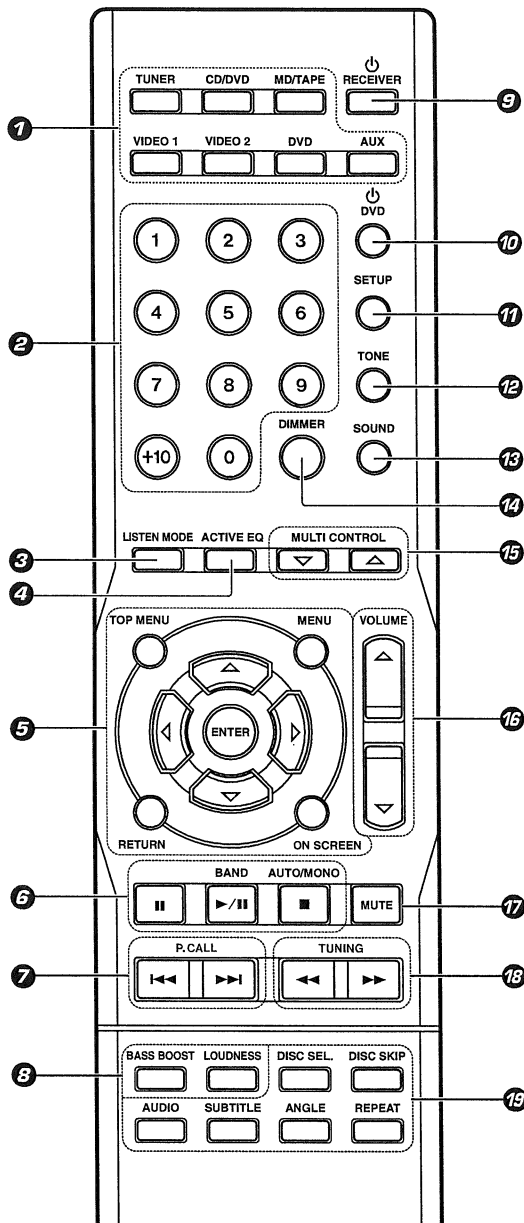

- ① **Input Selector keys (TUNER, CD/DVD, MD/TAPE, VIDEO 1, VIDEO 2, DVD, AUX)** - [18]  
Use to select the input sources.
- ② **Numeric keys** - [22]  
Use to call up preset stations.
- ③ **LISTEN MODE key** - [26]  
Use to operate the DVD player.
- ④ **ACTIVE EQ key** - [20]  
Use to select the listening mode.
- ⑤ **Δ/∇/◀/▶ keys** - [27]  
**ENTER key** - [29]  
**TOP MENU key** - [29]  
**MENU key** - [29]  
**RETURN key** - [29]  
**ON SCREEN key** - [29]  
Use to operate the DVD player.
- ⑥ **|| key** - [29]  
Use to operate the DVD player.
- ⑦ **BAND key** - [21]  
Use to select the broadcast band.
- ⑧ **▶/|| key** - [29]  
Use to operate the DVD player.
- ⑨ **AUTO/MONO key** - [21]  
Use to select the auto tuning mode.
- ⑩ **■ key** - [29]  
Use to operate the DVD player.
- ⑪ **P. CALL ◀◀/▶▶ keys** - [22]  
Use to call preset channel.
- ⑫ **BASS BOOST key** - [19]  
Use to operate the DVD player.
- ⑬ **LOUDNESS key** - [20]  
Use to select the maximum adjustment setting for the low frequency range.
- ⑭ **⏻ RECEIVER key** - [16]  
Use to switch the status of LOUDNESS.
- ⑮ **⏻ DVD key** - [29]  
Use to turn this model on and off.
- ⑯ **⏻ SETUP key** - [16]  
Use to turn the DVD player on and off.
- ⑰ **⏻ TONE key** - [19]  
Use to select the speakers' settings etc.
- ⑱ **⏻ TONE key** - [19]  
Use to operate the DVD player.
- ⑲ **⏻ SOUND key** - [27]  
Use to switch the status of TONE control.
- ⑳ **⏻ DIMMER key** - [27]  
Use to adjust the sound quality and ambience effects.
- ㉑ **⏻ DIMMER key** - [27]  
Use to adjust the brightness of the display.
- ㉒ **⏻ MULTI CONTROL Δ/∇ keys** - [29]  
Use to operate the DVD player.
- ㉓ **⏻ VOLUME Δ/∇ keys** - [16]  
Use to control a variety of settings.
- ㉔ **⏻ VOLUME Δ/∇ keys** - [19]  
Use to adjust volume setting.
- ㉕ **⏻ MUTE key** - [20]  
Use to temporarily mute the sound.
- ㉖ **⏻ TUNING ◀◀/▶▶ keys** - [21]  
Use to select the radio station.
- ㉗ **⏻ TUNING ◀◀/▶▶ keys** - [29]  
Use to operate the DVD player.
- ㉘ **⏻ DISC SEL. key** - [29]  
**⏻ DISC SKIP key** - [29]  
**⏻ AUDIO key** - [29]  
**⏻ SUBTITLE key** - [29]  
**⏻ ANGLE key** - [29]  
**⏻ REPEAT key** - [29]  
Use to operate the DVD player.

• Some keys can be used for operating KENWOOD DVD players by pressing CD/DVD or DVD/6CH key beforehand. - [29]

# Basic remote control operations for KENWOOD DVD players

## DVD player operation keys

The remote control of this unit can control KENWOOD DVD players directly without using the remote control supplied with the DVD player.

DV-4900, DV-4070B, DV-2070, DV-203, DVF-9010, DVF-K7010, DVF-5010, DVF-R9030, DVF-R7030, DVF-3530, DV-402, DV-5900, DV-5700, DVF-R9050, DVF-J6050, DV-505, DV-503, DV-502, DVF-3550, DVF-3050, DVF-R4050, DVF-605, DV-6050, DVF-R5060, DVF-3060, DVF-3060K, DV-705, DVF-R5070, DVF-3070, DVF-3080, DVF-N7080, DVF-8100, DVF-3200 and DVF-3250.

### How to operate the DVD player with the remote control

1. Press the **DVD** key to turn the DVD player on.
2. Press the **CD/DVD** key or **DVD** key to operate the functions of the DVD player.
3. Press each key for DVD player operation. Refer to the instruction manual of the DVD players for the detailed operating instructions.  
(To return to the receiver operation mode, press other **Input Selector** key.)

### DVD player operation keys

You can perform these basic operations using the keys described below when connected to KENWOOD DVD player.

