


WATCHING TV / CHANNEL CONTROL

REMOTE CONTROL FUNCTIONS

When using the remote control, aim it at the remote control sensor on the TV.

RATIO	Changes the aspect ratio. ▶ p.68
SLEEP	Select the amount of time before your TV turns off automatically. ▶ p.98
POWER	Turns the TV on from standby or off to standby.
INPUT	Rotates through inputs. Also switches the TV on from standby. ▶ p.54
ENERGY SAVING	Adjusts the Energy Saving. ▶ p.78
Q.MENU	Opens the list of Quick Menu options. ▶ p.47
MENU	Displays the main menu or clears all on-screen displays and return to TV viewing.
SIMPLINK	See a list of AV devices connected to TV. When you toggle this button, the SIMPLINK menu appears at the screen. ▶ p.58-59
NUMBER button	
— (DASH)	Used to enter a program number for multiple program channels such as 2-1, 2-2, etc.
LIST	Displays the channel table. ▶ p.51
FLASHBK	Tunes to the last channel viewed.
USB, SIMPLINK Control buttons	<ul style="list-style-type: none"> Controls USB menu (Photo List and Music List.) Controls the SIMPLINK compatible devices.

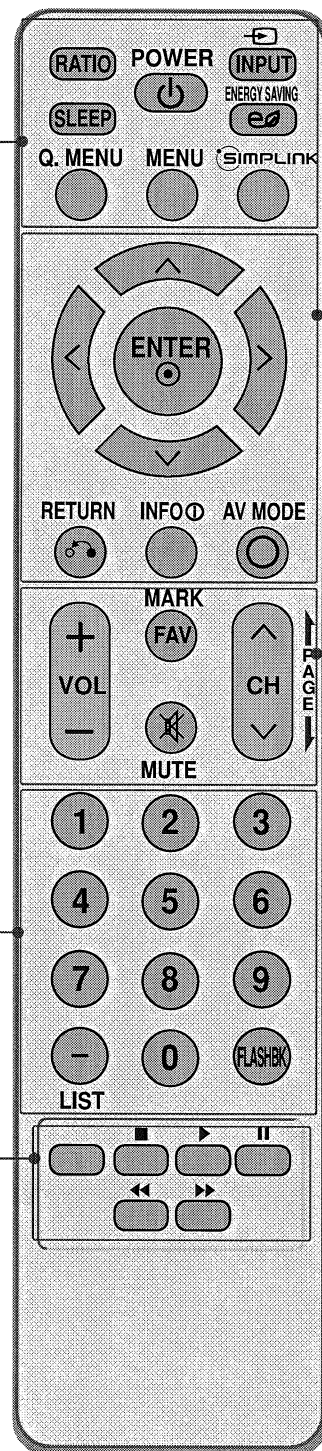

THUMBSTICK
(Up/Down/Left
Right/ENTER)

Navigates the on-screen menus and adjusts the system settings to your preference.

RETURN Allows the user to move return one step in an interactive application or other user interaction function.

INFO Displays channel information at the top of the screen. ► **p.53**

AV MODE Toggles through preset Video and Audio modes. ► **p.56**

**VOLUME UP
/DOWN** Adjusts the volume.

FAV Scroll through the programmed Favorite channels. ► **p.52**


MARK Select the input to apply the Picture Wizard settings. ► **p.71**
Use to mark or unmark a photo/music. ► **p.62, 66**

MUTE Switches the sound on or off. ► **p.44**

**CHANNEL
UP/DOWN** Changes the channel.

**PAGE
UP/DOWN** Moves from one full set of screen information to the next one.

Installing Batteries

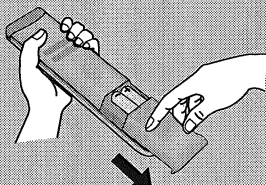

- Open the battery compartment cover on the back side and install the batteries matching correct polarity.
- Install two 1.5V AAA batteries. Don't mix old or used batteries with new ones.
- Close cover.