


WATCHING TV / CHANNEL CONTROL

REMOTE CONTROL FUNCTIONS

When using the remote control, aim it at the remote control sensor on the TV.

PICTURE	Selects the factory preset picture depend on the viewing environment. ► p.52
SOUND	Selects the factory preset sound for type of program. ► p.62
SAP	<ul style="list-style-type: none">• Analog mode: Selects MTS sound (Mono, Stereo, or a SAP) ► p.67• DTV mode: Changes the audio language.
RATIO	Change the aspect ratio. ► p.50
VOLUME UP /DOWN	Increase/decrease the sound level.
FAV	Scroll through the programmed Favorite channels. ► p.41
CC	Select a closed caption. ► p.70
MUTE	Switch the sound on or off. ► p.40
CHANNEL UP/DOWN	Select available channels.
Q.MENU	Select the desired quick menu source. ► p.41
MENU	Displays the main menu.
RETURN	Allows the user to move return one step in an interactive application or other user interaction function.
THUMBSTICK (Up/Down/Left Right/ENTER)	Navigate the on-screen menus and adjust the system settings to your preference.

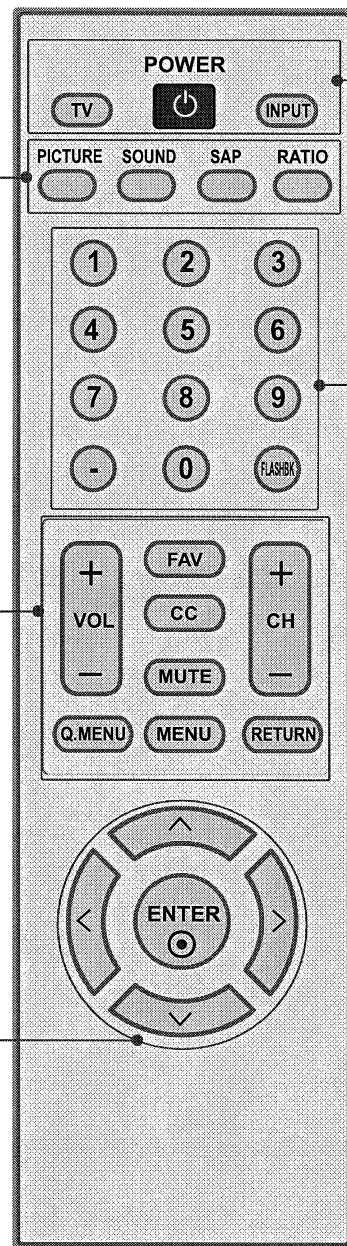

POWER Turns your TV on or off.

TV Returns to the last TV channel.


INPUT External input modes rotate in regular sequence

NUMBER button

— (DASH) Used to enter a program number for multiple program channels such as 2-1, 2-2, etc.

FLASHBK Tune to the last channel viewed.

Installing Batteries

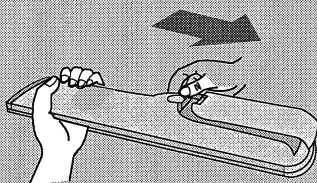

- Open the battery compartment cover on the back side and install the batteries matching correct polarity (+ with +, - with -).
- Install two 1.5V AAA batteries. Don't mix old or used batteries with new ones.
- Close cover.