

Remote Controller

How to Use the Remote Controller

Including the AV receiver, the remote controller can be used to control up to six different components. The remote controller has a specific operating mode for use with each type of component. Modes are selected by using the five REMOTE MODE buttons.

RECEIVER/TAPE Mode

In RECEIVER/TAPE mode, you can control the AV receiver and an Onkyo cassette recorder connected via **RI**.



DVD, CD, MD, CDR & HDD Modes

With these modes, you can control an Onkyo DVD player and CD/MD/CDR/HDD player/recorder.



1 Use the REMOTE MODE buttons to select a mode.

2 Use the buttons supported by that mode to control the component.

RECEIVER mode: see right column

DVD mode: see page 14

CD mode: see page 15

MD/CDR mode: see page 16

HDD mode: see page 17

TAPE mode: see page 18


Note:

Some of the remote controller operations described in this manual may not work as expected with other components.

RECEIVER Mode

RECEIVER mode is used to control the AV receiver.

To set the remote controller to RECEIVER mode, press the [RECEIVER] REMOTE MODE button.

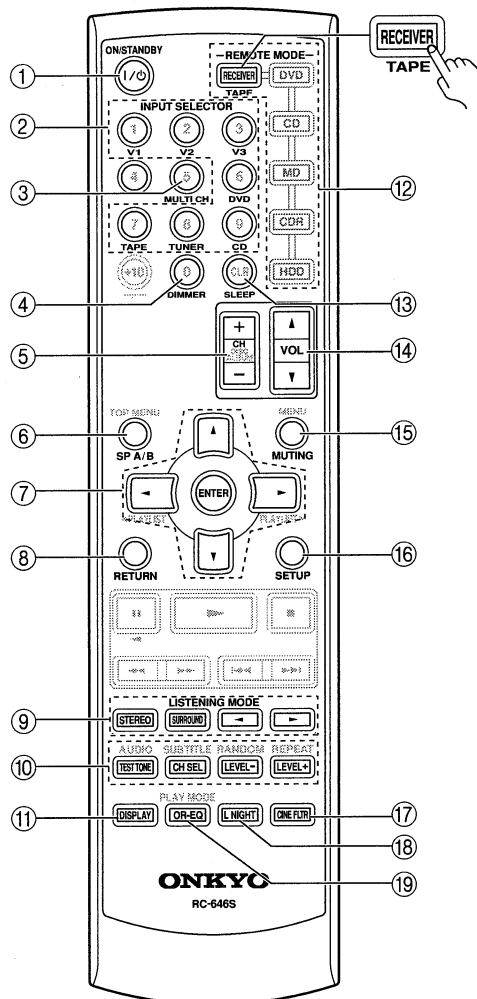

Remote Controller—*Continued*

For detailed information, see the pages in parentheses.

① **ON/STANDBY button (34)**

This button is used to set the AV receiver to On or Standby.

② **INPUT SELECTOR buttons (36)**

These buttons are used to select the input sources.

③ **MULTI CH button (37)**

This button is used to select the multichannel DVD input.

④ **DIMMER button (42)**

This button is used to adjust the display brightness.

⑤ **CH +/- button (39)**

This button is used to select radio presets.

⑥ **SP A/B button (36)**

This button is used to turn speaker sets A and B on or off.

⑦ **Arrow [▲]/[▼]/[◀]/[▶] & ENTER buttons (48, 50–53)**

These buttons are used to select and adjust settings.

⑧ **RETURN button (48, 50, 51, 53)**

This button is used to return to the previous display when changing settings.

⑨ **LISTENING MODE buttons (46)**

These buttons can be used to select listening modes regardless of the currently selected remote controller mode.

STEREO button

This button selects the Stereo listening mode.

SURROUND button

This button selects the Dolby and DTS listening modes.

[◀]/[▶] buttons

These buttons can be used to select any of the available listening modes.

⑩ **TEST TONE, CH SEL, LEVEL- & LEVEL+ buttons (34, 44, 51)**

These buttons are used to adjust the level of each speaker.

⑪ **DISPLAY button (37)**

This button is used to display various information about the currently selected input source.

⑫ **REMOTE MODE buttons (12)**

These buttons are used to select the remote controller modes. When you press a button on the remote controller, the REMOTE MODE button for the currently selected mode lights up.

⑬ **SLEEP button (43)**

This button is used to set the Sleep function.

⑭ **VOL [▲]/[▼] button (36)**

This button can be used to adjust the volume of the AV receiver regardless of the currently selected remote controller mode.

⑮ **MUTING button (43)**

This button is used to mute the AV receiver.

⑯ **SETUP button (48, 50–53)**

This button is used to access various settings.

⑰ **CINE FLTR button (49)**

This button is used to set the CinemaFILTER function.

⑱ **L NIGHT button (49)**

This button is used to set the Late Night function.

 
⑲ **OR-EQ button (43)**

This button is used to turn on the OptiResponse Equalizer, which optimizes performance when the HT-R340 is used with the speakers included in the HTP-340 Home Theater Speaker Package. When the OptiResponse Equalizer is on, you can enjoy a powerful sound with movies or music even at low volume levels.


Remote Controller—Continued

DVD Mode

To select your DVD player as the input source, press:



To set the remote controller to DVD mode, press the [DVD] REMOTE MODE button.

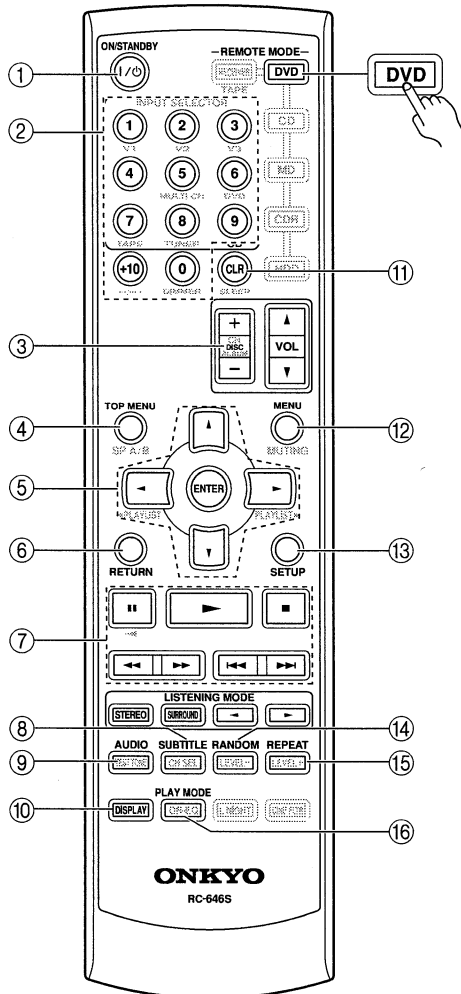

① ON/STANDBY button

This button sets the DVD player to On or Standby.

② Number buttons

These buttons are used to enter title, chapter, and track numbers and to enter times for locating specific points in time.

③ DISC +/- button

This button selects discs on a DVD changer.

④ TOP MENU button

This button is used to select a DVD's top menu.

⑤ Arrow [▲]/[▼]/[◀]/[▶] & ENTER buttons

These buttons are used to navigate DVD menus and the DVD player's onscreen setup menus.

⑥ RETURN button

This button is used to exit the DVD player's onscreen setup menu and to restart menu playback.

⑦ Playback buttons

From left to right: Pause, Play, Stop, Fast Reverse, Fast Forward, Previous, and Next.

⑧ SUBTITLE button

This button is used to select subtitles.

⑨ AUDIO button

This button selects foreign language soundtracks and audio formats (e.g., Dolby Digital or DTS).

⑩ DISPLAY button

This button is used to display information about the current disc, title, chapter, or track on the DVD player's display, including the elapsed time, remaining time, total time, and so on.

⑪ CLR button

This button is used to cancel functions and to clear entered numbers.

⑫ MENU button

This button is used to display a DVD's menu.

⑬ SETUP button

This button is used to access the DVD player's onscreen setup menus.

⑭ RANDOM button

This button is used with the random playback function.

⑮ REPEAT button

This button is used to set the repeat playback functions.

⑯ PLAY MODE button

This button is used to select play modes on a component with selectable play modes.


Remote Controller—Continued

CD Mode

To select your CD player as the input source, press:



To set the remote controller to CD mode, press the [CD] REMOTE MODE button.

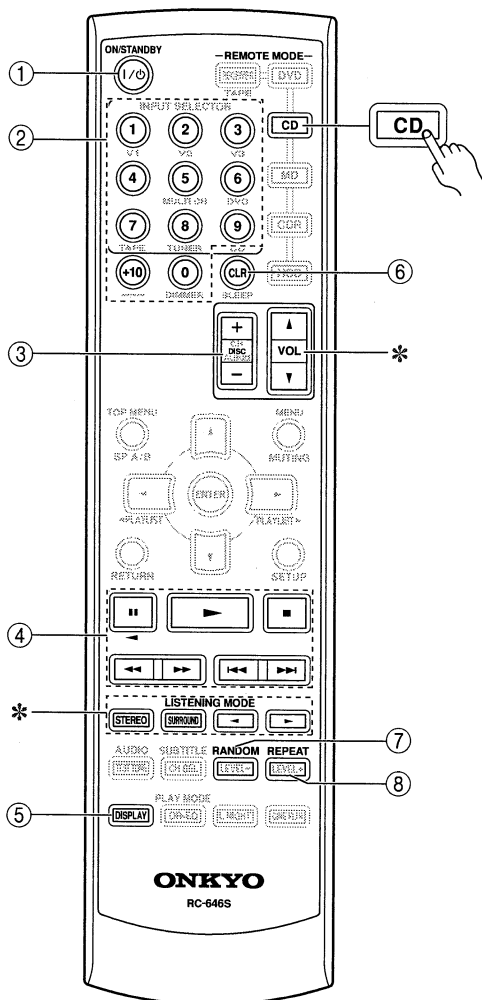

① ON/STANDBY button

This button sets the CD player to On or Standby.

② Number buttons

These buttons are used to enter track numbers and to enter times for locating specific points in time.

③ DISC +/- button

This button selects discs on a CD changer.

④ Playback buttons

From left to right: Pause, Play, Stop, Fast Reverse, Fast Forward, Previous and Next.

⑤ DISPLAY button

This button is used to display information about the current disc or track on the CD player's display, including the elapsed time, remaining time, total time, and so on.

⑥ CLR button

This button is used to cancel functions and to clear entered numbers.

⑦ RANDOM button

This button is used with the random playback function.

⑧ REPEAT button

This button is used to set the repeat playback functions.

* The VOL [▲]/[▼] and LISTENING MODE buttons work the same as for RECEIVER mode.

Remote Controller—Continued


MD, & CDR Mode

To select your MiniDisc or CD recorder as the input source, press:



* You must change the Input Display (see page 35).

To set the remote controller to MD or CDR mode, press the [MD] or [CDR] REMOTE MODE button.

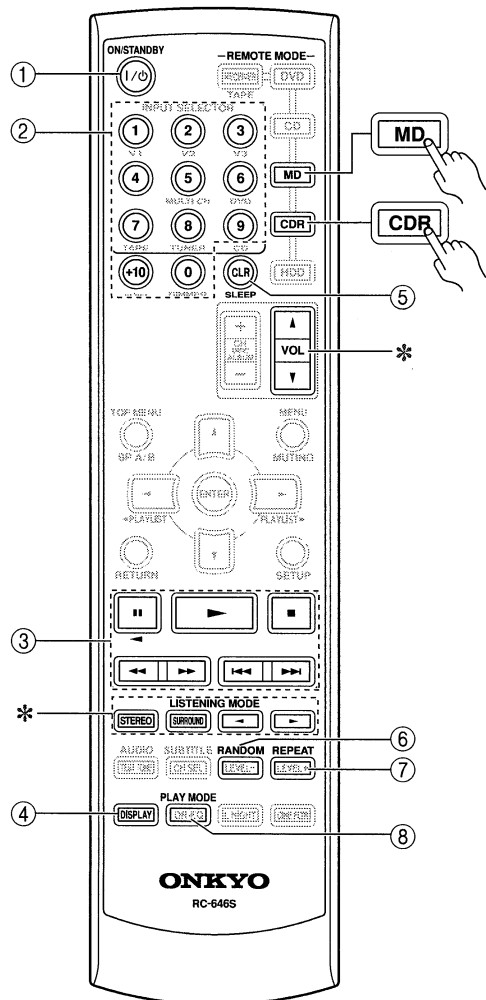

① ON/STANDBY button

This button sets the MD/CD recorder to On or Standby.

② Number buttons

These buttons are used to enter track numbers and to enter times for locating specific points in time. The [+10] button is used to enter numbers above 10.

③ Playback buttons

From left to right: Pause, Play, Stop, Fast Reverse, Fast Forward, Previous and Next.

④ DISPLAY button

This button is used to display information about the current disc or track on the MD/CD recorder's display, including the elapsed time, remaining time, total time, and so on.

⑤ CLR button

This button is used to cancel functions and to clear entered numbers.

⑥ RANDOM button

This button is used with the random playback function.

⑦ REPEAT button

This button is used to set the repeat playback functions.

⑧ PLAY MODE button

This button is used to select play modes on a component with selectable play modes.

* The VOL [▲]/[▼] and LISTENING MODE buttons work the same as for RECEIVER mode.

Remote Controller—Continued


HDD Mode

To select your HDD component as the input source, press:



* You must change the Input Display (see page 35).

To set the remote controller to HDD mode, press the [HDD] REMOTE MODE button.

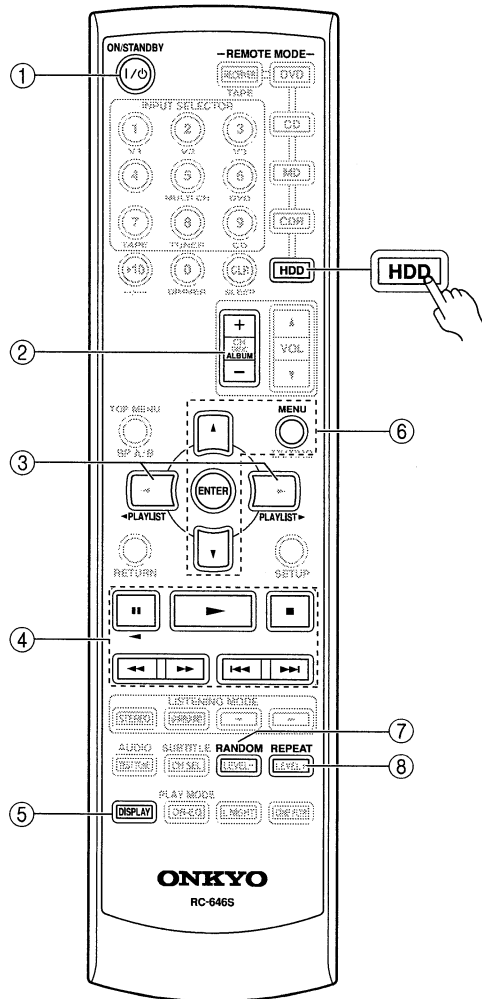

① ON/STANDBY button

This button sets the HDD component to On or Standby.

② ALBUM +/- button

This button selects the next or previous album on an HDD component.

③ PLAYLIST [◀][▶] buttons

These buttons select the previous or next playlist on the HDD component.

④ Playback buttons

From left to right: Pause, Play, Stop, Fast Reverse, Fast Forward, Previous and Next.

⑤ DISPLAY button

This button turns on the HDD component's display for 30 seconds.

⑥ MENU, ENTER, and Up and Down [▲]/[▼] buttons

MENU button: Displays the HDD component's menu.

[▲]/[▼] buttons: Select options on the HDD component's menu.

ENTER button: Confirms the selection on the HDD component's menu.

⑦ RANDOM button

This button is used with the random playback function.

⑧ REPEAT button

This button is used to set the repeat playback functions.

Remote Controller—Continued

TAPE Mode

To select your Cassette deck as the input source, press:



TAPE mode is used to control an Onkyo cassette recorder connected to the AV receiver via **RI**.

To set the remote controller to TAPE mode, press the **[RECEIVER] REMOTE MODE** button.

For twin cassette decks, only deck B can be controlled.

- ① **Play [▶] button**
This button is used to start playback.
- ② **Stop [■] button**
This button is used to stop playback.
- ③ **Reverse Play [◀] button**
This button is used to start reverse playback.
- ④ **Rewind & FF [◀◀]/[▶▶] buttons**
The Rewind [◀◀] button is used to start rewind. The FF [▶▶] button is used to start fast forward.

