

Remote controller

You can use the TX-DS747's remote controller to operate components that are equipped with an Onkyo **RI** (Remote Interactive) connector and are connected to the **RI** connectors on the TX-DS747. Refer to "Connections for remote controller" on page 11 for connection details. The remote controller can also be used to operate other brands of video equipment if the correct device code is programmed into the remote controller. Refer to the separate "Remote Controller Set-up & Code List" for details on how to program a device code.

- Note for customers in areas other than U.S. and Canada: You cannot use the remote controller when the POWER button on the front panel is set to OFF.

General controls:

These buttons are always available regardless of the Device select switch position.

Remote controller operation indicator

Lights up each time you press a button on the remote controller.

POWER button

Switches the TX-DS747 between stand-by status (the STAND-BY indicator is lit) and power-on status.

MUTE button

Temporarily mutes the sound from the speakers, and PRE OUT and PHONES outputs, but not the MULTI SOURCE PRE OUT. The MUTE indicator on the display flashes. Press this button again or turn the power off and on to cancel the audio muting.

On-screen cursor operation buttons

Allow you to move the cursor in the on-screen display.

INPUT SELECTOR buttons

Allow you to select an input from TAPE-1, TAPE-2 (monitor), TUNER or CD.

VIDEO ◀/▶ buttons

Allow you to select an input from VIDEO 1 through 4.

MAIN/SUB select switch

Switch to "MAIN" to operate the system from the main room using the remote controller; switch to "SUB" to control it from the sub room.

VOL Δ/▽ buttons

Allow you to adjust the volume level of the selected component.

ENTER button

 
Displays the Menu screen or confirms the cursor operation in the on-screen display.

Device select switch

Allows you to select the component that you wish to operate or to enter a remote control code.

AUDIO ◀/▶ buttons

Allow you to select an input from TAPE-1, TUNER, PHONO, and CD.

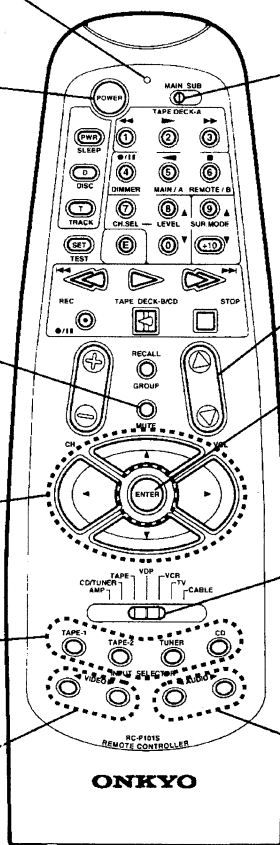

Remote controller

Amplifier controls:

You can use the following buttons when the Device select switch is set to AMP.

SLEEP button

Enables you to set a period of time after which the power to the system is turned off.

Press this button to display "90 MIN." Press the button repeatedly to shorten the specified period of time in 10-minute steps. If you do not press the button again for more than five seconds, the timer will automatically start and the SLEEP indicator on the display will light up. Press this button while the indicator is lit to display the amount of time remaining; then edit the value in 10-minute steps. Press this button with ten minutes or less remaining to cancel the sleep timer; the power will not be turned off.

TEST button

Press this button to produce the test tone in order to adjust the volume balance between the speakers.

DIMMER button

Changes the brightness of the display in four steps: bright, medium, dim, and off.

MAIN/A button

Turns the SPEAKERS A on or off.

REMOTE/B button

Turns the SPEAKERS B on or off.

SUR. MODE ▲/▼ button

Allows you to select the Surround mode.

 
LEVEL ▲/▼ button

Adjusts the playback level of the speakers.

CH. SEL button

Switches between the speakers during the speaker volume adjustment.

AMP position

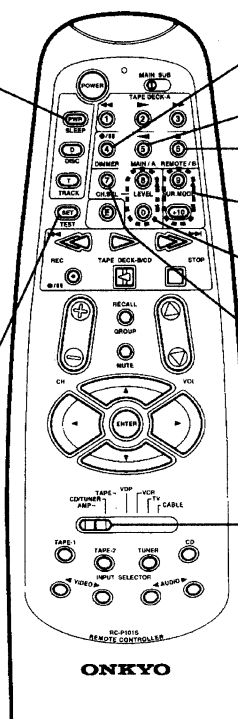

CD player and Tuner controls:

You can use the following buttons when the Device select switch is set to CD/TUNER.

SLEEP button

Refer to the "Amplifier controls" section above for more information on this button.

DISC button

Allows you to specify a disc number for the discs in the CD changer.

TRACK button

Allows you to use the number keys to specify a track on a CD.

CH +/- buttons

Allow you to select a preset FM or AM broadcasting station.

Number buttons (0, 1-9) and +10 button

Function as number keys.

CD buttons

 
Function as operating buttons for the CD player.

- : Reverse skip (Down)
- : Playback
- : Forward skip (Up)
- : Pause
- : Stop

GROUP button

Allows you to select a group (A, B, C, or D) of the tuner preset memory.

CD/TUNER position

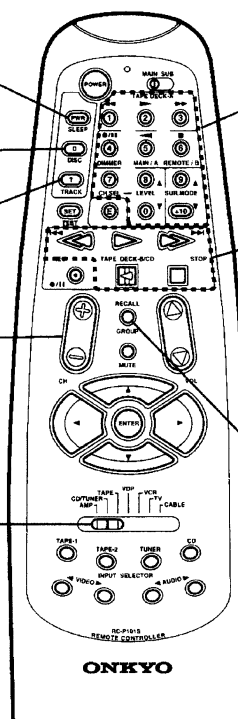

Remote controller

Tape deck controls:







You can use the following buttons when the Device select switch is set to TAPE.

SLEEP button

Refer to the "Amplifier controls" section on page 9 for more information on this button.

TAPE DECK-B buttons







Function as operating buttons for Tape Deck-B.

 
-  : Fast rewind
-  : Forward playback
-  : Fast forward
-  : Rec/pause
-  : Reverse playback
-  : Stop

- When a single deck is connected, use the TAPE DECK-B buttons.

TAPE DECK-A buttons

Function as operating buttons for Tape Deck-A.

-  : Fast rewind
-  : Forward playback
-  : Fast forward
-  : Rec/pause
-  : Reverse playback
-  : Stop

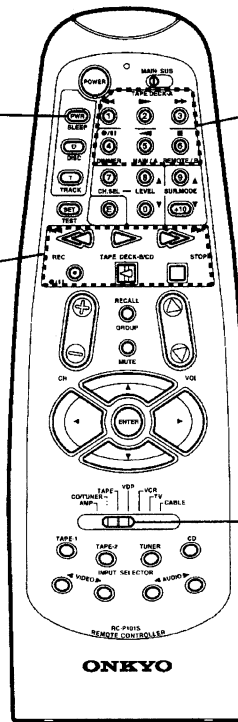

TAPE position

Video disc player and video cassette recorder controls:

You can use the following buttons when the Device select switch is set to VDP (for video disc player) or VCR (for video cassette recorder).

PWR button

Turns on and off the power.

T button (for VCR)

Toggles between the VCR and TV screens.

Enter button

Allows you to enter other brands' video device codes into this remote controller.

SET button

Allows you to start programming the video device codes of other brands in order to operate them using this remote controller.

CH +/- buttons (for VCR)







Allow you to select a channel.

 
Number buttons (0, 1~9) and +10 button

Function as number keys for selecting a chapter or a channel.

Operation buttons

Function as operating buttons for the VDP and VCR.

-  : Fast rewind
-  : Playback
-  : Fast forward
-  : Rec/pause (VCR only)
-  : Pause
-  : Stop

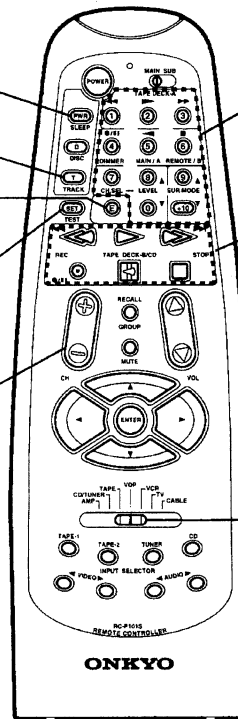

VDP or VCR position

