 


# Remote control

ENGLISH

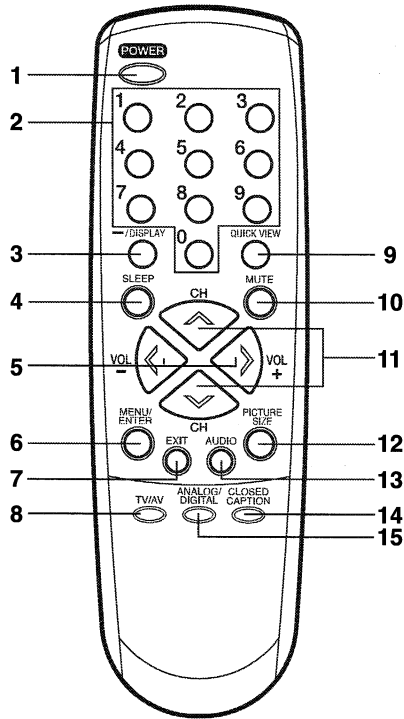

 
1. **POWER Button** - Press to turn the power on/off to the TV.
2. **Direct Channel Selection Buttons (0-9)** - Allow direct access to any channel.
3. **-/DISPLAY Button** - When the TV is receiving an analog signal pressing this button will display the current information on-screen. When the TV is receiving a digital signal, pressing this button once will display the digital information on-screen; pressing it a second time will display the analog information on-screen. To remove

- the display from the screen, press this button again. This button is also the "-" button used when selecting digital channels.
4. **SLEEP Button** - To set the TV to turn off after a preset amount of time, press the SLEEP button. The clock will count up 10 minutes each time the button is pressed in the order of 0, 10, 20, ...100, 110, 120. After the sleep time is programmed, the display will disappear then reappear momentarily every ten minutes to remind you the sleep timer function is operating. To confirm the sleep time setting, press the SLEEP button once and the remaining time will be momentarily displayed. To cancel sleep time, press the SLEEP button repeatedly until the display turns to 0.
5. **VOL (VOLUME) + / - Buttons** - Press the "+" button to increase, or the "-" button to decrease the volume level. Use to select the desired setting during the menu screen operation.
6. **MENU/ENTER Button** - Press to display the menu screen. While in the on-screen menu, press to enter or select options.
7. **EXIT Button** - Press to exit the menu screen.
8. **TV/AV Button** - Press this button to display SOURCE SELECTION menu to select the video input source.
9. **QUICK VIEW Button** - This button allows you to go back to the previous channel selected by pressing the QUICK VIEW button. Press this button again to return to the channel you were watching.
10. **MUTE Button** - To turn off the sound, press this button once. The TV will be silenced and the symbol "MUTE" will appear on the screen. The muting feature can be released by pressing the MUTE button again or one of the VOL + or - buttons.
11. **CH (CHANNEL) ^ / ∨ Buttons** - Press the ^ button to change to a higher numbered channel set into memory. Press the ∨ button to change to a lower numbered channel set into memory. Use to select the desired setting during the menu screen operation.
12. **PICTURE SIZE Button** - Press to change the picture size.
13. **AUDIO Button** - Press to select the desired audio setting.
14. **CLOSED CAPTION Button** - Press this button to display CLOSED CAPTION menu.
15. **ANALOG/DIGITAL Button** - Press to select analog/digital mode.


Before using the remote control, batteries must first be installed.

## HOW TO INSTALL BATTERIES

1. Open the battery compartment cover.

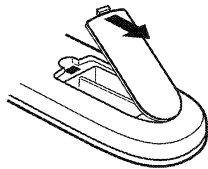

 2. Install two "AAA" batteries (not supplied).

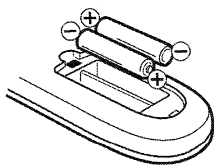

3. Replace the battery compartment cover.

Use two "AAA" size batteries (not supplied). The batteries may last approximately one year depending on how much the remote control is used. For best performance, it is recommended that batteries should be replaced on a yearly basis, or when the remote operation becomes erratic. Do not mix old and new batteries or different types.


## BATTERY PRECAUTIONS

 These precautions should be followed when using batteries in this device:

- Use only the size and type of batteries specified.
- Be sure to follow the correct polarity when installing the batteries as indicated in the battery compartment. Reversed batteries may cause damage to the device.
- Do not mix different types of batteries together (e.g. Alkaline and Carbon-zinc) or old batteries with fresh ones.
- If the device is not to be used for a long period of time, remove the batteries to prevent damage or injury from possible battery leakage.
- Do not try to recharge batteries not intended to be recharged; they can overheat and rupture (follow battery manufacturer's directions).

# Setting the language

You can choose from three different languages (English, Spanish and French) for the on-screen displays. On-screen language selection (step 4) will automatically appear on the screen when you press MENU/ENTER initially. Select the language you prefer first, then proceed with the other menu options.

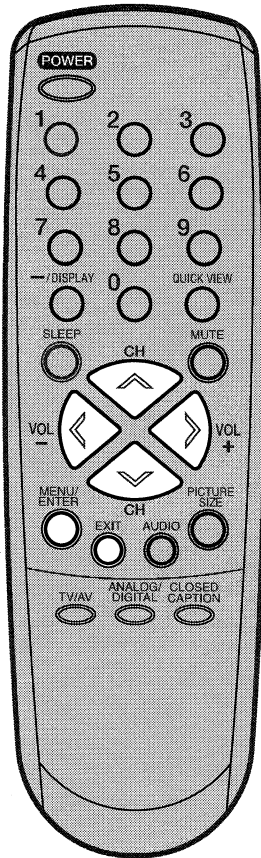


**NOTE:**


If no buttons are pressed for more than 60 seconds, the MENU screen will return to normal TV-operation automatically.

1 Press **MENU/ENTER**. The menu screen will appear.

 
2 Press **<** or **>** to select **SETUP** menu.

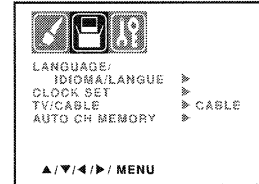

 3 Press **^** or **v** to select "LANGUAGE/IDIOMA/LANGUE". Then press **>** to display the LANGUAGE/IDIOMA/LANGUE menu.

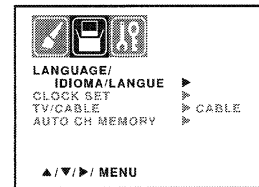

 4 Press **^** or **v** to select the desired language: English (ENGLISH), Spanish (ESPAÑOL) or French (FRANÇAIS).

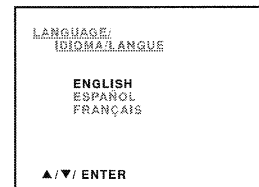


5 Press **MENU/ENTER** repeatedly until the menu screen is cleared. Otherwise, press **EXIT** to return to the normal screen immediately.

ENGLISH

# Memorizing channels

 This TV is equipped with a channel memory feature which allows channels to skip up or down to the next channel set into memory, skipping over unwanted channels. Before selecting channels, they must be programmed into the TV's memory. To use this TV with an antenna, set the TV/CABLE menu option to the TV mode. When shipped from the factory, this menu option is in the CABLE mode.

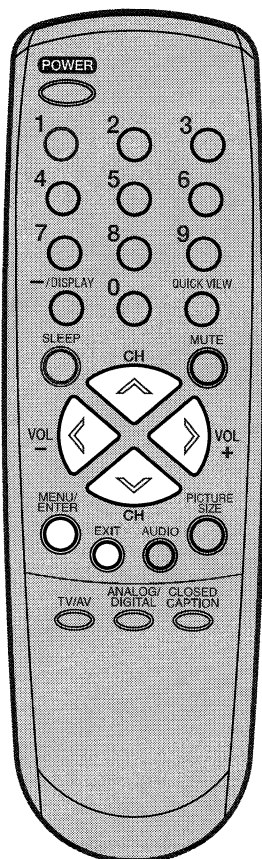


**NOTE:**

It may take a few seconds for a digital channel picture to appear on screen after being selected.


## TV/CABLE selection

**1** Press **MENU/ENTER**. The menu screen will appear.

 **2** Press **<** or **>** to select **SETUP** menu.

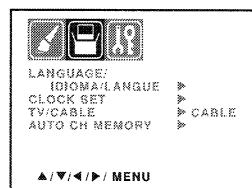


 **3** Press **^** or **v** to select "TV/CABLE".

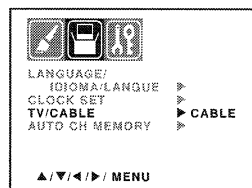

**4** Press **<** or **>** to select "TV" or "CABLE".

 **TV** - VHF/UHF channels  
**CABLE** - CABLE TV channels

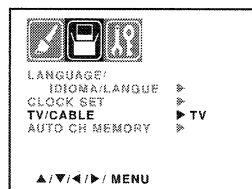

**5** Press **MENU/ENTER** repeatedly until the menu screen is cleared. Otherwise, press **EXIT** to return to the normal screen immediately.

## CABLE CHART

The chart below is typical of many cable system channel allocations.

Number on this TV	14	15	16	17	18	19	20	21	22								
Corresponding CABLE channel	A	B	C	D	E	F	G	H	I								
23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40
J	K	L	M	N	O	P	Q	R	S	T	U	V	W	AA	BB	CC	DD
41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58
EE	FF	GG	HH	II	JJ	KK	LL	MM	NN	OO	PP	QQ	RR	SS	TT	UU	VV
59	60	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76
WW	AAA	BBB	CCC	DDD	EEE	FFF	GGG	HHH	III	JJJ	KKK	LLL	MMM	NNN	OOO	PPP	QQQ
77	78	79	80	81	82	83	84	85	86	87	88	89	90	91	92	93	94
RRR	SSS	TTT	UUU	VVV	WWW	XXX	YYY	ZZZ	86	87	88	89	90	91	92	93	94
95	96	97	98	99	100	101	102	103	104	105	106	107	108	109	110	111	112
A-5	A-4	A-3	A-2	A-1	100	101	102	103	104	105	106	107	108	109	110	111	112
113	114	115	116	117	118	119	120	121	122	123	124	125	01				
113	114	115	116	117	118	119	120	121	122	123	124	125	5A				