

INSTRUCTIONS FOR MODEL G96 MKII REPLACEMENT REMOTE CONTROL

REMOTE CONTROL PART NUMBER 4835 310 57634

The G96 MKII Remote Control is a general replacement for older type Color TV remote controls. The G96 MKII will operate most Color TVs from Philips, Magnavox, Philco, Sylvania® as well as Crosley, Curtis Mathes and Bell & Howell TVs manufactured by Philips before 1996. Operation of most Philips, Magnavox, Philco, Sylvania® TVs back in time to 1981 is also available with this remote.

Please note that this remote is not a Universal Remote and will only operate the Color TVs listed above.

To use this remote control first install 2 AAA penlight batteries. Open the battery door by pressing the edge of the door toward the thin slit and lifting. It may help to use a dime. Insert the batteries with attention to the correct position. Follow the drawings in the battery holder. Reinstall the battery door.

The G96 MKII is now ready to control TV sets built by Philips, Magnavox, Philco or Sylvania® as well as Crosley, Curtis Mathes and Bell & Howell TVs manufactured by Philips after 1987 and up to 1996.

Before beginning to program for older model TVs try the "wakeup" code that starts when batteries are first installed. Make sure the TV will operate by first turning on the TV with the power button on the TV. Point the remote control at the TV. Then use the remote control channel buttons + CH - to change channels. If this works ok you are finished with the programming. Remember that all of the remote control buttons may not work with your TV. Each model TV has different features.

There is no harm in pressing any of the extra buttons, as they will have no response.

If this "wakeup" code does not work with your TV please take the following programming steps:

- 1) Turn on the TV set with the power button on the TV and point the remote at the TV.
Stand between 6 and 20 feet from the TV.
- 2) Press (both at the same time) the POWER and A/CH buttons for 3 seconds and then release.
For your reference the POWER and A/CH buttons have white dots. To make sure of pressing for 3 seconds count out loud like this: 1,000 and one, 1,000 and two, 1000 and three. Then release.
- 3) Give one short press to the CH+ button. If there is no channel change press the CH+ button shortly again to try the next code. Repeat this process until a channel change is seen.
There are 6 codes to try in this way.
- 4) When there is a channel change then press the MUTE button to lock in the code.
- 5) It is possible in a small number of cases to have a failure of the remote sensor inside the TV.
If this is the case the remote can not control the TV. A service technician will be needed to make repairs to the TV.

PROGRAMMING TIPS:

Use fresh batteries.

Make sure the batteries are in correctly.

The TV must be on.

The remote must be pointed level and at the TV when doing the programming. Do not point upward.

Stand at least 6 feet from the TV but not more than 20 feet away.

Make sure there is nothing between the remote control and the TV (which could block the remote control's signal).