

INSTRUCTIONS FOR MODEL G170 MKII REPLACEMENT REMOTE CONTROL

REMOTE CONTROL PART NUMBER 4835 310 57635

The G170 MKII Remote Control is a general replacement for older type Color TV remote controls. The G170 MKII will operate Magnavox, Philips and Philips-Magnavox color TVs that have one or more of the following features. Those features are Guide Plus (Gem Star), Replay PIP and 2 tuner PIP. Philips regrets that remote controls with Remote Locator and VCR/Cable functions are no longer available in combination with the previous listed features. The G170 MKII will allow complete control of the Guide Plus (Gem Star), Replay PIP and 2 tuner PIP of your TV set along with all the more common features such as Channel, Volume, A/B tuner and Smart features. No programming of the remote is necessary. This remote control will only operate the Magnavox, Philips and Philips-Magnavox TV set it was designed for. No other brands are supported and can not be programmed. NOTE: Not all features are present in all TV models. Pressing unused buttons on the G170 MK II will cause no harm. There will simply be no response.

To use this remote control first install 2 AAA penlight batteries. Open the battery door by pressing the edge of the door toward the thin slit and lifting. It may help to use a dime. Insert the batteries with attention to the correct position. Follow the drawings in the battery holder. Reinstall the battery door. No programming is required.

GUIDE PLUS

The colored buttons for Guide Plus are located at the top left of the G170 MKII remote control. These colors correspond to the color key commands when the Guide Plus display is on the TV screen. Guide Plus Information and Guide Plus ON/OFF are on the fourth button row from the top.

PIP AND REPLAY PIP

All PIP buttons are located at the top left corner of the G170 MK II Remote control and represent all possible commands needed to operate PIP, 2 tuner PIP and Replay PIP. ON/OFF will turn on the PIP function and turn it off. P/VUE is the Preview function, a display of several channels at one time. SWAP will command the main picture and the PIP picture to exchange places. FREEZE will freeze the PIP picture if PIP is being displayed. It will freeze the main picture in the PIP window of pip is off when FREEZE is pressed. POSIT selects the position of the PIP window in the 4 corners of the screen. REPLAY will cause the PIP window to appear and display a repeating loop of the last few seconds of the main picture. The Replay PIP display is governed by the SLOW button (slow motion) and the TV menu selection of Replay Mode (standard or hi-resolution). CLEAR will erase the repeating loop of the Replay PIP picture and allow later information to be captured when commanded.

Installation Note 00171599-0636