 


Remote Control

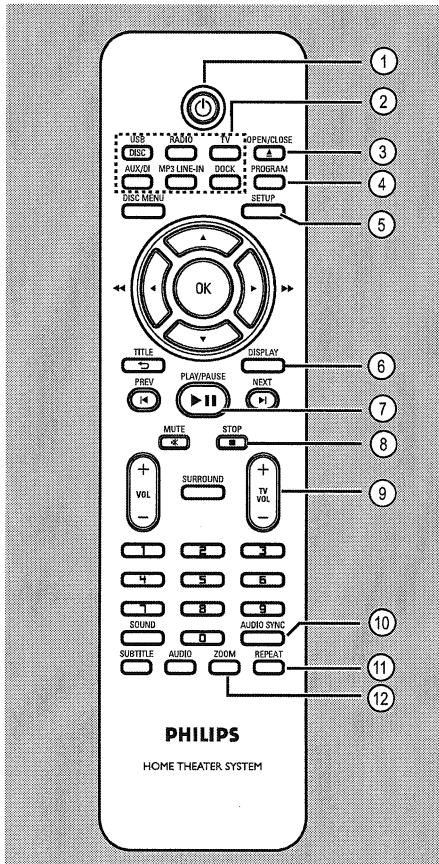

- ① — Turns on this unit or turns off to normal standby mode.

- ② **Source buttons**
- **DISC/USB:** toggles between DISC or USB mode.
 - **RADIO:** toggles between FM and AM/MW band.
 - **TV:** switches to TV mode. The sound from the TV output through the connected speaker system.
 - **AUX/DI:** toggles between AUX and DIGITAL IN external source mode.
 - **MP3 LINE-IN:** switches to audio device that is connected to the MP3 LINE-IN jack.

DOCK: switches to the GoGear/iPod that is connected to the docking station.

- ③ **OPEN/CLOSE** — Opens/closes the disc tray.
- ④ **PROGRAM**
- **DISC:** starts programming.
 - **RADIO:** press and hold this button to start automatic/ manual preset programming.
- ⑤ **SETUP** — Enters or exits the system setup menu.
- ⑥ **DISPLAY**
- Displays the current status or disc information.
 - Selects a different viewing angle of a DVD movie (if available.)
- ⑦ **PLAY/PAUSE** —
- **DISC:** starts/pauses playback.
 - **RADIO:** starts auto radio installation for first time setup.
- ⑧ **STOP** —
- Exits an operation.
 - **DISC:** stops playback.
 - **RADIO:** press and hold this button to erase the current preset radio station.
- ⑨ **TV VOL** + / — —
- Adjusts the volume of the TV (for Philips TVs or compatible brands only.)
- ⑩ **AUDIO SYNC**
- Sets the audio output delay times if the video playback is slower than the audio output.
- ⑪ **REPEAT**
- Selects various repeat or shuffle modes; turns off repeat or shuffle mode.
- ⑫ **ZOOM**
- Zoom in or out the picture on the TV.

Remote Control (continued)

English

⑬ DISC MENU

- For DVD, enters or exits disc contents menu.
- For VCD/SVCD, enters digest menu.

⑭ OK

- Confirms an entry or selection.

⑮ ▲▼◀▶

- DISC: selects movement direction in the menu.
- DISC: press left or right for fast forward and backward search.
- RADIO: press up or down to tune the radio frequency.
- RADIO: press left or right to start auto search.

⑯ TITLE ↶

- For DVD, go back to the previous menu.
- For VCD version 2.0 only;
During playback, display the disc title menu or return to the main menu.

⑰ PREV ◀◀ / NEXT ▶▶

- DISC: skips to the previous or next title/ chapter/track.
- RADIO: selects a preset radio station.

⑱ MUTE ⏻

- Mutes or restores the volume.

⑲ VOL +/–

- Adjusts the volume level.

⑳ SURROUND

 
- Selects multi-channel surround or stereo mode.

㉑ Numeric keypad 0-9

- Enters a track/title number of the disc.
- Enters a number of a preset radio station.

㉒ SOUND

- Selects a predefined sound effect.

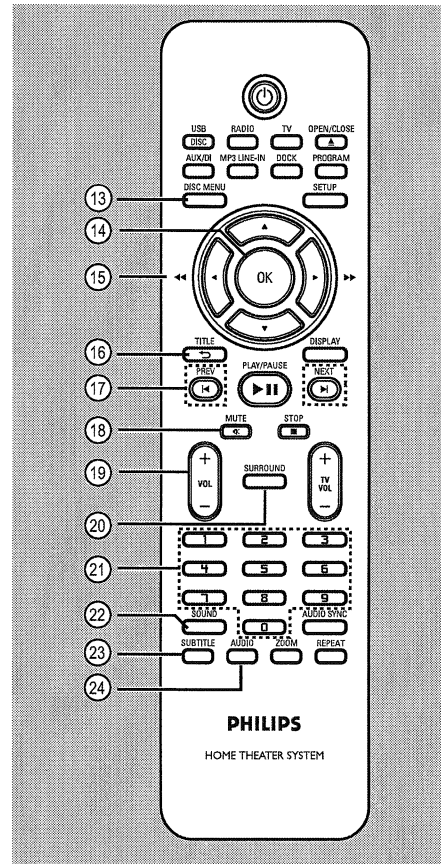

㉓ SUBTITLE

 
- Selects a DVD subtitle language.

㉔ AUDIO

- DISC: selects an audio language/channel.

Remote Control (continued)

Using the remote control

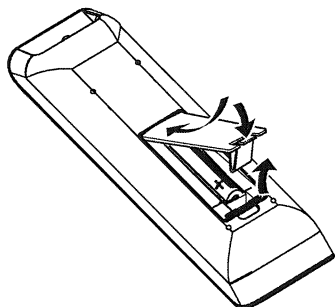

- ① Open the battery compartment.
- ② Insert two batteries type R03 or AAA, following the indications (+ -) inside the compartment.
- ③ Close the cover.
- ④ Point the remote control directly at the remote sensor (iR) on the front panel.
- ⑤ Select the source you wish to control by pressing the DISC/USB, RADIO, AUX/DI, MP3 LINE-IN, DOCK or TV button on the remote control.
- ⑥ Then select the desired function (for example ◀, ▶.)

CAUTION!

- Remove batteries if they are exhausted or if the remote control is not to be used for a long time.
- Never mix batteries (old and new or carbon and alkaline, etc.).
- Batteries contain chemical substances, they should be disposed of properly.