

Optional Remote Controls

The following remote controls are applicable to Philips Business Display Solutions TV products. These can be used for setup and configuration purposes.

RC2888/01

Guest Mode Remote Control (optional)

 


RC2573GR is an optional remote control for Institutional TV / Business Display Solutions features and Smart Card settings. It can be purchased separately.


Slide this button up to enter into **Guest mode**.

or

Slide this button down to enter into **Setup mode**.

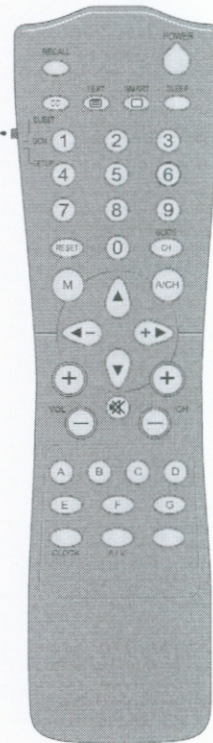

Guest Remote Control Keys

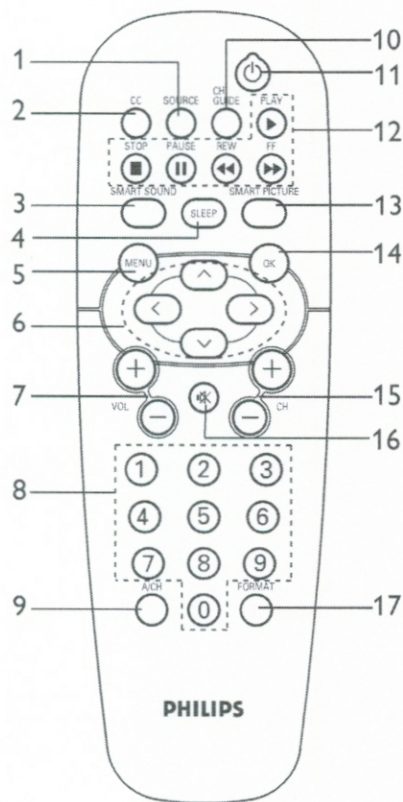 


1. **Source Select**
To toggle between available video sources.
2. **Closed Caption**
To activate the Closed Caption function.
3. **Smart Sound**
To select the predefined sound settings.
4. **Sleep**
To activate the sleep timer. Press the button repeatedly to increase countdown time.

5. **Menu**
To call up or exit the menus.
6. **Navigation cursors**
To navigate through the menus/submenus.
7. **Volume + / -**
To adjust the TV volume.
8. **0 to 9 Digit keys**
To select a TV channel. For a two digit number, enter the second digit before the dash disappears.
9. **Alternate Channel**
To toggle between the alternate channels
10. **Channel Guide**
To activate the channel guide function.
11. **Standby**
Power the TV off or on.
12. **DVD keys** (if applicable)
 - II To pause DVD play.
 - ▶ To start DVD playback.
 - To pause DVD playback.
 - ◀◀ To fast forward DVD playback
 - ▶▶ To fast forward DVD playback.
13. **Smart Sound**
To select predefined sound settings.
14. **OK**
To confirm a selection.
15. **Channel + / -**
To select channels.
16. **Mute**
To turn off or on sound.
17. **Format**
To select TV screen formats.

Overview of TV Setup Main Menu / Sub-Menus

 SETUP

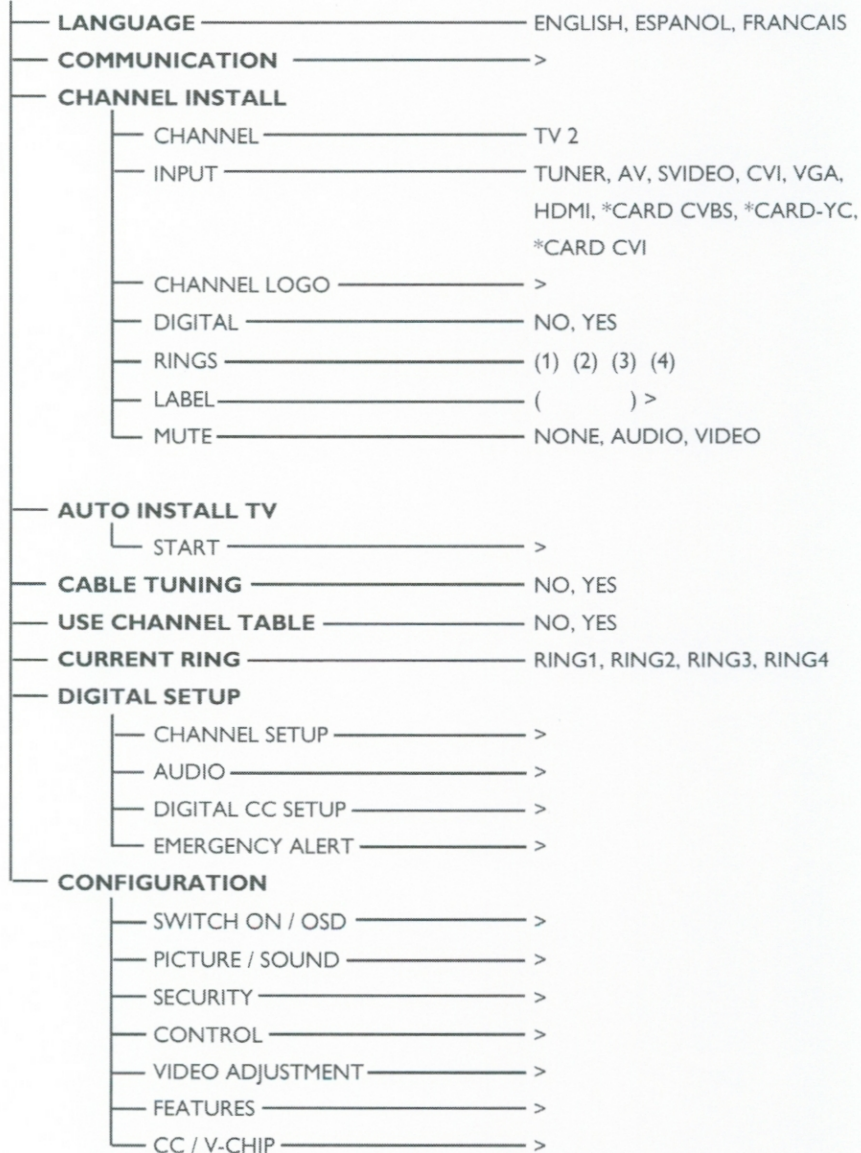


* **CARD CVBS, CARD-YC, CARD CVI** are available on certain models only.

Accessing the Setup Menu

The following remote control commands are applicable to Philips Business Display Solutions TV products. These can be used for setup and configuration purposes.

ACCESSING TV SETUP MENU USING THE REMOTE CONTROL (RC2573GR)

 1. Slide the button to the **Setup** location.

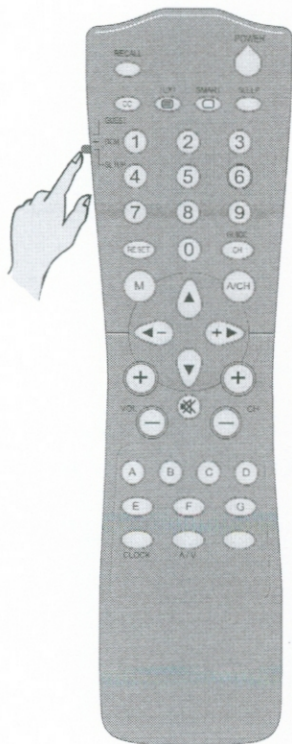

2. Press the **(M)** button on the remote control to activate the TV Setup Menu.

PHILIPS	
SETUP	
LANGUAGE	ENGLISH
COMMUNICATION	>
CHANNEL INSTALL	>
AUTO INSTALL TV	>
CABLE TUNING	NO
USE CHANNEL TABLE	NO
CURRENT RING	RING1
DIGITAL SETUP	>
CONFIGURATION	>

To scroll through the menu :

- Press the **(^)** or **(v)** button on the remote control. A highlight indicates that the respective menu item's setting is selected for modification.
- Press the **(>)** to modify the setting of the selected menu item.
- To exit menu, press the **(M)** button on the remote control.