

Use of the remote control RC4345

Note: For most buttons pressing a button once will activate the function. Pressing a second time will de-activate it. When a button enables multiple options, a small list will be shown. Press repeatedly to select the next item in the list. The list will be removed automatically after 6 seconds or press **OK** to remove immediately.

Attention: This remote control can not be programmed to work accessory devices.

DVD/R CBL TV VCR AUX

Press the **SELECT** button repeatedly to select one of the system modes in which the remote control can be used. If no action is being undertaken within 60 seconds, the remote control returns to TV mode.

After an action in the selected system mode the remote control will remain in this mode for 60 seconds and will then return to TV mode.

DEMO Demo menu on/off

See p. 9.

CLOCK on/off

Time display (for max. 10 minutes)

Color buttons

When functions attached to the color buttons, the color buttons are shown on screen.

MY CONTENT

Press to display the My Content menu on or off, see p. 8.

OK

- to activate a setting
- to display the list of channels stored (according to the selection made in the Installation mode (Antenna or Cable), p. 10.
- starts playing content in the Home Multimedia Browser application, p. 27.

MENU Settings menu on/off, see p. 10.

VOL Volume

 
Press + or - to adjust the volume.

MUTE

Interrupt the sound or restore it.

A/CH

Press to alternate between the currently viewed channel and the previously viewed channel.

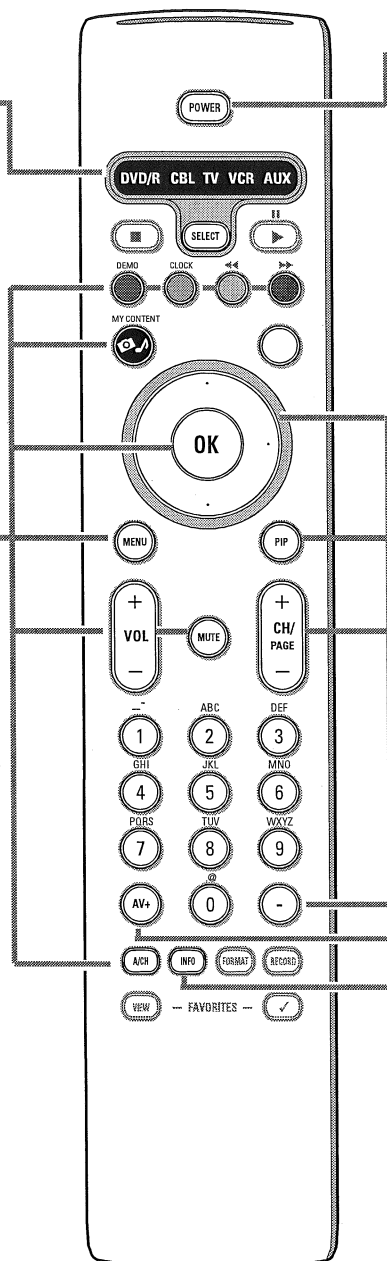

POWER

Press to turn on/off the TV from or to standby mode.

The TV is never powered off completely unless it is physically unplugged.

○ no function

Cursor buttons

Press the cursor buttons up/down, left/right to navigate through the menus.

Note: If necessary, you can adjust the picture position to the center of the screen with the cursor keys.

PIP HDMI Dual screen/PIP See p. 12.
To watch a broadcast and a HDMI source simultaneously.

CH/PAGE Channel selection

 
- To browse through the TV channels or sources stored in the preferred channel list (see p. 25).
 - To select between Antenna or Cable TV channels, first make your selection in the Settings menu, see, p. 10.
- Note: You don't have to start the installation again once you have searched for and stored the available TV channels.

AV+ Press this button repeatedly to select **AV1, AV2, AV3, HDMI1, HDMI2, SIDE** or **TV** when in TV mode, according to where you connected the accessory devices (p. 33).

- Type the dash (-) for digital channels.

INFO


- **Display information:** Press to display (when available) information about the selected TV channel and program or accessory device.

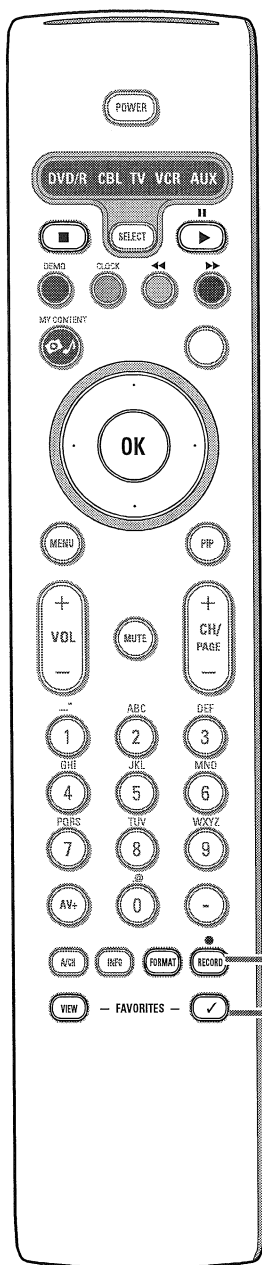


FORMAT

Press this button to summon a list of available display formats (depending on the receiving signal). This lets you choose the display format of your preference.

 
Press this button repeatedly to select another picture format: Automatic, Super Zoom, 4:3, Movie expand 14:9, 16:9 subtitle, Wide screen.




Automatic

 


Super zoom

 


4:3

 


Movie expand 14:9

 

Movie expand 16:9

 

16:9 subtitle

 

Wide screen

Automatic makes the picture fill the screen as much as possible.

Super zoom removes the black bars on the sides of 4:3 programs with minimal distortion.

When in Movie expand 14:9, Movie expand 16:9 or Super zoom picture format, you can make subtitles visible with the cursor up/down.

Note: With HD sources not all screen formats will be available.

 
FAVORITES

- **VIEW** To display a list of all channels marked as favorite (incl. subchannels).
- **✓** To add or remove a channel in the favorite list of TV channels.



- Audio and Video equipment buttons. See p. 34.
- Multimedia browser functional buttons. See p. 27.

- no function

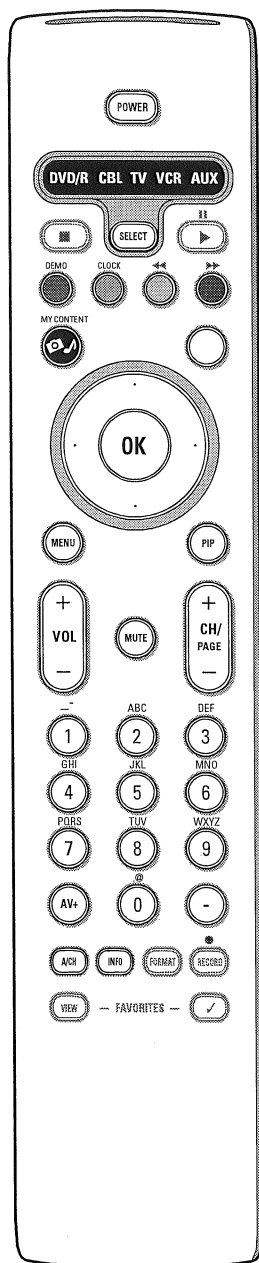

Alphanumeric buttons on the remote control

The alphanumeric buttons on the remote control can be used to enter digits and text.

Multi-tap entry can be used to enter alphanumeric information when necessary.

The characters displayed are dependent on the language selected in the Installation menu. See p. 10.

Text is entered similar to the method used for entering text messages on a cellular phone.

When a letter or number has been entered, the cursor automatically advances to the next character position after the specified time out or by pressing the cursor right.

RC button	Default Multi-tap Alphanumeric entry order
1	<space> _ - 1 <space> _ - 1 (etc.)
2	a b c A B C 2 a b c (etc.)
3	d e f D E F 3 d e f (etc.)
4	g h i G H I 4 g h i (etc.)
5	j k l J K L 5 j k l (etc.)
6	m n o M N O 6 m n o (etc.)
7	p q r s P Q R S 7 p q r s (etc.)
8	t u v T U V 8 t u v (etc.)
9	w x y z W X Y Z 9 w x y z (etc.)
0	. @ 0 . @ 0 (etc.)


Also the cursor up/down can be used to enter alphanumeric information.

When finished, press the **OK** button to confirm the entry.

Move to the left panel.

Button	Default RC_CURSOR_UP/RC_CURSOR_DOWN Alphanumeric Entry Order
RC_CURSOR_UP	a b c d ... A B C D ... 1 2 3 ... 0 <space> _ - . @
RC_CURSOR_DOWN	@ . - _ <space> 0 9 8 7 ... Z Y X ... z y x ... c b a

 Audio- and video equipment buttons

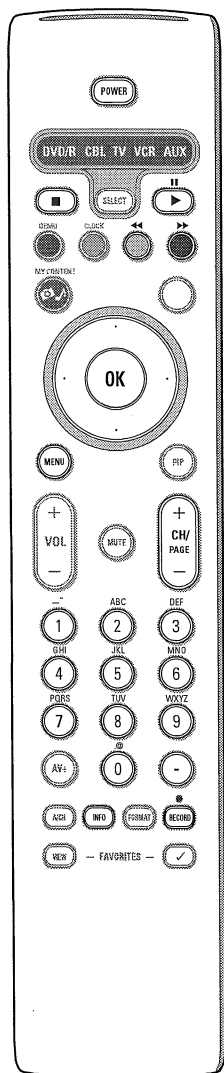

Most of the audio and video equipment from our range of products can be operated with the remote control of your TV.

Press one of the buttons after you pressed the **SELECT** button repeatedly according to the equipment you want to operate with this remote control. See Use of the remote control, p. 5.

When no action is taken within 60 seconds, the remote control goes back to TV mode.

POWER to switch to standby

|| for pause,

● for record,

◀◀ for rewind (**VCR, CD**);
search down (**DVD, AMP**)

■ for stop,

▶ for play,

▶▶ for fast forward (**VCR, CD**);
search up (**DVD/AMP**)

INFO display information

MENU to switch the menu on or off

- **CH +** for chapter, channel, track
selection

0 to 9 digit entry,

— tape index (**VCR**),
select a DVD chapter,
select a frequency (**AMP**)

cursor up/down
to select the next or the
previous disc (**CD**)

cursor left/right
to select the previous or
following track (**CD**)

Notes:

- If no action is being undertaken within 60 seconds, the remote control returns to TV mode.

- After an action in the selected system mode, the remote control will remain in this mode for 60 seconds and will then return to TV mode or press the **SELECT** button to return to TV mode immediately.



Kensington Security Slot (if present)

Your TV is equipped with a Kensington Security Slot, to prevent it from getting stolen.

An anti-theft Kensington lock has to be purchased separately.

The Kensington lock is a plastic-coated steel cable with a lock. One end has to be fixed to the opening of the TV and locked with a special key. The other end is attached to a fixed point.

® Kensington and MicroSaver are registered US trademarks of ACCO World Corporation with issued registrations and pending applications in other countries throughout the world. All other registered and unregistered trademarks are the property of their respective owners.