 


Remote Control Unit

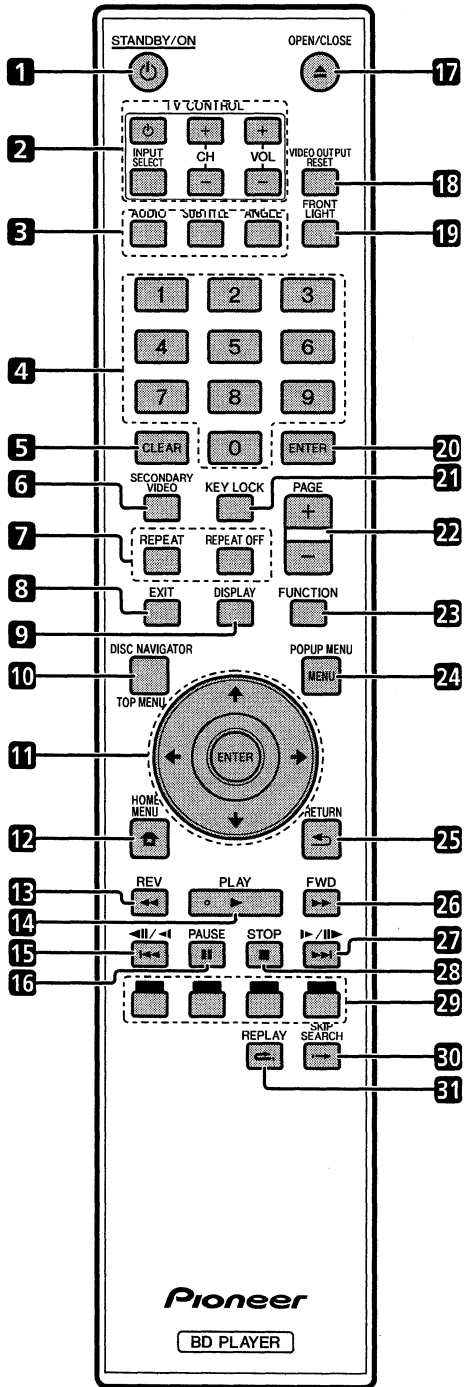


- 1 ⏻ STANDBY/ON (p. 20)
- 2 TV CONTROL buttons (p. 21)
- 3 AUDIO (p. 31), SUBTITLE (p. 31), ANGLE (p. 32)
- 4 Number buttons (p. 35)
- 5 CLEAR (p. 35)
- 6 SECONDARY VIDEO (p. 26)
- 7 REPEAT (pp. 30, 31), REPEAT OFF (pp. 30, 31)
- 8 EXIT (pp. 20, 36)
- 9 DISPLAY (pp. 24, 31)
- 10 TOP MENU/DISC NAVIGATOR (pp. 25, 27)
- 11 Cursor buttons (↑/↓/←/→), ENTER (pp. 21, 36)
- 12 HOME MENU (pp. 21, 36)
- 13 ◀◀ REV (p. 30)
- 14 ▶▶ PLAY (p. 24)
- 15 ◀◀/◀||/▶ (pp. 27, 30)
- 16 || PAUSE (p. 30)
- 17 ▲ OPEN/CLOSE (p. 24)
- 18 VIDEO OUTPUT RESET (p. 37)
- 19 FRONT LIGHT (p. 23)
- 20 ENTER (pp. 21, 36)
- 21 KEY LOCK (See below.)
- 22 PAGE +/- (p. 27)
- 23 FUNCTION (p. 34)
- 24 POPUP MENU/MENU (p. 25)
- 25 ↵ RETURN (p. 30)
- 26 ▶▶ FWD (p. 30)
- 27 ▶▶/||/▶ (pp. 27, 30)
- 28 ■ STOP (p. 24)
- 29 RED, GREEN, BLUE, YELLOW (pp. 27, 33)
- 30 → SKIP SEARCH (p. 30)
- 31 ⇐ REPLAY (p. 30)

**Keylock function**

 You can set the keylock to prevent accidental operations. This function allows TVs compatible with KURO LINK to also perform a Key Lock on the player.

Press and hold **KEY LOCK** for more than 5 seconds.

- Each time you perform this operation, the function is activated or deactivated.
- If you try to operate the Player while the keylock function is set, "Hold" blinks on the front display panel to indicate that the keylock function is set.




**NOTE**

- This remote control unit is equipped with two **ENTER** buttons (11 and 20 listed above). The **ENTER** button is useful when using with the number buttons.


# Before Starting Playback

## Loading the Batteries in the Remote Control

 
- 1 Open the rear cover.

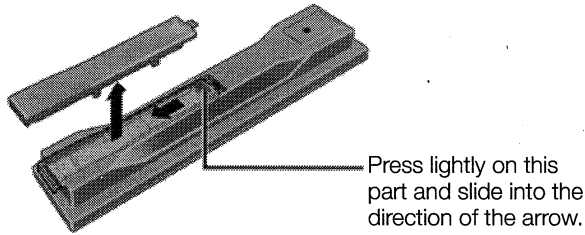

 - 2 Insert the batteries (AA/R6 x 2).  
Insert as indicated by the ⊕/⊖ marks into the battery compartment.

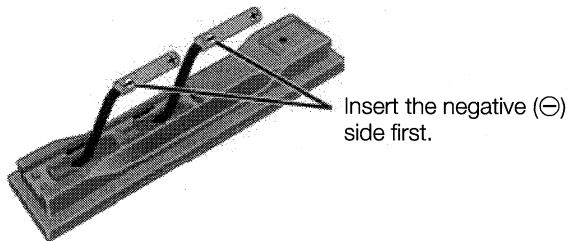

 
- 3 Close the rear cover.  
Close securely (a click should be heard).

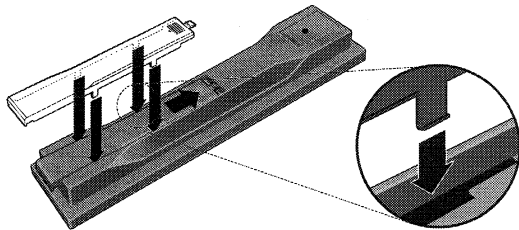

### CAUTION


- Do not use any batteries other than the ones specified. Also, do not use a new battery together with an old one.
- When loading the batteries into the remote control, set them in the proper direction, as indicated by the polarity marks (⊕ and ⊖).
- Do not heat batteries, disassemble them, or throw them into flames or water.
- Batteries may have different voltages, even if they look similar. Do not use different kinds of batteries together.
- To prevent leakage of battery fluid, remove the batteries if you do not plan to use the remote control for a long period of time (1 month or more). If the fluid should leak, wipe it carefully off the inside of the case, then insert new batteries. If a battery should leak and the fluid should get on your skin, flush it off with large quantities of water.
- When disposing of used batteries, please comply with governmental regulations or environmental public instruction's rules that apply in your country/area.
- WARNING**  
Do not use or store batteries in direct sunlight or other excessively hot place, such as inside a car or near a heater. This can cause batteries to leak, overheat, explode or catch fire. It can also reduce the life or performance of batteries.
 
## Approximate operating range of remote control

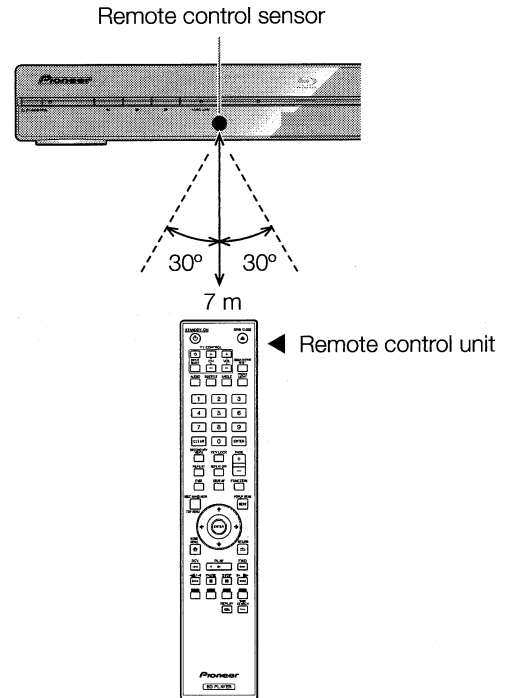

## Connecting the Power Cord

 
Plug the supplied AC cord into the AC IN terminal on the rear of the Player. Then plug into AC outlet.

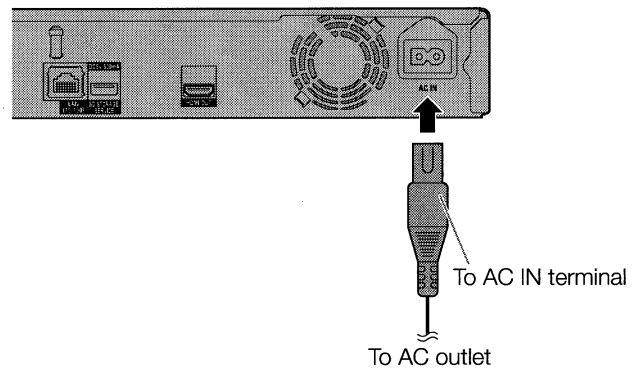

### NOTE

- Place the Player close to the AC outlet, and keep the power plug within reach.
- TO PREVENT RISK OF ELECTRIC SHOCK, DO NOT TOUCH THE UN-INSULATED PARTS OF ANY CABLES WHILE THE AC CORD IS CONNECTED.
- The STANDBY/ON indicator blinks while the Player is preparing for starting up. You cannot turn the Player on until the STANDBY/ON indicator stops blinking.
- If you are not going to use this Player for a long period of time, be sure to remove the AC cord from the AC outlet.
 
## Language Setting

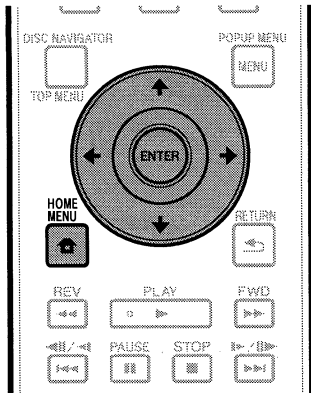


### Changing the on-screen display language


- 1 Press **HOME MENU** to display the Home Menu screen.



 - 2 Press **↑/↓/←/→** to select "On Screen Language", then press **ENTER**.

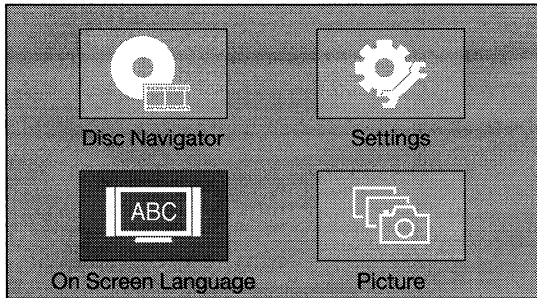

 - 3 Press **↑/↓** to select the language you want to display on the screen, then press **ENTER**.

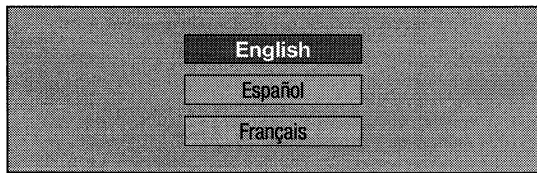


- NOTE**
- To select the DVD disc language, such as subtitle language, etc., see page 25.

## Operating the TV with the player's remote control

 When the manufacturer code for your brand of TV is set on the player's remote control, the TV can be operated using the player's remote control.

- CAUTION**
- For some models it may not be possible to operate the TV with the player's remote control, even for TVs of brands listed on the manufacturer code list.
  - The setting may be restored to the default after the batteries are replaced. If this happens, reset it.

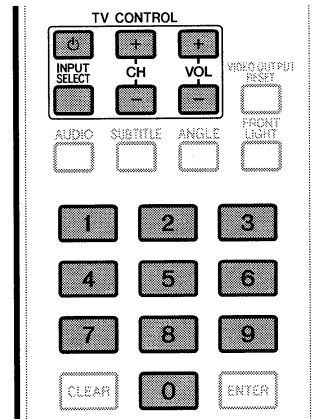

- 1 Input the 2-digit manufacturer code.
  - Press the number buttons (0 to 9) to input the code while pressing **TV CONTROL** **⏻**.

- NOTE**
- The factory setting is 00 (PIONEER).
  - If you make a mistake when inputting the code, release **TV CONTROL** **⏻** then start over from the beginning.
  - When there are multiple codes for a manufacturer, try inputting them in the indicated order until the TV can be operated.

- 2 Check that the TV can be operated.
  - Operate the TV using **TV CONTROL**.
    - ⏻** – Press to turn the TV's power on and off.
    - INPUT SELECT** – Press to switch the TV's input.
    - CH +/-** – Press to select the TV channel.
    - VOL +/-** – Press to adjust the volume.

### TV Preset code list

Manufacturer Code(s)	
<b>PIONEER</b> 00, 31, 32, 07, 36, 42, 51, 22	<b>BEON</b> 07
<b>ACURA</b> 44	<b>BLAUPUNKT</b> 31
<b>ADMIRAL</b> 31	<b>BLUE SKY</b> 41
<b>AIWA</b> 60	<b>BLUE STAR</b> 18
<b>AKAI</b> 32, 35, 42	<b>BPL</b> 18
<b>AKURA</b> 41	<b>BRANDT</b> 36
<b>ALBA</b> 07, 39, 41, 44	<b>BTC</b> 41
<b>AMSTRAD</b> 42, 44, 47	<b>BUSH</b> 07, 41, 42, 44, 47, 56
<b>ANITECH</b> 44	<b>CASCADE</b> 44
<b>ASA</b> 45	<b>CATHAY</b> 07
<b>ASUKA</b> 41	<b>CENTURION</b> 07
<b>AUDIOGONIC</b> 07, 36	<b>CGB</b> 42
<b>BASIC LINE</b> 41, 44	<b>CIMLINE</b> 44
<b>BAUR</b> 31, 07, 42	<b>CLARIVOX</b> 07
<b>BEKO</b> 38	<b>CLATRONIC</b> 38
	<b>CONDOR</b> 38

(Continued on the next page)

Disc Playback

## Before Starting Playback

---

CONTEC 44  
CROSLY 32  
CROWN 38, 44  
CRYSTAL 42  
CYBERTRON 41  
DAEWOO 07, 44, 56  
DAINICHI 41  
DANSAI 07  
DAYTON 44  
DECCA 07, 48  
DIXI 07, 44  
DUMONT 53  
ELIN 07  
ELITE 41  
ELTA 44  
EMERSON 42  
ERRES 07  
FERGUSON 07, 36, 51  
FINLANDIA 35, 43, 54  
FINLUX 32, 07, 45, 48, 53, 54  
FIRSTLINE 40, 44  
FISHER 32, 35, 38, 45  
FORMENTI 32, 07, 42  
FRONTECH 31, 42, 46  
FRONTECH/PROTECH 32  
FUJITSU 48  
FUNAI 40, 46, 58  
GBC 32, 42  
GE 00, 01, 08, 07, 10, 11, 17, 02, 28, 18  
GEC 07, 34, 48  
GELOSO 32, 44  
GENERAL 29  
GENEXXA 31, 41  
GOLDSTAR 10, 23, 21, 02, 07, 50  
GOODMANS 07, 39, 47, 48, 56  
GORENJE 38  
GPM 41  
GRAETZ 31, 42  
GRANADA 07, 35, 42, 43, 48  
GRADIENTE 30, 57  
GRANDIN 18  
GRUNDIG 31, 53  
HANSEATIC 07, 42  
HCM 18, 44  
HINARI 07, 41, 44  
HISAWA 18  
HITACHI 31, 33, 34, 36, 42, 43, 54, 06, 10, 24, 25, 18  
HUANYU 56  
HYPSON 07, 18, 46  
ICE 46, 47  
IMPERIAL 38, 42  
INDIANA 07  
INGELEN 31  
INTERFUNK 31, 32, 07, 42  
INTERVISION 46, 49  
ISUKAI 41  
ITC 42  
ITT 31, 32, 42  
JEC 05  
JVC 13, 23  
KAISUI 18, 41, 44  
KAPSCH 31  
KENDO 42  
KENNEDY 32, 42  
KORPEL 07  
KOYODA 44  
LEYCO 07, 40, 46, 48  
LIESENK&TTER 07  
LOEWE 07  
LUXOR 32, 42, 43  
M-ELECTRONIC 31, 44, 45, 54, 56, 07, 36, 51  
MAGNADYNE 32, 49  
MAGNAFON 49  
MAGNAVOX 07, 10, 03, 12, 29  
MANESTH 39, 46  
MARANTZ 07  
MARK 07  
MATSUI 07, 39, 40, 42, 44, 47, 48  
MCMICHAEL 34  
MEDIATOR 07  
MEMOREX 44  
METZ 31  
MINERVA 31, 53  
MITSUBISHI 09, 10, 02, 21, 31  
MULTITECH 44, 49  
NEC 59  
NECKERMANN 31, 07  
NEI 07, 42  
NIKKAI 05, 07, 41, 46, 48  
NOBLIKO 49  
NOKIA 32, 42, 52  
NORDMENDE 32, 36, 51, 52  
OCEANIC 31, 32, 42  
ORION 32, 07, 39, 40  
OSAKI 41, 46, 48  
OSO 41  
OSUME 48  
OTTO VERSAND 31, 32, 07, 42  
PALLADIUM 38  
PANAMA 46  
PANASONIC 31, 07, 08, 42, 22  
PATHO CINEMA 42  
PAUSA 44  
PHILCO 32, 42  
PHILIPS 31, 07, 34, 56, 68  
PHOENIX 32  
PHONOLA 07  
PROFEX 42, 44  
PROTECH 07, 42, 44, 46, 49  
QUELLE 31, 32, 07, 42, 45, 53  
R-LINE 07  
RADIOLA 07  
RADIOSHACK 10, 23, 21, 02  
RBM 53  
RCA 01, 10, 15, 16, 17, 18, 61, 62, 09  
REDIFFUSION 32, 42  
REX 31, 46  
ROADSTAR 41, 44, 46  
SABA 31, 36, 42, 51  
SAISHO 39, 44, 46  
SALORA 31, 32, 42, 43  
SAMBERS 49  
SAMSUNG 07, 38, 44, 46, 69, 70  
SANYO 35, 45, 48, 21, 14, 91  
SBR 07, 34  
SCHAUB LORENZ 42  
SCHNEIDER 07, 41, 47  
SEG 42, 46  
SEI 32, 40, 49  
SELECO 31, 42  
SHARP 02, 19, 27, 67, 90  
SIAREM 32, 49  
SIEMENS 31  
SINUDYNE 32, 39, 40, 49  
SKANTIC 43  
SOLAVOX 31  
SONOKO 07, 44  
SONOLOR 31, 35  
SONTEC 07  
SONY 04  
SOUNDWAVE 07  
STANDARD 41, 44  
STERN 31  
SUSUMU 41  
SYSLINE 07  
TANDY 31, 41, 48  
TASHIKO 34  
TATUNG 07, 48  
TEC 42  
TELEAVIA 36  
TELEFUNKEN 36, 37, 52  
TELETECH 44  
TENSAI 40, 41  
THOMSON 36, 51, 52, 63  
THORN 31, 07, 42, 45, 48  
TOMASHI 18  
TOSHIBA 05, 02, 26, 21, 53  
TOWADA 42  
ULTRAVOX 32, 42, 49  
UNIDEN 92  
UNIVERSUM 31, 07, 38, 42, 45, 46, 54  
VESTEL 07  
VICTOR 13  
VOXSON 31  
WALTHAM 43  
WATSON 07  
WATT RADIO 32, 42, 49  
WHITE WESTINGHOUSE 07  
YOKO 07, 42, 46  
ZENITH 03, 20