 


Remote Control Unit

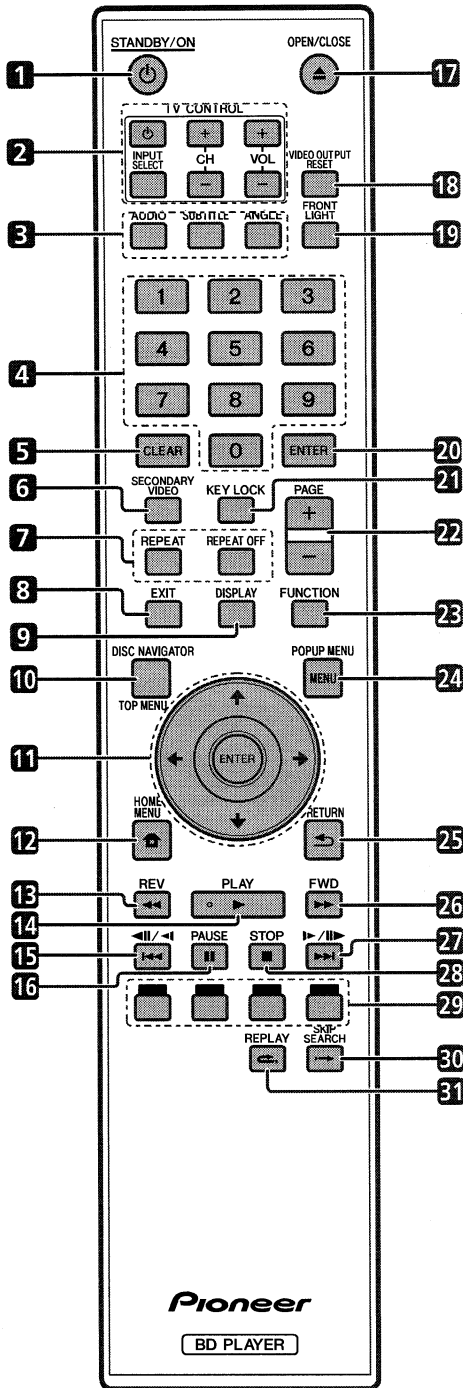

- 1 ⏻ STANDBY/ON (page 23)
- 2 TV CONTROL buttons (page 24)
- 3 AUDIO (page 41), SUBTITLE (page 41), ANGLE (page 41)
- 4 Number buttons (page 43)
- 5 CLEAR (page 43)
- 6 SECONDARY VIDEO (page 30)
- 7 REPEAT (pages 39 and 40), REPEAT OFF (pages 39 and 40)
- 8 EXIT (page 44)
- 9 DISPLAY (pages 28 and 40)
- 10 TOP MENU/DISC NAVIGATOR (pages 29 and 31)
- 11 Cursor buttons (↑/↓/←/→), ENTER (pages 23 and 44)
- 12 HOME MENU (pages 23 and 44)
- 13 ◀◀ REV (page 39)
- 14 ▶▶ PLAY (page 28)
- 15 ◀◀/◀/▶/▶▶ (page 39)
- 16 || PAUSE (page 39)
- 17 ▲ OPEN/CLOSE (page 28)
- 18 VIDEO OUTPUT RESET (page 45)
- 19 FRONT LIGHT (page 25)
- 20 ENTER (pages 23 and 44)
- 21 KEY LOCK (See below.)
- 22 PAGE +/- (page 31)
- 23 FUNCTION (page 42)
- 24 POPUP MENU/MENU (page 29)
- 25 ↶ RETURN (page 44)
- 26 ▶▶▶ FWD (page 39)
- 27 ▶▶▶/||▶/▶▶▶ (page 39)
- 28 ■ STOP (page 28)
- 29 RED, GREEN, BLUE, YELLOW (page 31)
- 30 ↷ SKIP SEARCH (page 39)
- 31 ↶ REPLAY (page 39)

Keylock function

You can set the keylock to prevent accidental operations. This function allows TVs compatible with control function with HDMI to also perform a Key Lock on the player. Press and hold **KEY LOCK** for more than 5 seconds.

- Each time you perform this operation, the function is activated or deactivated.
- If you try to operate the Player while the keylock function is set, "HOLD" lights on the front panel display to indicate that the keylock function is set.

 
NOTE

- This remote control unit is equipped with two **ENTER** buttons (11 and 20 listed above).


Before Starting Playback

Loading the Batteries in the Remote Control


- 1 Open the rear cover.

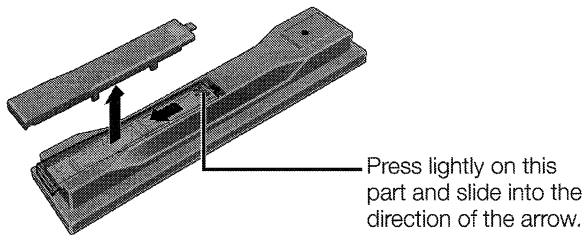

 - 2 Insert the batteries (AA/R6 x 2). Insert as indicated by the ⊕/⊖ marks into the battery compartment.

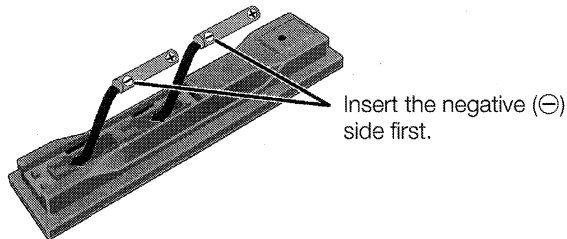

 
- 3 Close the rear cover. Close securely (a click should be heard).

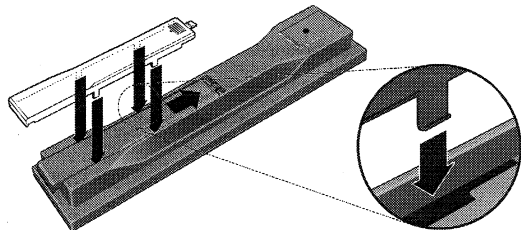

CAUTION


- Do not use any batteries other than the ones specified. Also, do not use a new battery together with an old one.
- When loading the batteries into the remote control, set them in the proper direction, as indicated by the polarity marks (⊕ and ⊖).
- Do not heat batteries, disassemble them, or throw them into flames or water.
- Batteries may have different voltages, even if they look similar. Do not use different kinds of batteries together.
- To prevent leakage of battery fluid, remove the batteries if you do not plan to use the remote control for a long period of time (1 month or more). If the fluid should leak, wipe it carefully off the inside of the case, then insert new batteries. If a battery should leak and the fluid should get on your skin, flush it off with large quantities of water.
- When disposing of used batteries, please comply with governmental regulations or environmental public institution's rules that apply in your country/area.
- Do not use or store batteries in direct sunlight or other excessively hot place, such as inside a car or near a heater. This can cause batteries to leak, overheat, explode or catch fire. It can also reduce the life or performance of batteries.

 Approximate operating range of remote control

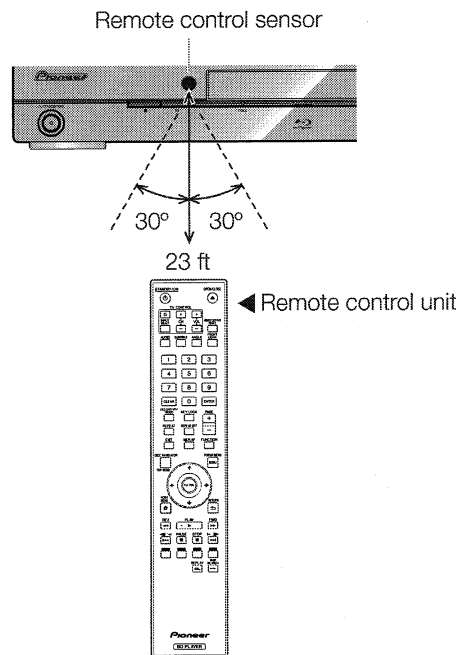

Connecting the Power Cord

 Only connect the power cord once all equipment connections are completed.

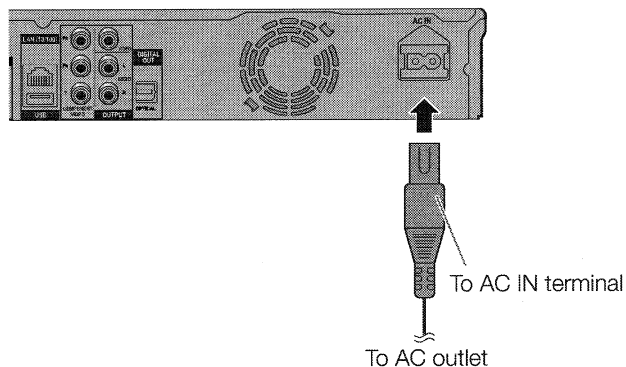

NOTE

 
- Place the Player close to the AC outlet, and keep the power plug within reach.
- TO PREVENT RISK OF ELECTRIC SHOCK, DO NOT TOUCH THE UN-INSULATED PARTS OF ANY CABLES WHILE THE AC CORD IS CONNECTED.
- If you are not going to use this Player for a long period of time, be sure to remove the AC cord from the AC outlet.

Operating the TV with the Player's Remote Control

When the manufacturer code for your brand of TV is set on the player's remote control, the TV can be operated using the player's remote control.

CAUTION

- For some models it may not be possible to operate the TV with the player's remote control, even for TVs of brands listed on the manufacturer code list.
- The setting may be restored to the default after the batteries are replaced. If this happens, reset it.

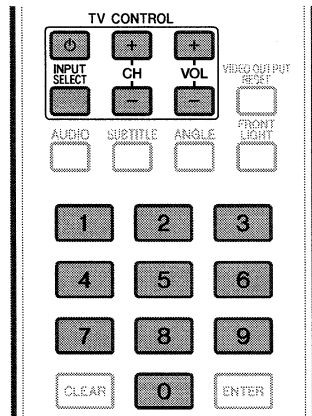

- Input the 2-digit manufacturer code.
 - Press the number buttons (0 to 9) to input the code while pressing **TV CONTROL** ⏻.

NOTE

- The factory setting is 00 (PIONEER).
- If you make a mistake when inputting the code, release **TV CONTROL** ⏻ then start over from the beginning.
- When there are multiple codes for a manufacturer, try inputting them in the indicated order until the TV can be operated.

- Check that the TV can be operated.
 - Operate the TV using **TV CONTROL**.
 - ⏻ – Press to turn the TV's power on and off.
 - INPUT SELECT** – Press to switch the TV's input.
 - CH +/-** – Press to select the TV channel.
 - VOL +/-** – Press to adjust the volume.

Table of Manufacturer Codes

Manufacturer Code(s)

PIONEER 00, 31, 32, 07, 36, 42, 51	BEON 07
ACURA 44	BLAUPUNKT 31
ADMIRAL 31	BLUE SKY 41
AIWA 60	BLUE STAR 18
AKAI 32, 35, 42	BPL 18
AKURA 41	BRANDT 36
ALBA 07, 39, 41, 44	BTC 41
AMSTRAD 42, 44, 47	BUSH 07, 41, 42, 44, 47, 56
ANITECH 44	CASCADE 44
ASA 45	CATHAY 07
ASUKA 41	CENTURION 07
AUDIOGONIC 07, 36	CGB 42
BASIC LINE 41, 44	CIMLINE 44
BAUR 31, 07, 42	CLARIVOX 07
BEKO 38	CLATRONIC 38
CONTEC 44	CONDOR 38
CROSLEY 32	MARK 07
CROWN 38, 44	MATSUI 07, 39, 40, 42, 44, 47, 48
CRYSTAL 42	MCMICHAEL 34
CYBERTRON 41	MEDIATOR 07
DAEWOO 07, 44, 56	MEMOREX 44
DAINICHI 41	METZ 31
DANSAI 07	MINERVA 31, 53
DAYTON 44	MITSUBISHI 09, 10, 02, 21, 31
DECCA 07, 48	MULTITECH 44, 49
DIXI 07, 44	NEC 59
DUMONT 53	NECKERMANN 31, 07
ELIN 07	NEI 07, 42
ELITE 41	NIKKAI 05, 07, 41, 46, 48
ELTA 44	NOBLIKO 49
EMERSON 42	NOKIA 32, 42, 52
ERRES 07	NORDMENDE 32, 36, 51, 52
FERGUSON 07, 36, 51	OCEANIC 31, 32, 42
FINLANDIA 35, 43, 54	ORION 32, 07, 39, 40
FINLUX 32, 07, 45, 48, 53, 54	OSAKI 41, 46, 48
FIRSTLINE 40, 44	OSO 41
FISHER 32, 35, 38, 45	OSUME 48
FORMENTI 32, 07, 42	OTTO VERSAND 31, 32, 07, 42
FRONTECH 31, 42, 46	PALLADIUM 38
FRONTECH/PROTECH 32	PANAMA 46
FUJITSU 48	PANASONIC 31, 07, 08, 42, 22
FUNAI 40, 46, 58	PATHO CINEMA 42
GBC 32, 42	PAUSA 44
GE 00, 01, 08, 07, 10, 11, 17, 02, 28, 18	PHILCO 32, 42
GEC 07, 34, 48	PHILIPS 31, 07, 34, 56, 68
GELOSO 32, 44	PHOENIX 32
GENERAL 29	PHONOLA 07
GENEXXA 31, 41	PROFEX 42, 44
GOLDSTAR 10, 23, 21, 02, 07, 50	PROTECH 07, 42, 44, 46, 49
GOODMANS 07, 39, 47, 48, 56	QUELLE 31, 32, 07, 42, 45, 53
GORENJE 38	R-LINE 07
GPM 41	RADIOLA 07
GRAETZ 31, 42	RADIOSHACK 10, 23, 21, 02
GRANADA 07, 35, 42, 43, 48	RBM 53
GRADIENTE 30, 57	RCA 01, 10, 15, 16, 17, 18, 61, 62, 09
GRANDIN 18	REDIFFUSION 32, 42
GRUNDIG 31, 53	REX 31, 46
HANSEATIC 07, 42	ROADSTAR 41, 44, 46
HCM 18, 44	SABA 31, 36, 42, 51
HINARI 07, 41, 44	SAISHO 39, 44, 46
HISAWA 18	SALORA 31, 32, 42, 43
HITACHI 31, 33, 34, 36, 42, 43, 54, 06, 10, 24, 25, 18	SAMBERS 49
HUANYU 56	SAMSUNG 07, 38, 44, 46, 69, 70
HYPSON 07, 18, 46	SANYO 35, 45, 48, 21, 14, 91
ICE 46, 47	SBR 07, 34
IMPERIAL 38, 42	SCHAUB LORENZ 42
INDIANA 07	SCHNEIDER 07, 41, 47
INGELEN 31	SEG 42, 46
INTERFUNK 31, 32, 07, 42	SEI 32, 40, 49
INTERVISION 46, 49	SELECO 31, 42
	SHARP 02, 19, 27, 67, 90
	SIAREM 32, 49