 


# Part Names and Functions

## Remote Control

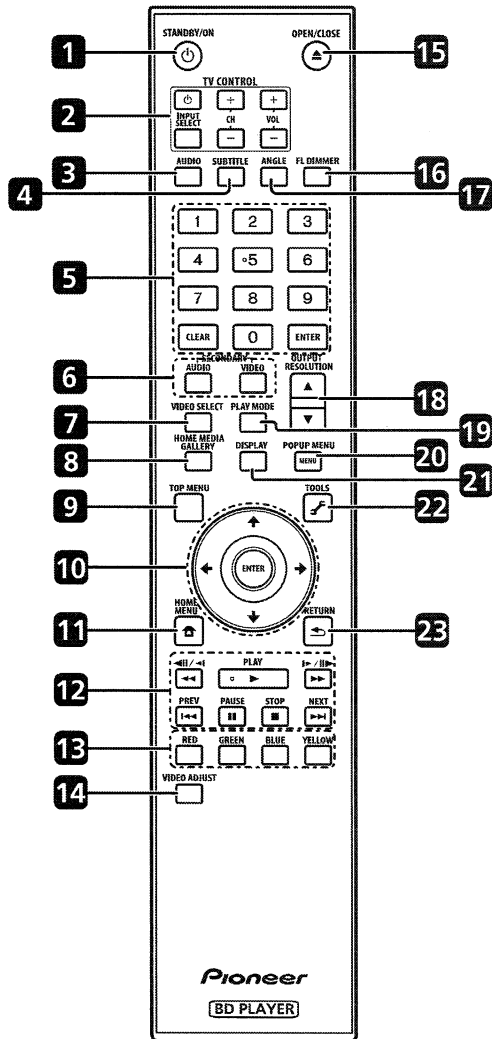

### 1 **⏻ STANDBY/ON**

Press to turn the power on and off.

### 2 **TV CONTROL**

Your TV can be controlled using the player's remote control (page 22).

**⏻** – Press to turn the TV's power on and off.

**INPUT SELECT** – Press to switch the TV's input.

**CH +/-** – Press to select the TV channel.

**VOL +/-** – Press to adjust the volume.

### 3 **AUDIO**

Press to switch the audio streams/channels (page 28).

### 4 **SUBTITLE**

Press to switch the subtitles (page 28).

**5 Number buttons** – Use these to select and play the title/ chapter/track you want to watch or listen to and to select items from menus.

**CLEAR** – Press to clear the numeric number, etc.

**ENTER** – Press to execute the selected item or enter a setting that has been changed, etc.

**6 SECONDARY AUDIO** – When playing a BD-ROM on which secondary audio is recorded, press to switch to the secondary audio (page 28).

**SECONDARY VIDEO** – When playing a BD-ROM on which secondary video (Picture-in-Picture) is recorded, press to switch to the secondary video (page 29).

### 7 **VIDEO SELECT**

Press to switch the terminal from which the video signals are output. Use to switch between digital output (HDMI output) and analog output (Component Video output, S-Video output or Video output) (**the signals are only output from the selected video output terminal**) (page 24).

### 8 **HOME MEDIA GALLERY**

Press to display/hide the Home Media Gallery screen (page 34).

### 9 **TOP MENU**

Press to display the top menu of the BD-ROM or DVD-Video.

**10  $\uparrow/\downarrow/\leftarrow/\rightarrow$**  – Use to select items, change settings and move the cursor.

**ENTER** – Press to execute the selected item or enter a setting that has been changed, etc.

### 11 **🏠 HOME MENU**

Press to display/hide the Home Menu.

**12  $\blacktriangleright$  PLAY** – Press to start playback.

**⏸ PAUSE** – Press to pause playback. Press again to restart playback.

**■ STOP** – Press to stop playback.

**⏮ PREV/▶ NEXT** – Press to skip to the beginning of the previous/next title/chapter/track/file (page 27).

**◀◀/◀|/▶** – Press during playback to start reverse scanning. While playback is paused, press for step reverse playback. Press and hold while playback is paused for reverse slow motion playback (pages 26 and 27).

**▶|/▶▶** – Press during playback to start forward scanning. While playback is paused, press for step forward playback. Press and hold while playback is paused for forward slow motion playback (pages 26 and 27).

### 13 **RED/GREEN/BLUE/YELLOW**

Use these to navigate BD-ROM menus.

### 14 **VIDEO ADJUST**

Press to display/hide the Video Adjust menu (page 37).

### 15 **▲ OPEN/CLOSE**

Press to open and close the disc tray.

### 16 **FL DIMMER**

Press to switch the brightness of the front panel display. The **FL OFF** indicator lights when **Off** is selected.

### 17 **ANGLE**

Press to switch the BD-ROM or DVD-Video camera angles (page 28).

**18 OUTPUT RESOLUTION**

Use these to switch the output video resolution from the **HDMI OUT** or **COMPONENT VIDEO** output terminals (page 25).

**19 PLAY MODE**

Press to display/hide the Play Mode screen (page 29).

**20 POP UP MENU/MENU**

Press to display the BD-ROM or DVD-Video menus.

**21 DISPLAY**

Press to display disc information (page 29).

**22  TOOLS**

 
Press to display/hide the **TOOLS** menu (page 23).

**23  RETURN**

Press to return to the previous screen.

## Front Panel

---

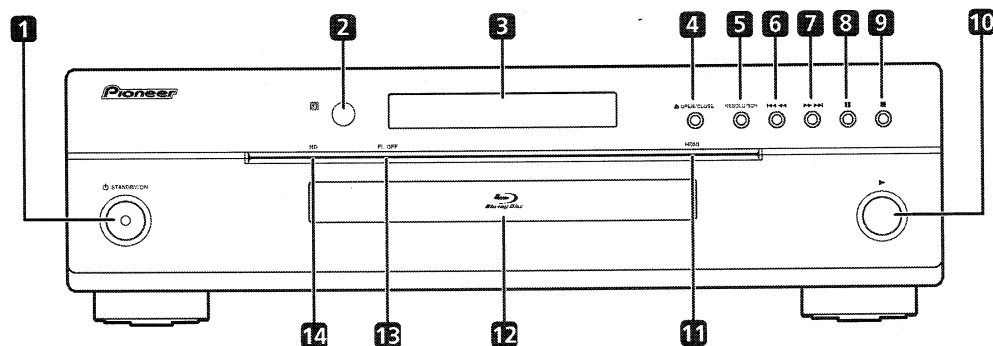**1  STANDBY/ON**

Press to turn the power on and off.

**2 Remote control sensor**

Point the remote control to this, then operate it within approximately 23 feet.

The player may have trouble capturing remote control signals if there is a fluorescent light nearby. If this happens, move the player away from the fluorescent light.

**3 Front panel display****4  OPEN/CLOSE**

Press to open and close the disc tray.

**5 RESOLUTION**

Press to switch the output video resolution from the HDMI output or component video output terminals (page 25).

**6 **

Press to skip to the beginning of the previous title/chapter/track/file. Press and hold to start reverse scanning (pages 26 and 27).

**7 **

Press to skip to the beginning of the next title/chapter/track/file. Press and hold to start forward scanning (pages 26 and 27).

**8 **

Press during playback to pause. Press again to restart playback.

**9 **

Press to stop playback.

**10 **

Press to start playback.

**11 HDMI indicator**

This lights when video signals from the HDMI terminal is output (page 14).

**12 Disc tray****13 FL OFF indicator**

 
This lights when **Off** is selected with **FL DIMMER**.

**14 HD indicator**

This lights when an HDMI cable is connected and video signals are being output with a resolution of 1080/60i, 1080/60p, 1080/24p or 720/60p. It also lights when a component video cable is connected and video signals are being output with a resolution of 1080/60i or 720/60p.

### 10 Finish the Setup Navigator menu.

Use **←/→** to select **Finish**, then press **ENTER**.

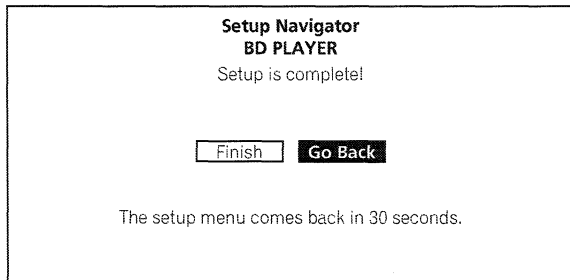

To redo the settings from the start, select **Go Back**.

Depending on the output terminal setting of step 4 or the HDMI cable being used, it may happen that no picture and/or sound is output. If this happens, the setup returns to step 4 if there is no operation for over 30 seconds. Once the setup returns to step 4, redo the settings according to the connected devices and the HDMI cable being used.

### ❖ About the screen saver

The screen saver is automatically activated if there is no operation for over 1 minute after playback is stopped or paused. The screen saver turns off when an operation is performed on the player or remote control.


The screen saver is automatically activated if there is no operation for over 1 minute after the Home Menu or Home Media Gallery is displayed while playing a BD or DVD.

 
With CDs and music files, the screen saver is automatically activated if no button is operated for over 1 minute, even while the CD or music file is playing.

## Operating the TV with the player's remote control

When the manufacturer code for your brand of TV is set on the player's remote control, the TV can be operated using the player's remote control.


### 1 Input the 2-digit manufacturer code.

Press the number buttons (0 to 9) to input the code while pressing **TV CONTROL** .

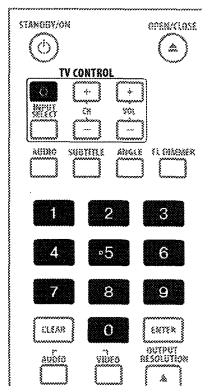

- If you make a mistake when inputting the code, start over from the beginning.
- When there are multiple codes for a manufacturer, try inputting them in the indicated order until the TV can be operated.

### 2 Check that the TV can be operated.

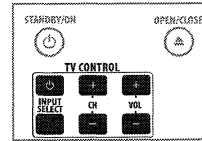 

### Caution

- For some models it may not be possible to operate the TV with the player's remote control, even for TVs of brands listed on the manufacturer code list.
- The setting may be restored to the default after the batteries are replaced. If this happens, reset it.

## TV Preset code list

### Manufacturer Code(s)

<b>PIONEER</b> 00, 31, 32, 07, 36, 42, 51	<b>ELIN</b> 07
<b>ACURA</b> 44	<b>ELITE</b> 41
<b>ADMIRAL</b> 31	<b>ELTA</b> 44
<b>AIWA</b> 60	<b>EMERSON</b> 42
<b>AKAI</b> 32, 35, 42	<b>ERRES</b> 07
<b>AKURA</b> 41	<b>FERGUSON</b> 07, 36, 51
<b>ALBA</b> 07, 39, 41, 44	<b>FINLANDIA</b> 35, 43, 54
<b>AMSTRAD</b> 42, 44, 47	<b>FINLUX</b> 32, 07, 45, 48, 53, 54
<b>ANITECH</b> 44	<b>FIRSTLINE</b> 40, 44
<b>ASA</b> 45	<b>FISHER</b> 32, 35, 38, 45
<b>ASUKA</b> 41	<b>FORMENTI</b> 32, 07, 42
<b>AUDIOGONIC</b> 07, 36	<b>FRONTECH</b> 31, 42, 46
<b>BASIC LINE</b> 41, 44	<b>FRONTECH/PROTECH</b> 32
<b>BAUR</b> 31, 07, 42	<b>FUJITSU</b> 48
<b>BEKO</b> 38	<b>FUNAI</b> 40, 46, 58
<b>BEON</b> 07	<b>GBC</b> 32, 42
<b>BLAUPUNKT</b> 31	<b>GE</b> 00, 01, 08, 07, 10, 11, 17, 02, 28, 18
<b>BLUE SKY</b> 41	<b>GEC</b> 07, 34, 48
<b>BLUE STAR</b> 18	<b>GELOSO</b> 32, 44
<b>BPL</b> 18	<b>GENERAL</b> 29
<b>BRANDT</b> 36	<b>GENEXXA</b> 31, 41
<b>BTC</b> 41	<b>GOLDSTAR</b> 10, 23, 21, 02, 07, 50
<b>BUSH</b> 07, 41, 42, 44, 47, 56	<b>GOODMANS</b> 07, 39, 47, 48, 56
<b>CASCADE</b> 44	<b>GORENJE</b> 38
<b>CATHAY</b> 07	<b>GPM</b> 41
<b>CENTURION</b> 07	<b>GRAETZ</b> 31, 42
<b>CGB</b> 42	<b>GRANADA</b> 07, 35, 42, 43, 48
<b>CIMLINE</b> 44	<b>GRADIENTE</b> 30, 57
<b>CLARIVOX</b> 07	<b>GRANDIN</b> 18
<b>CLATRONIC</b> 38	<b>GRUNDIG</b> 31, 53
<b>CONDOR</b> 38	<b>HANSEATIC</b> 07, 42
<b>CONTEC</b> 44	<b>HCM</b> 18, 44
<b>CROSLEY</b> 32	<b>HINARI</b> 07, 41, 44
<b>CROWN</b> 38, 44	<b>HISAWA</b> 18
<b>CRYSTAL</b> 42	<b>HITACHI</b> 31, 33, 34, 36, 42, 43, 54, 06, 10, 24, 25, 18
<b>CYBERTRON</b> 41	<b>HUANYU</b> 56
<b>DAEWOO</b> 07, 44, 56	<b>HYPSON</b> 07, 18, 46
<b>DAINICHI</b> 41	<b>ICE</b> 46, 47
<b>DANSAI</b> 07	<b>IMPERIAL</b> 38, 42
<b>DAYTON</b> 44	<b>INDIANA</b> 07
<b>DECCA</b> 07, 48	<b>INGELEIN</b> 31
<b>DIXI</b> 07, 44	<b>INTERFUNK</b> 31, 32, 07, 42
<b>DUMONT</b> 53	



### Note

- The factory setting is **PIONEER 00**.

 
 
INTERVISION	46, 49
ISUKAI	41
ITC	42
ITT	31, 32, 42
JEC	05
JVC	13, 23
KAISUI	18, 41, 44
KAPSCH	31
KENDO	42
KENNEDY	32, 42
KORPEL	07
KOYODA	44
LEYCO	07, 40, 46, 48
LIESENK&TTER	07
LOEWE	07
LUXOR	32, 42, 43
M-ELECTRONIC	31, 44, 45, 54, 56, 07, 36, 51
MAGNADYNE	32, 49
MAGNAFON	49
MAGNAVOX	07, 10, 03, 12, 29
MANESTH	39, 46
MARANTZ	07
MARK	07
MATSUI	07, 39, 40, 42, 44, 47, 48
MCMICHAEL	34
MEDIATOR	07
MEMOREX	44
METZ	31
MINERVA	31, 53
MITSUBISHI	09, 10, 02, 21, 31
MULTITECH	44, 49
NEC	59
NECKERMANN	31, 07
NEI	07, 42
NIKKAI	05, 07, 41, 46, 48
NOBLIKO	49
NOKIA	32, 42, 52
NORDMENDE	32, 36, 51, 52
OCEANIC	31, 32, 42
ORION	32, 07, 39, 40
OSAKI	41, 46, 48
OSO	41
OSUME	48
OTTO VERSAND	31, 32, 07, 42
PALLADIUM	38
PANAMA	46
PANASONIC	31, 07, 08, 42, 22
PATHO CINEMA	42
PAUSA	44
PHILCO	32, 42
PHILIPS	31, 07, 34, 56, 68
PHOENIX	32
PHONOLA	07
PROFEX	42, 44
PROTECH	07, 42, 44, 46, 49
QUELLE	31, 32, 07, 42, 45, 53
R-LINE	07
RADIOLA	07
RADIOSHACK	10, 23, 21, 02
RBM	53
RCA	01, 10, 15, 16, 17, 18, 61, 62, 09
REDIFFUSION	32, 42
REX	31, 46
ROADSTAR	41, 44, 46
SABA	31, 36, 42, 51
SAISHO	39, 44, 46
SALORA	31, 32, 42, 43
SAMBERS	49
SAMSUNG	07, 38, 44, 46, 69, 70
SANYO	35, 45, 48, 21, 14, 91
SBR	07, 34
SCHAUB LORENZ	42
SCHNEIDER	07, 41, 47
SEG	42, 46
SEI	32, 40, 49
SELECO	31, 42
SHARP	02, 19, 27, 67, 90
SIAREM	32, 49
SIEMENS	31
SINUDYNE	32, 39, 40, 49
SKANTIC	43
SOLAVOX	31
SONOKO	07, 44
SONOLOR	31, 35
SONTEC	07
SONY	04
SOUNDWAVE	07
STANDARD	41, 44
STERN	31
SUSUMU	41
SYSLINE	07
TANDY	31, 41, 48
TASHIKO	34
TATUNG	07, 48
TEC	42
TELEAVIA	36
TELEFUNKEN	36, 37, 52
TELETECH	44
TENSAI	40, 41
THOMSON	36, 51, 52, 63
THORN	31, 07, 42, 45, 48
TOMASHI	18
TOSHIBA	05, 02, 26, 21, 53
TOWADA	42
ULTRAVOX	32, 42, 49
UNIDEN	92
UNIVERSUM	31, 07, 38, 42, 45, 46, 54
VESTEL	07
VICTOR	13
VOXSON	31
WALTHAM	43
WATSON	07
WATT RADIO	32, 42, 49
WHITE WESTINGHOUSE	07
YOKO	07, 42, 46
ZENITH	03, 20

## Using the TOOLS menu



Various functions can be called out according to the player's operating status.


### 1 Display the TOOLS menu.

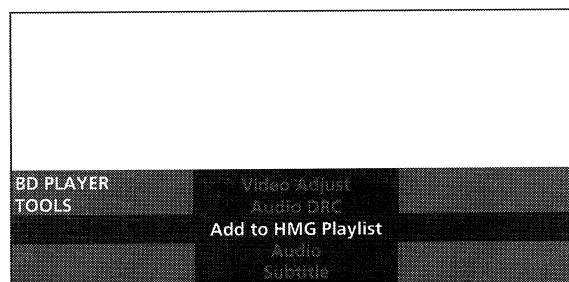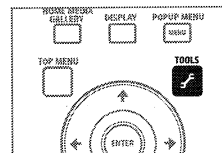Press  **TOOLS**.



### 2 Select and set the item.

 Use / to select, then press **ENTER**.

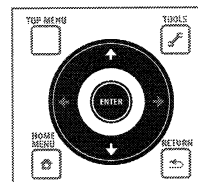

### Note

- Items that cannot be changed are displayed in gray. The items that can be selected depend on the player's status.

### ❖ To close the TOOLS menu

Press  **TOOLS** or  **RETURN**.

### ❖ TOOLS menu item list

Item	Description
Output Video Resolution	Switch the output video resolution from the various output terminals (page 25).
Play from Beginning	Play the selected title, track or file from the start.
Play Mode	Display the Play Mode screen (page 29).
Angle	Switch the BD-ROM/DVD-Video disc's camera angles (page 28).
Subtitle	Switch the subtitles (page 28).
Audio	Switch the audio streams/channels (page 28).
Secondary Audio	Switch the BD-ROM's secondary audio streams/channels (page 28).
Secondary Video	Switch the BD-ROM's secondary video (Picture-in-Picture) (page 29).
Original/Play List	Switch the DVD-R/-RW's (VR format) list screen between the original list and the playlist.

# Language Code Table and Country/Area Code Table

## Language Code Table

### Language name (language code), input code

Japanese (ja/jpn), <b>1001</b>	Dzongkha (dz/dzo), <b>0426</b>	Kirghiz (ky/kir), <b>1125</b>	Sinhalese (si/sin), <b>1909</b>
English (en/eng), <b>0514</b>	Esperanto (eo/epo), <b>0515</b>	Latin (la/lat), <b>1201</b>	Slovak (sk/slk), <b>1911</b>
French (fr/fra), <b>0618</b>	Estonian (et/est), <b>0520</b>	Lingala (ln/lin), <b>1214</b>	Slovenian (sl/slv), <b>1912</b>
German (de/deu), <b>0405</b>	Basque (eu/eus), <b>0521</b>	Lao (lo/lao), <b>1215</b>	Samoan (sm/smo), <b>1913</b>
Italian (it/ita), <b>0920</b>	Persian (fa/fas), <b>0601</b>	Lithuanian (lt/lit), <b>1220</b>	Shona (sn/sna), <b>1914</b>
Spanish (es/spa), <b>0519</b>	Finnish (fi/fin), <b>0609</b>	Latvian (lv/lav), <b>1222</b>	Somali (so/som), <b>1915</b>
Chinese (zh/zho), <b>2608</b>	Fijian (fj/fij), <b>0610</b>	Malagasy (mg/mlg), <b>1307</b>	Albanian (sq/sqi), <b>1917</b>
Dutch (nl/nld), <b>1412</b>	Faroese (fo/fao), <b>0615</b>	Maori (mi/mri), <b>1309</b>	Serbian (sr/srp), <b>1918</b>
Portuguese (pt/por), <b>1620</b>	Frisian (fy/fry), <b>0625</b>	Macedonian (mk/mkd), <b>1311</b>	Swati (ss/ssw), <b>1919</b>
Swedish (sv/swe), <b>1922</b>	Irish (ga/gle), <b>0701</b>	Malayalam (ml/mal), <b>1312</b>	Sotho, Southern (st/sot), <b>1920</b>
Russian (ru/rus), <b>1821</b>	Scots-Gaelic (gd/gla), <b>0704</b>	Mongolian (mn/mon), <b>1314</b>	Sundanese (su/sun), <b>1921</b>
Korean (ko/kor), <b>1115</b>	Galician (gl/glg), <b>0712</b>	Moldavian (mo/mol), <b>1315</b>	Swahili (sw/swa), <b>1923</b>
Greek (el/ell), <b>0512</b>	Guarani (gn/grn), <b>0714</b>	Marathi (mr/mar), <b>1318</b>	Tamil (ta/tam), <b>2001</b>
Afar (aa/aar), <b>0101</b>	Gujarati (gu/guj), <b>0721</b>	Malay (ms/msa), <b>1319</b>	Telugu (te/tel), <b>2005</b>
Abkhazian (ab/abk), <b>0102</b>	Hausa (ha/hau), <b>0801</b>	Maltese (mt/mlt), <b>1320</b>	Tajik (tg/tgk), <b>2007</b>
Afrikaans (af/afz), <b>0106</b>	Hindi (hi/hin), <b>0809</b>	Burmese (my/mya), <b>1325</b>	Thai (th/tha), <b>2008</b>
Amharic (am/amh), <b>0113</b>	Croatian (hr/hrv), <b>0818</b>	Nauru (na/nau), <b>1401</b>	Tigrinya (ti/tir), <b>2009</b>
Arabic (ar/ara), <b>0118</b>	Hungarian (hu/hun), <b>0821</b>	Nepali (ne/nep), <b>1405</b>	Turkmen (tk/tuk), <b>2011</b>
Assamese (as/asm), <b>0119</b>	Armenian (hy/hye), <b>0825</b>	Norwegian (no/nor), <b>1415</b>	Tagalog (tl/tgl), <b>2012</b>
Aymara (ay/aym), <b>0125</b>	Interlingua (ia/ina), <b>0901</b>	Occitan (oc/oci), <b>1503</b>	Tswana (tn/tsn), <b>2014</b>
Azerbaijani (az/aze), <b>0126</b>	Interlingue (ie/ile), <b>0905</b>	Oromo (om/orm), <b>1513</b>	Tonga (Tonga Islands) (to/ton), <b>2015</b>
Bashkir (ba/bak), <b>0201</b>	Inupiaq (ik/ikp), <b>0911</b>	Oriya (or/ori), <b>1518</b>	Turkish (tr/tur), <b>2018</b>
Belarusian (be/bel), <b>0205</b>	Indonesian (in/ind), <b>0914</b>	Panjabi (pa/pan), <b>1601</b>	Tsonga (ts/tso), <b>2019</b>
Bulgarian (bg/bul), <b>0207</b>	Icelandic (is/isl), <b>0919</b>	Polish (pl/pol), <b>1612</b>	Tatar (tt/tat), <b>2020</b>
Bihari (bh/bih), <b>0208</b>	Hebrew (iw/heb), <b>0923</b>	Pushto (ps/pus), <b>1619</b>	Twi (tw/twi), <b>2023</b>
Bislama (bi/bis), <b>0209</b>	Yiddish (ji/yid), <b>1009</b>	Quechua (qu/que), <b>1721</b>	Ukrainian (uk/ukr), <b>2111</b>
Bengali (bn/ben), <b>0214</b>	Javanese (jw/jav), <b>1023</b>	Rhaeto-Romance (rm/roh), <b>1813</b>	Urdu (ur/urd), <b>2118</b>
Tibetan (bo/bod), <b>0215</b>	Georgian (ka/kat), <b>1101</b>	Rundi (rn/run), <b>1814</b>	Uzbek (uz/uzb), <b>2126</b>
Breton (br/bre), <b>0218</b>	Kazakh (kk/kaz), <b>1111</b>	Romanian (ro/ron), <b>1815</b>	Vietnamese (vi/vie), <b>2209</b>
Catalan (ca/cat), <b>0301</b>	Kalaallisut (kl/kal), <b>1112</b>	Kinyarwanda (rw/kin), <b>1823</b>	Volapük (vo/vol), <b>2215</b>
Corsican (co/cos), <b>0315</b>	Khmer (km/khm), <b>1113</b>	Sanskrit (sa/san), <b>1901</b>	Wolof (wo/wol), <b>2315</b>
Czech (cs/ces), <b>0319</b>	Kannada (kn/kan), <b>1114</b>	Sindhi (sd/snd), <b>1904</b>	Xhosa (xh/xho), <b>2408</b>
Welsh (cy/cym), <b>0325</b>	Kashmiri (ks/kas), <b>1119</b>	Sango (sg/sag), <b>1907</b>	Yoruba (yo/yor), <b>2515</b>
Danish (da/dan), <b>0401</b>	Kurdish (ku/kur), <b>1121</b>	Serbo-Croatian (sh/scr), <b>1908</b>	Zulu (zu/zul), <b>2621</b>

## Country/Area Code Table

### Country/Area name, input code, Country/Area code

Anguilla, <b>0109, ai</b>	Dominican Republic, <b>0415, do</b>	Liechtenstein, <b>1209, li</b>	San Marino, <b>1913, sm</b>
Antigua and Barbuda, <b>0107, ag</b>	Estonia, <b>0505, ee</b>	Lithuania, <b>1220, lt</b>	Singapore, <b>1907, sg</b>
Argentina, <b>0118, ar</b>	Finland, <b>0609, fi</b>	Luxembourg, <b>1221, lu</b>	Slovakia, <b>1911, sk</b>
Armenia, <b>0113, am</b>	France, <b>0618, fr</b>	Macedonia, the Former Yugoslav Republic of, <b>1311, mk</b>	Slovenia, <b>1909, si</b>
Australia, <b>0121, au</b>	Georgia, <b>0705, ge</b>	Malaysia, <b>1325, my</b>	Spain, <b>0519, es</b>
Austria, <b>0120, at</b>	Germany, <b>0405, de</b>	Malta, <b>1320, mt</b>	Suriname, <b>1918, sr</b>
Azerbaijan, <b>0126, az</b>	Greece, <b>0718, gr</b>	Mexico, <b>1324, mx</b>	Sweden, <b>1905, se</b>
Bahamas, <b>0219, bs</b>	Greenland, <b>0712, gl</b>	Moldova, Republic of, <b>1304, md</b>	Switzerland, <b>0308, ch</b>
Barbados, <b>0202, bb</b>	Grenada, <b>0704, gd</b>	Monaco, <b>1303, mc</b>	Taiwan, Province of China, <b>2023, tw</b>
Belarus, <b>0225, by</b>	Guyana, <b>0725, gy</b>	Montserrat, <b>1319, ms</b>	Tajikistan, <b>2010, tj</b>
Belgium, <b>0205, be</b>	Haiti, <b>0820, ht</b>	Netherlands, <b>1412, nl</b>	Thailand, <b>2008, th</b>
Belize, <b>0226, bz</b>	Hong Kong, <b>0811, hk</b>	New Zealand, <b>1426, nz</b>	Trinidad and Tobago, <b>2020, tt</b>
Bermuda, <b>0213, bm</b>	Hungary, <b>0821, hu</b>	Norway, <b>1415, no</b>	Tunisia, <b>2014, tn</b>
Brazil, <b>0218, br</b>	Iceland, <b>0919, is</b>	Pakistan, <b>1611, pk</b>	Turkey, <b>2018, tr</b>
Bulgaria, <b>0207, bg</b>	India, <b>0914, in</b>	Peru, <b>1605, pe</b>	Turkmenistan, <b>2013, tm</b>
Canada, <b>0301, ca</b>	Indonesia, <b>0904, id</b>	Philippines, <b>1608, ph</b>	Turks and Caicos Islands, <b>2003, tc</b>
Cayman Islands, <b>1125, ky</b>	Ireland, <b>0905, ie</b>	Poland, <b>1612, pl</b>	Ukraine, <b>2101, ua</b>
Chile, <b>0312, cl</b>	Israel, <b>0912, il</b>	Portugal, <b>1620, pt</b>	United Kingdom, <b>0702, gb</b>
China, <b>0314, cn</b>	Italy, <b>0920, it</b>	Puerto Rico, <b>1618, pr</b>	United States, <b>2119, us</b>
Colombia, <b>0315, co</b>	Jamaica, <b>1013, jm</b>	Romania, <b>1815, ro</b>	Uruguay, <b>2125, uy</b>
Croatia, <b>0818, hr</b>	Japan, <b>1016, jp</b>	Russian Federation, <b>1821, ru</b>	Uzbekistan, <b>2126, uz</b>
Cyprus, <b>0325, cy</b>	Kazakhstan, <b>1126, kz</b>	Saint Kitts and Nevis, <b>1114, kn</b>	Venezuela, <b>2205, ve</b>
Czech Republic, <b>0326, cz</b>	Korea, Republic of, <b>1118, kr</b>	Saint Lucia, <b>1203, lc</b>	Virgin Islands, British, <b>2207, vg</b>
Denmark, <b>0411, dk</b>	Kyrgyzstan, <b>1107, kg</b>	Saint Vincent and the Grenadines, <b>2203, vc</b>	
Dominica, <b>0413, dm</b>	Latvia, <b>1222, lv</b>		