


Remote control unit

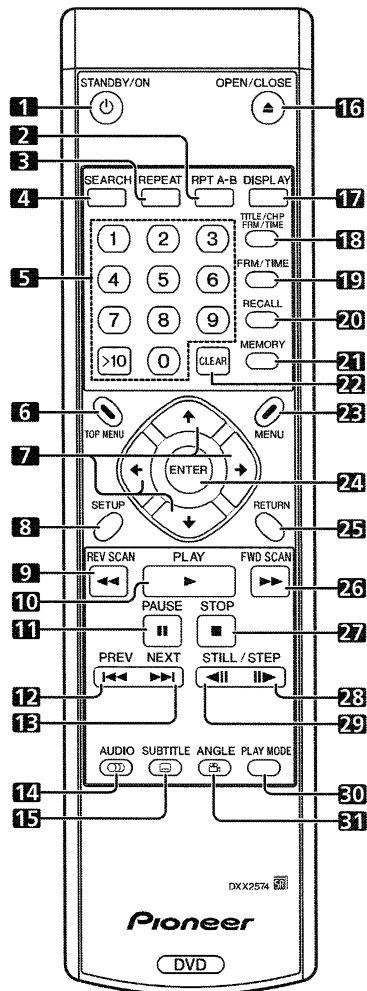

1 STANDBY/ON button (⏻)

Press to turn the player ON and OFF (standby mode).

2 RPT A-B button

Press to repeat play the specified section.

3 REPEAT button

Press to perform repeat play of individual chapters (or tracks), individual titles or all titles.

4 SEARCH button

Commences search.

5 Number buttons (0 to 9, >10)

Press to specify and play the desired title/chapter/track. Press to select an item in the menu screen. To select a 2-digit number, first press >10, and then enter the desired numbers.

6 TOP MENU button

Press to display the top menu of a DVD disc.

7 Cursor buttons (↑, ↓, ←, →)

Selects/changes items, or moves the cursor.

8 SETUP button

Press to open the **SETUP** menu.

Press and hold for one second to open the **ADV. SETUP** menu.

Press again to close the **SETUP** or **ADV. SETUP** menu.

9 REV SCAN button (◀◀)

Press for fast reverse scanning. Scanning speed will change in 3 levels each time the button is pressed.

10 PLAY button (▶)

Press to start playback.

11 PAUSE button (⏸)

During playback, press to pause playback of video/audio. Press again to resume normal playback.

12 PREV button (◀◀)

Press to jump to the beginning of the current chapter or track, then to previous chapters/tracks.

13 NEXT button (▶▶)

Press to jump to the next chapter or track.

14 AUDIO button

Press to switch the audio of the currently playing track.

15 SUBTITLE button

Press to select a subtitle display.

16 OPEN/CLOSE button (▲)

Press to open or close the disc tray.

17 DISPLAY button

Press to display disc information.

18 TITLE/CHP FRM/TIME button

Press to perform title/chapter/frame/time search.

19 FRM/TIME button

Press to perform frame/time search.

20 RECALL button

Press to display the COMMAND STACK call-up menu.

21 MEMORY button

Press to display COMMAND STACK input menu.

22 CLEAR button

Press to clear repeat playback, random playback, program playback and other settings.

23 MENU button

Press to display DVD disc menu, or the Disc Navigator if a DVD-RW, music CD or Video CD disc is loaded.

24 ENTER button

Press to execute the selected setting or item.

25 RETURN button

Press to return to previous menu screens when in screens such as **SETUP** menu screen or menu screen.

26 FWD SCAN button (▶▶)

Press to perform fast forward scanning. Scanning speed will change in 3 levels each time the button is pressed.

27 STOP button (■)

Press to stop disc playback.

28 FWD STILL/STEP button (⏪▶)

During playback, press to pause playback and display still image; press and hold to perform slow-motion playback. Press during still image for frame advance. Press during slow-motion playback to change playback speed.

29 REV STILL/STEP button (◀II)

During playback, press to pause playback and display still image; Press and hold for reverse slow-motion playback. Press during still image for frame reverse. Press during slow-motion playback to change reverse playback speed. (Enabled only during DVD playback.)

30 PLAY MODE button

Press to display the Play Mode menu.


31 ANGLE button (⌂)

Press to change the camera angle during DVD multi-angle scene playback.

Loading batteries in the remote control unit

Open the battery compartment cover on the back of the remote control unit and insert two AA/R6P batteries.

- Insert the batteries properly so that the positive (+) and negative (-) polarities of the batteries are aligned with the diagram in the compartment.

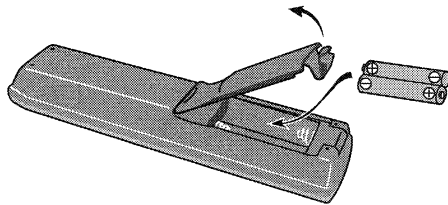

Important

- Do not mix new and old batteries together.
- Do not use different kinds of batteries together—although they may look similar, different batteries may have different voltages.
- Remove batteries when not using a device for a month or more, to prevent the batteries from leaking. In the cases of battery leakage, thoroughly wipe off leaked liquid and insert new batteries.

When disposing of used batteries, please comply with governmental regulations or environmental public instruction's rules that apply in your country/area.

D3-4-2-3-1_En

WARNING

Do not use or store batteries in direct sunlight or other excessively hot place, such as inside a car or near a heater. This can cause batteries to leak, overheat, explode or catch fire. It can also reduce the life or performance of batteries.

D3-4-2-3-3_En

Operating range of remote control unit

Point the remote control unit toward the remote control sensor on the front panel of the main unit to operate. The remote control has a range of up to approximately 7 m, and can be operated in angles up to 30° to left or right from the front of the remote control sensor.

- The remote control unit may not operate correctly if a strong light such as daylight or a fluorescent light shines directly on the remote control sensor.

Operation using a mouse

In addition to the remote control unit, a mouse can also be used to operate the DVD-V8000 if desired.

A USB mouse can be connected to either of the **MOUSE/MEMORY** ports located in the front and rear panels.

The following operations can be performed by using a mouse:

1. SETUP menu

Select and change settings by left clicking on the mouse when the cursor pointer appears as the hand shape (☞). Right click to return to the previous screen.

2. ADV. SETUP menu

See "Advanced Setup Menu (Settings for Commercial Use)" on page 54.

3. Video blackboard function

This mode allows you use the mouse or pen tablet to draw freehand illustrations on the screen.

See "Video Blackboard Function" on page 75.

4. Player control functions

The player control icon appears, and the mouse can be used to issue play commands.

See "About the player control panel" on page 74.


5. Using the scroll wheel during image playback

The DVD-V8000 supports the use of the mouse's scroll wheel to perform operations during video playback.

(1) Clicking the scroll wheel

Click the scroll wheel during playback to display still image. Click the scroll wheel during still image display to resume normal playback.

Play/Still image

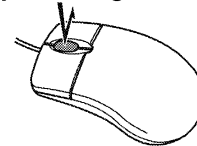

(2) Scrolling backwards



Rotate the scroll wheel backwards to fast-forward the playback. Scroll the wheel backwards during still image display to perform frame advance.

(3) Scrolling forwards

Rotate the scroll wheel forwards to fast-reverse the playback. Scroll the wheel forwards during still image display to perform frame reverse (DVD disc only).

During playback: ▶▶
During still image: II▶

During playback: ◀◀
During still image: ◀II (DVD only)

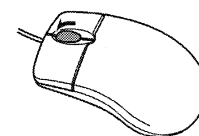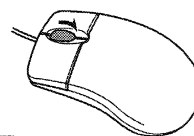

Note

- The same operations can be performed when playing CDs. Clicking the mouse wheel during playback engages the pause mode, and clicking the wheel during the pause releases the pause and resumes playback. Rotating the mouse wheel during playback engages the fast forward and fast reverse functions; rotating the wheel, however, has no effect when the player is in the pause mode.

Advanced Setup Menu (Settings for Commercial Use)

In addition to the normal **SETUP** menu, DVD-V8000 includes an **ADV. SETUP** menu for selecting the following 27 special functions:

- (1) **COMMAND STACK**
- (2) **WEEKLY TIMER**
- (3) **POWER ON START**
- (4) **TITLE PLAY MODE**
- (5) **KEY LOCK**
- (6) **REPEAT MODE**
- (7) **SERIAL PORT**
- (8) **BAUD RATE**
- (9) **REV STEP/REV PLAY**


- (10) **BLACKBOARD LOCK**
- (11) **PLAYER CONTROL PANEL**
- (12) **SETUP LOCK (MOUSE)**
- (13) **GOTO DVD-MENU**
- (14) **MOUSE CURSOR**
- (15) **EXTEND TERMINAL**
- (16) **SYNC OUT(DURING SQ)**
- (17) **EXTERNAL SYNC**
- (18) **MONITOR OSD**

- (19) **AUTO PASS THROUGH**
- (20) **PLAY START MODE**
- (21) **LOAD SETUP incl WEEKLY TIMER**
- (22) **SAVE SETUP incl WEEKLY TIMER**
- (23) **LOAD COMMAND STACK**
- (24) **SAVE COMMAND STACK**
- (25) **LOAD WEEKLY TIMER**
- (26) **SAVE WEEKLY TIMER**
- (27) **SAVE ERROR LOG**

ADV.SETUP	page 1/3
>COMMAND STACK	
WEEKLY TIMER	OFF
POWER ON START	OFF
TITLE PLAY MODE	Single
KEY LOCK	OFF
REPEAT MODE	OFF
SERIAL PORT	15 Pin
BAUD RATE	4800bps
REV STEP/REV PLAY	Resolution

ADV.SETUP	page 2/3
>BLACKBOARD LOCK	OFF
PLAYER CONTROL PANEL	Selectable
SETUP LOCK (MOUSE)	OFF
GOTO DVD-MENU	OFF
MOUSE CURSOR	ON
EXTEND TERMINAL	Standard
SYNC OUT(DURING SQ)	OFF
EXTERNAL SYNC	OFF
MONITOR OSD	Bottom

ADV.SETUP	page 3/3
>AUTO PASS THROUGH	OFF
PLAY START MODE	Title1
LOAD SETUP incl WEEKLY TIMER	
SAVE SETUP incl WEEKLY TIMER	
LOAD COMMAND STACK	
SAVE COMMAND STACK	
LOAD WEEKLY TIMER	
SAVE WEEKLY TIMER	
SAVE ERROR LOG	

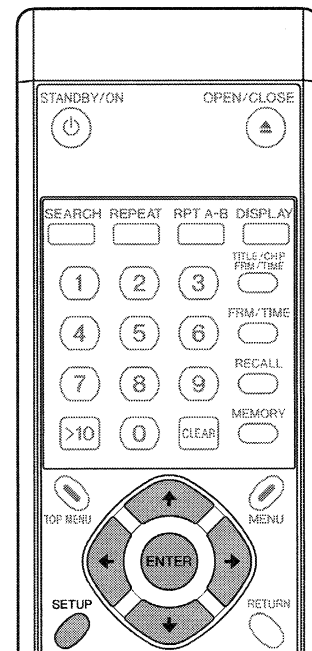

1. To access the ADV. SETUP menu

Press and hold the **SETUP** button (on remote control unit or main unit) depressed for one second. The screen displays the Advanced Setup (**ADV. SETUP**) menu as shown in the illustration.

When the cursor is placed on [**COMMAND STACK**] and the **ENTER** button pressed, **Command Stack** entry menu appears. For [**WEEKLY TIMER**], [**POWER ON START**], and [**KEY LOCK**], use the cursor buttons (←, →) to alternate between [**ON/OFF**]; when [**ON**] is selected and the **ENTER** button is pressed, the next menu will allow detailed settings.

For [**EXTEND TERMINAL**], use the cursor buttons (←, →) to select [**Standard/User**]. When [**User**] is selected, pressing the **ENTER** button will allow settings to be entered at the next menu.

For other items, use the up/down cursor buttons (↑, ↓) on this menu page to select the item, then use the left/right cursor buttons (←, →) to select the [**ON/OFF**] or other value.

Note

- **ADV. SETUP** menu items can be set using the mouse as well as the remote control unit. Place the mouse cursor over the item you wish to set and click the left mouse button to select the item. Clicking on the **page** number at the upper right of the display screen will change the page being displayed. When an item is selected, clicking the left or right mouse button will allow the item's value to be changed.
- When the [**WEEKLY TIMER**], [**POWER ON START**], or [**KEY LOCK**] menu items are set to [**ON**], and the left mouse button is clicked, a menu will appear allowing detailed values for each item to be changed.
- On the [**EXTEND TERMINAL**] menu, when [**User**] is selected and the left mouse button is clicked, a menu will appear allowing detailed values to be changed.