


:: Remote Control Overview

- 1 TV (Power)** Power TV on or off. (See page 26 to program the remote to operate your TV.)
- 2 ReplayTV (Power)** Power ReplayTV on or off.
- 3 0-9** Tune to channels; jump to a channel in the Channel Guide.
- 4 Enter** Display a current show's menu while in the Channel Guide.
- 5 Channel Guide** Display TV listings.
- 6 Zones** Search TV listings by category.
- 7 Arrow (Navigation) Buttons** Move on-screen highlight.
- 8 Select** Choose on-screen options; view channel surfing display while watching live TV.
- 9 Exit** Exit on-screen menus.
- 10 Play/Slow** Play/slow motion.
- 11 QuickSkip** Skip 30 seconds of a recorded or delayed show.
- 12 Fast Forward** Fast forward recorded or delayed show; frame-by-frame advance while paused.
- 13 Stop** Stop playback of show.
- 14 Return to Live** Return to live TV while watching a show delayed.
- 15 Channel ▲/▼** Change channels; move one screen at a time up or down in guides and menus.
- 16 Mute** Mute the volume of the programmed TV.
- 17 Volume +/-** Adjust the volume of the programmed TV.
- 18 Display** Program information about current show.
- 19 Commercial Advance** Turn COMMERCIAL ADVANCE on and off for the current show.
- 20 Rewind** Rewind show.
- 21 Instant Replay** Return 7 seconds and replay a segment.
- 22 Pause** Pause live TV and recorded shows.
- 23 Record** Record show from Channel Guide or while viewing live TV.
- 24 Menu** Display ReplayTV Main Menu.
- 25 Replay Guide** Play your recorded shows.
- 26 Jump** Jump between a recorded show and live TV, two live TV shows, or two recorded shows.

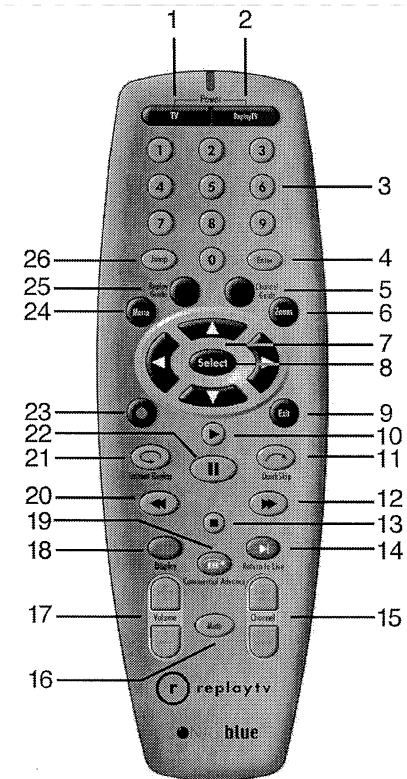

System Information

View the system information for your ReplayTV. This screen lists:

- the version of software your ReplayTV is using
- the Serial Number of your ReplayTV
- the Internet Serial Number of your ReplayTV
- the Inbound Port Number, if set
- the ReplayTV Service Key for Service Activation

:: Remote Control Setup

Follow these steps to program the remote control to operate your television, TV/VCR combo or TV/DVD combo. When programmed, the ReplayTV remote will control your TV's power and volume.

- 1 Press and hold the Mute and TV (Power) buttons until the LED blinks twice.
- 2 Enter the 4-digit code for your brand of television (see listings on pages 26-28).
 - For example, for Sony, press Mute and TV (Power) simultaneously, and then press 0-0-0-0.
 - If a valid code has been entered, the LED at the top of the remote will blink twice.
 - If an invalid code has been entered, there will be one long blink and the remote will revert to the previously programmed code.
- 3 To test the code, press the TV (Power) button on the remote control.
 - If your TV turns on/off, programming is complete.
 - If your TV does not turn on/off, try another code for your brand of television. Not all TVs can be programmed.



- *To clear all settings, press Mute + TV(Power), then press 9-8-1.*

Remote Control Setup Codes

3M 0737
 A-Mark 0003
 AOC 0030, 0019, 0003, 0052,
 0137, 0185
 Abex 0032
 Admiral 0093, 0463
 Advent 0761
 Adventura 0046
 Aik 0092
 Aiwa 0701
 Akai 0030, 0098, 0591
 Alaron 0179, 0183, 0216
 Ambassador 0177
 America Action 0180
 Ampro 0751
 Anam 0180, 0004, 0009, 0068
 Anam National 0055, 0161
 Apex Digital 0748
 Archer 0003
 Audinac 0391
 Audiovox 0451, 0180, 0003,
 0092, 0623
 Barco 0410, 0479
 Baysonic 0180
 Belcor 0019
 Bell & Howell 0154, 0016
 Bradford 0180
 Brockwood 0019
 Broksonic 0236, 0463, 0003,
 0426, 0642
 Bush 0355
 CCE 0037, 0217, 0329
 CXC 0180
 Candle 0030, 0056, 0046, 0186
 Carnivale 0030
 Carver 0054, 0170
 Casio 0611

Celebrity 0000
 Cinerall 0451, 0092
 Citizen 0060, 0030, 0056, 0039,
 0046, 0092, 0186, 0280, 0561
 Clairtone 0185
 Compaq 0749, 0750
 Concerto 0056
 Contec 0180, 0157, 0158, 0185
 Craig 0180, 0161
 Crosley 0054
 Crown 0180, 0039, 0672
 Curtis Mathes 0047, 0054,
 0154, 0051, 0451, 0093, 0060,
 0030, 0145, 0056, 0016, 0039,
 0166, 0415, 0466, 0702, 0747
 Daewoo 0451, 0019, 0039,
 0066, 0067, 0091, 0092, 0623,
 0624
 Daytron 0019
 Denon 0145, 0511
 Dumont 0017, 0019
 Dwin 0720, 0774
 Dynatech 0049
 Ectec 0391
 Eiki 0735
 Electroband 0000, 0185
 Electrohome 0381, 0389, 0409,
 0446
 Emerson 0154, 0236, 0463,
 0180, 0282, 0178, 0019, 0179,
 0039, 0038, 0158, 0177, 0181,
 0182, 0183, 0185, 0270, 0280,
 0623, 0624
 Envision 0030
 Fisher 0154, 0159
 Focus 0711
 Fujitsu 0179, 0643, 0683
 Funai 0180, 0179, 0171
 Futuretech 0180

GE 0047, 0051, 0451, 0093,
 0282, 0178, 0021, 0055, 0027,
 0029, 0135, 0138, 0174, 0251,
 0279, 0747
 Gibraltar 0017, 0030, 0019
 GoldStar 0030, 0178, 0019,
 0056, 0001, 0002, 0032, 0106,
 0409
 Goodmans 0360
 Gradiente 0053, 0056, 0170,
 0392
 Grundig 0037, 0195
 Grunpy 0180, 0179
 Hallmark 0178
 Harley Davidson 0179, 0043
 Harman/Kardon 0054, 0078
 Harvard 0180, 0068
 Hauppauge 0693
 Havermy 0093
 Hitachi 0145, 0056, 0016,
 0032, 0038, 0095, 0097, 0151,
 0173, 0227, 0279, 0409, 0413,
 0576, 0577, 0583
 InFocus 0736, 0738, 0739,
 0741, 0752, 0759
 Infinity 0054
 Innova 0037
 Inteq 0017
 JBL 0054
 JCB 0000
 JVC 0053, 0036, 0069, 0160,
 0169, 0182
 Jancil 0046
 Jensen 0050
 KEC 0180
 KMC 0106
 KTV 0180, 0030, 0039, 0183,
 0185, 0217, 0280
 Kamp 0216

Kawasho 0158, 0216, 0308
 Kaypani 0052
 Kenwood 0030, 0019
 Kloss 0024, 0046, 0078
 Konka 0628, 0632, 0638, 0703,
 0707
 LG 0056, 0442
 LXI 0047, 0054, 0154, 0156,
 0178, 0148, 0747
 Loewe 0136, 0633, 0693, 0694
 Logik 0016
 Luxman 0056
 MEI 0185
 MGA 0150, 0030, 0178, 0019,
 0155
 MTC 0060, 0030, 0019, 0056,
 0049, 0091, 0185, 0216
 Magnavox 0054, 0030, 0179,
 0020, 0024, 0028, 0036, 0096,
 0186, 0187, 0230, 0386
 Majestic 0016, 0015
 Marantz 0054, 0030, 0037,
 0444
 Matsushita 0250
 Megatron 0178, 0145, 0003
 Memorex 0154, 0250, 0463,
 0150, 0178, 0179, 0056, 0016,
 0106
 Mercury 0001
 Midland 0047, 0017, 0051,
 0039, 0032, 0135, 0747
 Minutz 0021
 Mitsubishi 0093, 0150, 0178,
 0019, 0014, 0098, 0155, 0331,
 0358, 0592
 Motorola 0093, 0055
 Multitech 0180, 0049, 0217
 NAD 0156, 0178, 0166

NEC 0030, 0019, 0056, 0036,
 0170, 0434, 0455, 0497, 0704
NTC 0092
Netsat 0037
Nikko 0030, 0178, 0092, 0317
Nisato 0391
Noblex 0430
Noshi 0018
On Command 0531, 0876
Onwa 0180
Optimus 0154, 0250, 0166
Optiview 0756
Optonica 0093, 0165
Orion 0236, 0463, 0179
Ovation 0734
Panasonic 0250, 0051, 0055,
 0162, 0226, 0338, 0375
Penney 0047, 0156, 0051, 0060,
 0030, 0178, 0021, 0019, 0018,
 0056, 0039, 0002, 0003, 0027,
 0032, 0110, 0135, 0138, 0149,
 0309, 0747
Philco 0054, 0463, 0030, 0145,
 0019, 0020, 0028, 0096, 0302
Philips 0054, 0037
Pilot 0030, 0019, 0039
Pioneer 0038, 0166, 0172, 0679
Portland 0019, 0039, 0092
Princeton 0685, 0700, 0717
Prism 0051
ProPresenter 0728, 0733
Proscan 0047, 0747

Proton 0178, 0003, 0031, 0052,
 0466
Proxima 0734, 0735, 0737,
 0742, 0743
Pulsar 0017, 0019
Quasar 0250, 0051, 0165,
 0055, 0219
RCA 0047, 0051, 0093, 0019,
 0018, 0029, 0038, 0090, 0135,
 0174, 0254, 0278, 0679, 0747
Radio Shack 0047, 0154, 0165,
 0180, 0030, 0178, 0019, 0056,
 0039, 0032, 0409, 0747
Realistic 0154, 0165, 0180,
 0030, 0178, 0019, 0056, 0039,
 0032
Rhapsody 0183, 0185, 0216
Runco 0017, 0030, 0251, 0494,
 0497, 0603, 0612
SKY 0037
SSS 0180, 0019
Sampo 0030, 0039, 0032, 0052,
 0100, 0110
Samsung 0060, 0030, 0178,
 0019, 0056, 0032, 0037, 0329,
 0408, 0427, 0482, 0702
Samsux 0039
Sansei 0451
Sansui 0463
Sanyo 0154, 0088, 0107, 0146,
 0159, 0232, 0484
Scimitsu 0019
Scotch 0178
Scott 0236, 0180, 0178, 0019,
 0179, 0309

Sears 0047, 0054, 0154, 0156,
 0178, 0179, 0056, 0015, 0146,
 0148, 0149, 0159, 0168, 0171,
 0281, 0747
Semivox 0180
Semp 0156
Sharp 0093, 0165, 0039, 0153,
 0157, 0220, 0281, 0386, 0398,
 0491, 0688, 0689
Shogun 0019
Signature 0016
Simpson 0186, 0187
Sinudyne 0347
Sony 0000, 0011, 0080, 0111,
 0273, 0353, 0699
Soundesign 0180, 0178, 0179,
 0186
Spectricon 0003, 0137
Squareview 0171
Starlite 0180
Supre-Macy 0046
Supreme 0000
Sylvania 0054, 0030, 0020,
 0028, 0065, 0096, 0171, 0381
Symphonic 0180, 0171
TMK 0178, 0056, 0177
TNCi 0017, 0709
Tandy 0093
Tashiko 0588
Tatung 0055, 0003, 0049, 0396
Technics 0250, 0051
Technol Ace 0179
Technovox 0007

Techwood 0051, 0056, 0003
Teknika 0054, 0180, 0150,
 0060, 0019, 0179, 0056, 0016,
 0039, 0092, 0175, 0186, 0312,
 0322
Telefunken 0056, 0074, 0101,
 0702
Telemagic 0735
Tera 0031
Thomson 0209, 0210
Toshiba 0154, 0156, 0060,
 0036, 0149
Tosonic 0185
Totevision 0039
Trical 0157
Ultra 0391
Universal 0027
Vector Research 0030
Victor 0053
Video Concepts 0098
Vidikron 0054, 0242
Vidtech 0178, 0019, 0036
Viking 0046, 0312
Wards 0054, 0165, 0030, 0178,
 0021, 0019, 0179, 0056, 0016,
 0020, 0027, 0028, 0029, 0080,
 0096, 0111, 0174, 0202
Waycon 0156
White Westinghouse 0463,
 0623, 0624
Yamaha 0030, 0019
Zenith 0017, 0463, 0016, 0092,
 0624
Zonda 0003

**Setup Codes for TV/
VCR Combinations**

Aiwa 0680
Broksonic 0479
Citizen 0278
Colt 0072
Daewoo 0278
Emerson 0278, 0479
Funai 0000
GE 0240
GoldStar 0037
Harley Davidson 0000
Hitachi 0000
Lloyd's 0000
Magnasonic 0278, 0593
Magnavox 0081, 0000
Magnin 0240
Memorex 0162, 0037
Optimus 0162, 0593
Orion 0479
Panasonic 0162
Penney 0037, 0240
Quasar 0162
RCA 0240
Sansui 0000, 0479
Sanyo 0240
Sears 0037, 0000
Sony 0032, 0000
Sylvania 0081
Symphonic 0000, 0593
Toshiba 0845
White Westinghouse 0278
Zenith 0000, 0479, 0637

**Setup Codes for TV/
DVD Combinations**

Broksonic 0695
Konka 0719, 0720
Philips 0854
RCA 1022
Sansui 0695
Sylvania 0821
Toshiba 0695, 1045

:: Remote Control Shortcuts

Show-watching Shortcuts

- To skip ahead a specific amount of time, enter the time in minutes then press QuickSkip.
- To go back a specific amount of time, enter the time in minutes then press Instant Replay.
- To go to a specific time within a recorded show, enter the time (for example, 02 to go to the second minute in the show), then press the Jump button.
- To skip to a certain time from the end of a show, enter the time in minutes then press Return to Live.

Channel Guide Shortcuts

- To jump ahead 12 hours, press the Fast Forward button.
- To go back 12 hours, press the Rewind button.
- To move one screen at a time, press the Channel ▲ / ▼ buttons.
- To go to a channel, enter the channel number and press the Select button.
- To tune to a current show, highlight the show and press the Select button.
- To display a current show's pop-up menu, highlight the show and press Enter.
- To go to a certain day, enter the number of days you wish to skip, then press Fast Forward.
- To go back to a certain day, enter the number of days you wish to return, then press Rewind.
- To go to a specific hour in the day, enter the hour (0-23), then press Jump.
- To return to the current time, press Return to Live.

Replay Guide Shortcuts

- To view the Replay Guide of the next ReplayTV on the network, press QuickSkip.
- To view the Replay Guide of the previous ReplayTV on the network, press Instant Replay.
- To return to viewing the local Replay Guide, highlight the Remote ReplayTV Finder and press Return to Live.
- Press Jump to go from the show content area to the categories to the Remote ReplayTV Finder.
- Press Return to Live with a category highlighted to go to the All Shows category.

Find Shows On-screen Keyboard Shortcuts

- To move to the next screen after typing a keyword, press the REC button.
- To erase a character, press the Rewind button.
- To insert a space, press the Fast Forward button.

Slide Show Control Shortcuts

- Select or Play: Start slide show playback.
- Rewind and Fast Forward: Speed up and slow down the presentation.
- QuickSkip: Move to the next slide.
- Instant Replay: Go back to the previous slide.
- Pause: Pause the slide show.
- Stop: Return to the Photo Viewer. If Play is pressed after Stop the slide show will begin again from the stopping point.
- Exit: Return to the Photo Viewer.

Channel Surfing Display Shortcuts

- To return to the current time, press Return to Live.

Record Options Screen Shortcuts

- To confirm the settings without scrolling down to “Done,” press REC.
- To return to the Find Shows keyboard, press Rewind.