


:: Remote Control Overview

- 1 ReplayTV (POWER)** Power ReplayTV on or off.
- 2 TV (POWER)** Power TV on or off. (See page 26 to program the remote to operate your TV.)
- 3 LIGHT** Illuminate top portion of remote control.
- 4 BYPASS** Bypass ReplayTV encoder manually.
- 5 INPUT** Switch among ReplayTV inputs.
- 6 TV/DVR** Switch between ReplayTV tuner and TV tuner.
- 7 ** Turn COMMERCIAL ADVANCE on and off for the current show.
- 8 CH /** Change channels; move one screen at a time up or down in guides and menus.
- 9 TV VOL +/-** Adjust the volume of the programmed TV.
- 10 REPLAY ZONES** Search TV listings by category.
- 11 DISPLAY** Program information about current show.
- 12 MUTE** Mute the volume of the programmed TV.
- 13 0-9** Tune to channels; jump to a channel in the Channel Guide.
- 14 JUMP** Jump between a recorded show and live TV, two live TV shows, or two recorded shows.
- 15 ENTER** Display a current show's menu while in the Channel Guide.
- 16 ARROW (NAVIGATION) BUTTONS** Move on-screen highlight.
- 17 SELECT** Choose an on-screen option; display channel surfing display while watching live TV.
- 18 CHANNEL GUIDE** Display TV listings.
- 19 REPLAY GUIDE** Play your recorded shows.
- 20 MENU** Display ReplayTV Main Menu.
- 21 EXIT** Exit on-screen menus.
- 22 PAGE /** Move one screen at a time up or down in ReplayTV guides and menus.
- 23 REC** Record show from Channel Guide or while viewing live TV.
- 24 RETURN TO LIVE** Return to live TV while watching a show delayed.
- 25 INSTANT REPLAY** Return 7 seconds and replay a segment.
- 26 QUICKSKIP** Skip 30 seconds of a recorded or delayed show.
- 27 REW** Rewind show.
- 28 PLAY/SLOW** Play/slow motion.
- 29 FF** Fast forward recorded or delayed show; frame-by-frame advance while paused.
- 30 PAUSE** Pause live TV and recorded shows.
- 31 STOP** Stop playback of show.

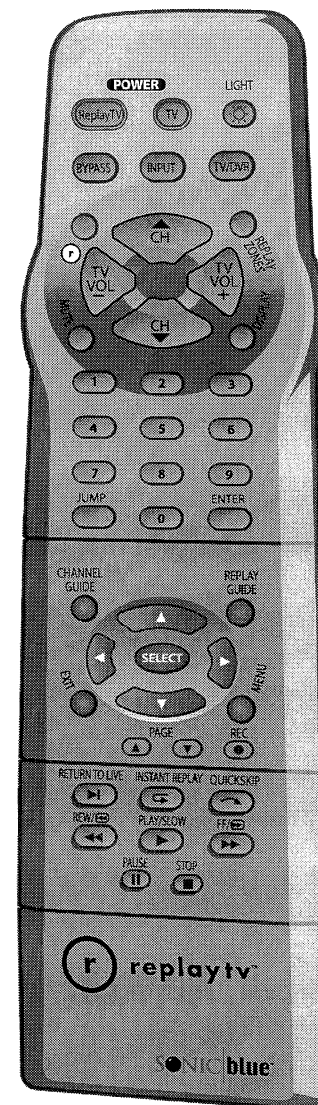

Remote Control Setup

Follow these steps to program the remote control to operate your television. The ReplayTV remote will only control your TV's power and volume. Even if your television is not listed, try the codes anyway. You should be able to turn your TV on and off when the correct code is used.

- 1 Press and hold down the TV POWER button.
- 2 While still holding down the TV POWER button, enter the 2-digit code for your brand of television (see table below). If there is more than one code for your brand of television, try them all until one works.

Brand	Code
Fisher	10
GE	03
Gold Star	15, 16, 17
Hitachi	12
JVC	11
Magnavox	05
Mitsubishi	07, 13
Panasonic	01, 02
Quasar	01, 02
RCA	03
Samsung	14
Sanyo	10
Sharp	06, 07
Sony	08
Sylvania	05
Toshiba	09
Zenith	04, 17

:: Remote Control Shortcuts

Show-watching Shortcuts

- To skip ahead a specific amount of time, enter the time in minutes then press QUICKSKIP.
- To go back a specific amount of time, enter the time in minutes then press INSTANT REPLAY.
- To go to a specific time within a recorded show, enter the time (for example, 02 to go to the second minute in the show), then press the JUMP button.
- To skip to a certain time from the end of a show, enter the time in minutes then press RETURN TO LIVE.

Channel Guide Shortcuts

- To jump ahead 12 hours, press the FF button.
- To go back 12 hours, press the REW button.
- To move one screen at a time, press the PAGE ▲/▼ buttons or the CHANNEL ▲/▼ buttons.
- To go to a channel, enter the channel number and press the SELECT button.
- To tune to a current show, highlight the show and press the SELECT button.
- To display a current show's pop-up menu, highlight the show and press ENTER.
- To go to a certain day, enter the number of days you wish to skip, then press FF.
- To go back to a certain day, enter the number of days you wish to return, then press REW.
- To go to a specific hour in the day, enter the hour (0-23), then press JUMP.
- To return to the current time, press RETURN TO LIVE.

Replay Guide Shortcuts

- To view the Replay Guide of the next ReplayTV on the network, press QUICKSKIP.
- To view the Replay Guide of the previous ReplayTV on the network, press INSTANT REPLAY.
- To return to viewing the local Replay Guide, highlight the Remote ReplayTV Finder and press RETURN TO LIVE.
- Press JUMP to go from the show content area to the categories to the Remote ReplayTV Finder.
- Press RETURN TO LIVE with a category highlighted to go to the All Shows category.

Find Shows On-screen Keyboard Shortcuts

- To move to the next screen after typing a keyword, press the REC button.
- To erase a character, press the REW button.
- To insert a space, press the FF button.

Slide Show Control Shortcuts

- SELECT or PLAY: Start slide show playback.
- REW and FF: Speed up and slow down the presentation.
- QUICKSKIP: Move to the next slide.
- INSTANT REPLAY: Go back to the previous slide.
- PAUSE: Pause the slide show.
- STOP: Return to the Photo Viewer. If PLAY is pressed after STOP the slide show will begin again from the stopping point.
- EXIT: Return to the Photo Viewer.

Channel Surfing Display Shortcuts

- To return to the current time, press RETURN TO LIVE.

Record Options Screen Shortcuts

- To confirm the settings without scrolling down to “Done,” press REC.
- To return to the Find Shows keyboard, press REW.