



**ROTEL**

Code List  
Le Codes  
Lista de Códigos Numéricos  
Elenco codici  
Liste der Codes  
Code Lijst  
Kodlista



**RR-1061**  
Universal Learning Remote Control  
Télécommande Universelle  
Mando a Distancia Universal  
Telecomando Universale Programmabile  
Lernfähige Universalfernbedienung  
Leerbare Universele Afstandsbediening  
Upplärningsbar Fjärrkontroll

## TV

A Mark	0901
Abex	0711
Acme	0121
Action	1321 1401
ADA	0121
ADC	0411
Adyson	1401
Akai	0421 1271 1401
Alba	0691 1221
Amstrad	0671
Anam National	0261
Anitech	1401
AOC	0291 0301 0411 0591 1131 1401
Archer	0901
Aristona	1231
ASA	1521 1531 1541
Bang & Olufsen	0011 0021
Baur	1271 1311 1491 1571 1591 1601
Baysonic	0221 0741
BEC	1321
Becrese	1321 1401 1521
Belcor	1131
Benchmark-Beaumarck	1401
Blaupunkt	0371 0381 0991 1001 1031 1041 1421 1431 1451 1471 1481 1491
Brockwood	1401
Brokewood	1131
Broksonic	1401
Cample	1401
Candle	1131 1401
Celebrity	0421
Circuit City	1401
Citizen	0271 1131 1401
Clairtone	0591
Colortyme	1131
Concerto	1131
Concierge	0491
Conic	1321 1401
Contec Cony	0121 0391 0591
Coronado	1401
Crosley	1321
Crown	1401
Curtis Mathes	0641 1131 1401
Daewoo	0301 0831 0841 0851 0861 1131 1401
Dansai	1401
Daytron	1131 1401
Dimensia	0641
Dumont	0491 1131 1401
Dynatech	1401
Electratune	1401
Electroband	0251 0421 0591
Electrohome	0261 1131 1321 1401
Elin	1521
Elite	1401
Emerson	0141 0231 0271 0451 0481 0591 0721 0731 0801 0881 1051 1061 1071 1081 1131 1401
Envision	1131
Erres	1231
Finlux	1521 1531 1541 1691 1701 1711 1721
Fisher	0111 0391
Fortress	1401
Fujitsu	1401
Funai	1401
GE	0241 0261 0551 0561 0571 0601 0641 0681 0781 0931 1131
GEC	1261 1321
Gibraltar	0491 1131

## TV

GoldStar	1321 1401
Grundig	0991 1001 1011 1021 1031 1041 1411 1421 1431 1441 1451 1461 1471 1481 1491 1501 1511
Hallmark	1131 1401 1521
Harley Davidson	1401
Harrad	1401
Harvard	1401
Hitachi	0131 0151 0231 0361 0391 0521 0531 0541 1091 1101 1111 1131 1171 1201 1241 1261 1311 1321 1331 1341 1351 1361 1371 1381 1391 1401 1521 1741 1791 1841 1851 1861 1871
IMA	1401
Inteq	0491
Interfunk	0051 0191 0201 0211 0371 0381 0501 1231 1261 1281 1291
Irradio	1401
JC Penney	0301 0551 0571 0641 0781 1131
JCB	0261 0421
Jensen	1131
JVC	0161 0361 0391 0551 0571 1181
Kapsch	1261 1281 1291
Kawasho	0421 1131
Kenwood	1131 1401
KLH	1401
Kloss Novabeam	0461 0471
Konka	0101 0961 0971 0981
KTV	0271 0591 0801 0811 1401
Kuasho	1401
LG	0661
LG (GoldStar)	0301 0821 0871 1131
Linitron	1401
Lloyd	1401
Loewe	0041 0191 0201
Luxman	1131
Luxor	1241 1271 1311 1691
LXI	0641 0781 1131
M Electronics	1521
Magnasonic	1401
Magnavox	0061 0071 0161 0181 0461 0471 1131 1231 1321 1131
Marantz	1401
Marcys	1401
Matsui	1221
Mava	1401
Mc Michael	1321
Mediator	1231
Megatron	1131
MEI	0591
Memorex	0721 1131
Metz	0191 0201 0211 1491
MGA	0251 0301 1131
Midland	0491 0551 0571 0781 1401
Mitsubishi	0161 0251 0291 0301 0311 1131 1551
Motorola	0261
MTC	0301 0591 1131 1401
Multitech	1401
NAD	0711 1131
NEC	0161 0261 0301 1131
Neckermann	0031 0051 0191 0201 0371 0381 0441 1011 1311 1461 1491
Nikkai	1401
Nikko	1131
Nokia	1241 1261 1271 1281 1291 1661 1671 1681
Nordmende	1281
Oceanic	1291
Optimus	0711 0771
Orion	0451 0491 0721 1401
Otto Versand	1311 1461 1471 1481 1491 1571 1591 1601 1611

## TV

Palladium	1481 1491
Panasonic	0261 0551 0571 0751 0761 0771 1281 1561 1651 1761 1771 1781
Pce/Pec	1401
Penney	1401
Philco	0181 0301 0461 0471 1131 1321
Philips	0071 0161 0261 0331 0461 0471 1131 1161 1231 1321 1491 1631 1641 1731 1801
Phonola	1231
Pilot	1131
Pioneer	0231 0711 1131 1191 1301 1751
Portland	0301 1131 1401
Precision	0081
Prima	1401
Prism	0571
Proscan	0641 0781
Proton	0891 1131 1401
Pulsar	0491 1131 1321
Pulser	1401
Quasar	0261 0551 0571
Quelle	0031 0041 0051 1401 1471 1491 1531 1541 1571 1591 1601 1611 1711
Radio Shack	1401
Radio Shack / Realistic	0661 0771 1131
Radiola	1231
RCA	0231 0241 0261 0301 0401 0411 0561 0601 0611 0621 0631 0641 0651 0781 0791 0831 0841 0911 0921 0941 0951 1131
Rhapsody	0591
RMB	1401
Runco	0491
Saba	1261
Salora	1241 1251 1271 1311
Sampo	1131 1401
Samsung	0301 0581 1131 1811
Samsux	1401
Sansui	0721 0741
Sanyo	0251 0391 0701 1131
SBR	1231
Schneider	0501 0691 1231
Scotch	1131
Scott	0451 1131 1401
Sears	0251 0391 0641 0671 0781 1131
SEG	1401
Semua	1401
Sharp	0281 0321 0341 0351 1121 1131 1151 1401
Shogun	1131
Siemens	1401 1451 1461 1471 1491
Sierra	1231
Sonic	0591
Sonolor	1291
Sony	0331 0421 0431 1571 1581 1591 1601 1611
Soundesign	1131 1401
Spectrician	1401
Squareview	0671
SSS	1131
Supremacy	1401
Supreme	0421
Sylvania	0071 0091 0181 0461 0471 1131
Symphonic	0671 1401
Tashiko	1321
Tatung	0261
Technics	0551 0571 1651
Techwood	0551 0571 1131
Teknika	0301 0391 0771 1131 1401
Telecaption	0171
Teleco	1621

## TV

Telefunken	1821 1831
Tensai	1521
Tera	0891 1131
Tesla	1621
Thomas	1321 1401
Thomson	0441
Thorn	1231 1321 1371
TMK	1131
Toshiba	0161 0171 0391 1141 1211
Tosonic	1401
Totevision	1401
Universum	1491 1521
Victor	0361
Videoton	1241
Vidtech	0301 1131
Waltham	1241
Wards	0301 0461 0471 0641 1131
White Westinghouse	0851 0861
Yamaha	0301 1131
Zenith	0481 0491 0511 0721 0741 1131

## VCR

## VCR

Action	1042
Adventura	1042
Agha	1042
Aiwa	0262 1172
Akai	0032 0142 0492 0502 1032
Allegro	0132
Allorgan	1042
Astra	1042
Audio Dynamics	0122 0462
Avis	1042
Beaumarck	1042
Blaupunkt	0792 0802
Candle	0462
Carrera	1042
Citizen	0462 1042
Colortyme	0462 1042
Craig	1042
Crosley	1042
Curtis Mathes	0132 0262 1042
DBX	0122 0462
DTS	1042
Dynatech	0262
Electroband	0462
Electrohome	1042
Elin	1042
Emerson	0262 0362 0372 0382 0432 0442 0472 0482 0502
Fuji	0142
Funai	0262
GE	0162 1042
GoldStar	1042
Go-Video	0282
Grundig	0512 0522 0532 0542 0552 0562 0572 0582 0592 0602 0612 0622 0632 0642 0732 0752 0772
Harman Kardon	0052 0462
Hitachi	0032 0072 0162 0262 0342 0402 0412 0422 0452 0662 0672 0682 0712 0922
Inno Hit	1042
JC Penney	0032 0122 0342 0422 0462
Jensen	0032 0342
JVC	0032 0122 0132 0462 0882 0892 0902 1022
Kenwood	0032 0122 0462
LG (GoldStar)	0462
Lloyd	0262 1042

## VCR

Logik	1042
Luxor	0862 0872
M Electronics	1042
Magnasonic	1042
Magnavox	0012 1042
Magnin	1042
Marantz	0122 0462
Matsui	0722 1122
Memorex	0262 1042
Metz	0592 0612 0642 0772
MGA	1042
Minolta	0342 0422
Mitsubishi	0052 0082 0342 0882 0992
MTC	0262 1042
Multitech	0262
NAD	1042
NEC	0022 0032 0122 0272 0382 0392 0462
Nokia	0852 0862 0872 1042 1082
Olympus	0102 0282
Optonica	0282
Orion	0932 0942 0952 1092 1102 1112 1122
Panasonic	0802 0912 1062
Paxsonix	1042
Penney	1042
Pentax	0162 0342 0422
Pentax Research	0462
Philco	1042
Philips	0012 1042 1052 1072 1132 1142 1152
Pioneer	0122 0212 0342 0352 0962
Prima	1042
Profile	1042
Proscan	1042
Pulsar	1042
Pulser	1042
Quartz	1042
Quelle	0592 0612 0642 0682 0772
Radio Shack / Realistic	0102 0262
Radix	0772
RCA	0042 0162 0222 0232 0242 0252 0302 0312 0322 0332 0342 0492 1042
Realistic	1042
Roadstar	1042
Saba	0902 0972
Saisho	0722
Salora	0852 0862
Samex	1042
Samsung	0282 0292 0342 0372 1042
Sansui	0032 0122
Sanyo	1082
Schneider	0682 1132 1142 1162 1182 1192
Scott	0062 0472
Sears	0342 0422
SEG	1042
Seleco	1022
Sharp	0092 0102 0112 0262 1012
Shintom	0142 0342
Shogun	1042
Siemens	0552 0592 0612 0622 0642 0692 0702 0722 0742 0752 0762 0772 0782 0812
Signature	0262
Singer	1042
Sony	0142 0152 0172 0182 0192 0202 0822 0832 0842 0982
SR1000	1042
STS	0342 0422
Sylvania	0262
Symphonic	0262

## VCR

Tandy	0262
Tatung	0032
Teac	0032 0262
Technics	0912
Teknika	0262
Telefunken	0902
Teleorder	1042
Thomas	1042
Thorn	0652
TiVo	0202
TMK	0382
Toshiba	0062 0342 0652 1042
Totevision	1042
Uher	1002
Unitech	1042
Universum	1042
Vector Research	0122 0462
Victor	0122 1022
Video Concepts	0122 0462
Videosonic	1042
Wards	0262 0342 0422 1042
White Westinghouse	0262
XR-1000	1042
Yamaha	0032 0122 0462
Yoko	1042
Zenith	0122 0132 0142

## SAT

## SAT

Amplica	0123
Bell Expressvu	0103 0123 0193 0383 0473
Channel Master	0323 0433 0533
Chapparral	0613 0703
Cheyenne	0703
DIRECTV	0083 0223 0233 0253 0273 0343 0393 0483 0553 0563 0593 0673 0763 0783 0853 0863 0883 0943 0953 0983
Dish Network	0103 0193 0383 0473 0843
Dishpro	0103
Drake	0033 0333 0803
Dreambox	0663
DX Antenna	0423 0823
Echosphere	0473
EchoStar	0103 0193 0383 0473 0843
Expressvu	0103 0193 0383 0473
Fortecstar	0113 0203 0303 0413 0513 0523
Fujitsu	0733
GE	0273 0373 0583 0693 0793 0853 0883 0983
Gemini	0143
General Instrument	0023 0093 0183 0213 0363 0493 0683 0873 0923 0973
Globecast	0013
Go Video	0653
Hitachi	0343 0483 0563 0673 0783 0863
Hughes Network	0343 0483 0563 0603 0633 0763 0783 0863
JVC	0473 0843
Kenwood	0443
Macom	0643
Magnavox	0223 0573 0843
Mitsubishi	0343 0483 0563 0673 0783 0863
Motorola	0463 0493
Norstat	0743
Pace	0153 0283
Panasonic	0233 0243 0263

## SAT

Pansat	0043 0993
Philips	0223 0343 0483 0563 0573 0673 0763 0783 0843 0863
Philips-Magnavox	0223 0573 0843
Pioneer	0063
Primestar	0363 0683
Prosat	0893
Proscan	0273 0373 0693 0793 0883 0983
RCA	0273 0373 0403 0503 0583 0693 0793 0853 0883 0983
Realistic	0313 0933
Samsung	0053 0253 0553 0913 0943
Sharp	0063
Sierra I II III	0703
Sky Network	0153 0283
Sony	0133 0393 0593 0833 0953
Star Sight	0963
Star Trak	0453
Starchoice	0183 0363 0683
STS	0423 0623 0713
Super Guide	0543
Sylvania	0723
Toshiba	0073 0163 0343 0483 0563 0673 0773 0783 0813 0863
Ultimate TV	0593 0983
Uniden	0753 0903 0963
Video Cipher II	0033
Web TV	0133 0843
Zenith	0033 0143 0173 0283 0293 0333 0353 0803 0083

## CTV

## CTV

ABC	0014 0574
Adelphia	0484 0544
Allegro	0064 0114
Americast	0244
Antronix	0254 0304
Archer	0254 0304 0374 0444
AT&T	0484
Bell South	0244
Cabletenna	0254 0304
Cableview	0254 0304
Cablevision	0174
Century	0444
Citizen	0444
Cogeco	0484
Color Voice	0504 0584
Comcast	0484
Comtronics	0024 0084 0484
Contec	0144
Digital Music Express	0054
Eastern	0204
Everquest	0024
Garrard	0444
GC Electronics	0304
GE	0354
Gemini	0314
General Instrument	0014 0054 0344 0424 0484 0574 0614
Hamlin	0384 0454
Hitachi	0574
Illico	0174
Jasco	0444
Jerrold	0014 0194 0344 0574
Magnavox	0094



## CTV

Memorex	0154
Motorola	0014 0194 0344 0424 0484 0574 0614
MovieTime	0214
NSC	0214
OAK	0144 0324
Pace	0564
Panasonic	0364
Paragon	0154 0274
Philips	0094 0314 0394 0444 0464 0524
Philips-Magnavox	0074 0104
Pioneer	0034 0174 0264 0594
Pulsar	0154
Radio Shack	0074 0104 0114
RCA	0234 0364 0444
Realistic	0304
Regal	0514
Regency	0204
Rembrandt	0574
Rogers	0174
Runco	0154
Samsung	0024 0034
Scientific Atlanta	0124 0134 0174 0224 0284 0544
Shaw	0484
Signal	0024
Signature	0574
SL Marx	0024
Sprucer	0364
Standard	0334
Star Sight	0234
Stargate	0024
Tandy	0404
Televue	0024
Texscan	0334
Time Warner	0174
Tocom	0014 0414 0474 0614
Toshiba	0154
TV86	0214
Unika	0254 0304 0444
Universal	0064 0254 0304 0374 0444 0534
Video Tech	0434
Videotron	0174
Videoway	0044
Viewstar	0084 0094 0214 0404
Zenith	0114 0154 0444 0494 0554 0604 0624
Zenith Network	0244

## DVD

## DVD

Aiwa	0485
Akai	0415
Apex	0565
Cambridge	0205
CGV	0115 0165
Crown	0125 0315
Daewoo	0125 0135
Denon	0345 0425
Electroband	0585
Emerson	0465
GE	0225
GoldStar	0035 0245
Go-Video	0375 0475
Grundig	0055 0135 0185 0195
Harman Kardon	0615
Hitachi	0445 0605
Hyundai	0145

## DVD

Jamo	0265 0275
JVC	0355 0365
Kenwood	0425 0555
Konka	0495 0515 0525
LG	0035 0245
Loewe	0055 0095
Magnavox	0335 0535
Marantz	0535
Metz	0075 0255 0305
Mitsubishi	0335
NAD	0085 0245
Onkyo	0545
Panasonic	0425 0435 [0665 (Blu-ray)]
Philips	0535
Pioneer	0445 [0635 (Blu-ray)]
Proscan	0405
RCA	0395
Roadstar	0175 0235 0285
Rotel	0005 (For RDV-1093 [Default] and RDV-1530) 0015 (For RDV-1045, RDV-1050 and RDV-1062) 0025 (For RSDX-02)
Sampo	0505
Samsung	0475 [0675 (Blu-ray)]
Sansui	0195 0215
Schneider	0135 0145 0185 0315
SEG	0625
Shanghai	0155
Sherwood	0575
Shinco	0225
Sony	0385 [0655 (Blu-ray)]
Sony-PS2	0065
Tatung	0125
Teac	0445
Theta Digital	0075
Thomson	0045 0295 0325
Toshiba	0535 [0645 (HD DVD)]
X-Box	0105
Yamaha	0425 0595
Zenith	0455 0465

## CD

## CD

Adcom	0856
Arcam	0106 0156
Bush	0146
California Audio Labs	0376
Cambridge Audio	0196
Capetronic	0226
Carver	0216 0746 0916 1016
Casio	0676
Citizen	0876
Curtis Mathes	0676
Denon	0276
Electroband	0426 0916 1016
Emerson	0586 0666 0856
Fisher	0456 0716 1066
GE	0256
Genexxa	0506 0586 0666 1086
GoldStar	0016 0046 0056 0096
Goodmans	0146
Grundig	0116 0126 0136 0156 0166 0176 0186
Harman Kardon	0236 0576
Hitachi	0506
JC Penney	0566 0676
JVC	0306 0316
Kenwood	0286 0886 0926 0946 0986 1056

## CD

LG (GoldStar)	0416
Linn	0106 0156
Luxman	0706 0776 0836 0906
LXI	0666 0676
Magnavox	0976
Marantz	0536 0826 0956
MCS	0566 0676
Meridian	0156
MGA	0236
Mitsubishi	0236 0266
NAD	1006
Naim	0156
Nakamichi	0726 0756 1046
NEC	0566
Nikko	0426 0586
Noname	0146
Onkyo	0446 0736 0896 1106
Optimus	0286 0386 0496 0506 0666 0696 0746 0796 0806 0816 0846 0916 1016
Panasonic	0376 0606 0616
Parasound	0206
Philips	0216
Pioneer	0396 0506 0516 0546 1086
Quasar	0376
RCA	0466 0476 0486 0626 0686
Realistic	0226 0506 0586 0666 0816 0846 0856 0916 0956 1016
Rotel	0006 (For RCC-1055, RCD-1072 [Default] and RCD-1520)
RS Originals	0746 1096
Samsung	0326
Sansui	0526 0556 0666 0686
Sanyo	0766 0786 0916 1016 1066 1076
Schneider	0066 0076 0146 0166
Scott	0586 0666 0856
Sears	0286 0666 0676 0956
Sharp	0286 0296 0956
Sherwood	0596 0806 0866 0956 1096
Shure	0566
Siemens	0036
Sony	0336 0346 0356 0366 0976
Supertech	0146
Sylvania	0106 0156
Symphonic	0646
Teac	0426 0646 0846 0936 0956 1036 1126
Technics	0376 0406 0616
Telefunken	0026
Theta Digital	0086
Thomson	0026
Toshiba	1006
Victor	0306
Yamaha	0966 0996 1026 1116
Zenith	0246 0426 0436 0636 0656

## AUD

## AUD

Rotel	0007 (For RSX-1057, RSX-1058 [Default], RSX-1067, RSP-1069, RSP-1098, RSX-1550, RSX-1560, RSX-1570, RSP-1570 and RSP-1580)
	0017 (For MAIN-2)
	0027 (For ZONE-2)
	0037 (For ZONE-3)
	0047 (For ZONE-4)

