


## Tour of the Remote Control

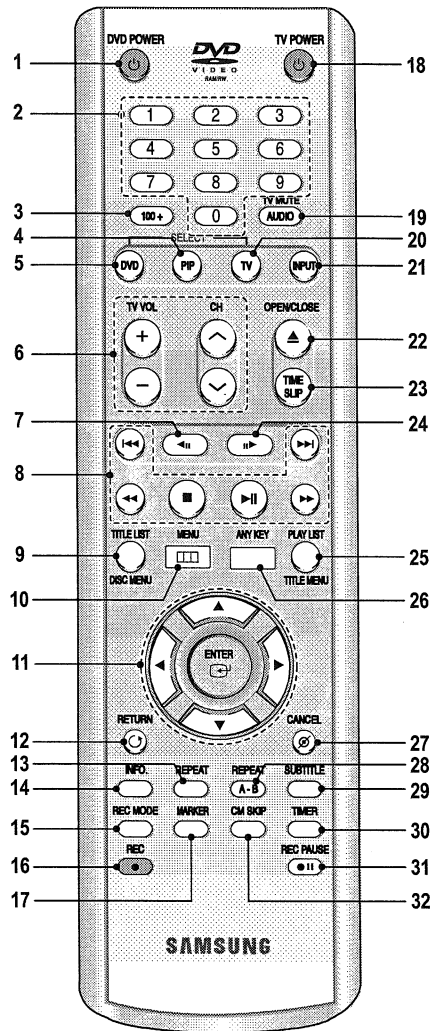

1. **DVD POWER Button**
2. **Number Buttons**
3. **100+ Button**  
Press this to select channel 100 or higher.
4. **PIP Button**  
Use to watch a sub program on the PIP screen while watching the main program on the main screen.
5. **DVD Button**  
Press this when you use a DVD.
6. **TV Control Buttons**
  - **VOLUME Button**  
TV volume adjustment
  - **CHANNEL Button**  
Use this to select a TV channel.
7. **REVERSE STEP Button**  
Each press of this button will play one-frame reverse.
8. **Playback-related buttons**  
Search, Skip, Stop, Play/Pause
9. **TITLE LIST/DISC MENU Button**  
Use this to enter the View Recording list/Disc menu.

10. **MENU Button**  
Brings up the DVD recorder's setup menu.
11. **ENTER/DIRECTION Buttons**  
(UP/DOWN or LEFT/RIGHT Buttons)  
This button functions as a toggle switch.
12. **RETURN Button**  
Returns to a previous menu.
13. **REPEAT Button**  
Allows you to repeat a title, chapter, track or disc.
14. **INFO. Button**  
This will display current settings or disc status.
15. **REC MODE Button**  
This will display the recording status.
16. **REC Button**  
Use to make a recording on DVD-RAM/-RW/-R discs.
17. **MARKER Button**  
Use this to bookmark a position while playing a disc.
18. **TV POWER Button**
19. **AUDIO/TV MUTE Button**  
Use this to access various audio functions on a disc. (DVD mode)  
This operates as Sound Mute. (TV mode)
20. **TV Button**  
Press this to operate TV.
21. **INPUT Button**  
Select line input signal in external input mode (Tuner or Line input)
22. **OPEN/CLOSE Button**  
To open and close the disc tray.
23. **TIME SLIP Button**  
The Time Slip function allows you to view a recorded program through the PIP window at least 10 seconds after recording starts. Playback and recording can be done at the same time.
24. **FORWARD STEP Button**  
Each press of this button will play one-frame forward
25. **PLAY LIST/TITLE MENU Button**  
Use this to return to the Title menu, or to view the recorded files list.
26. **ANYKEY Button**  
Use this to view the status of the disc that is being played.
27. **CANCEL Button**
28. **REPEAT(A-B) Button**  
Press to repeat between A-B disc.
29. **SUBTITLE Button**  
Press this to switch the DVD's subtitle language.
30. **TIMER Button**  
Press to directly enter the Timer Recording Mode menu.
31. **REC PAUSE Button**  
Use this to pause during recording.
32. **CM SKIP Button**  
When a program recorded on a DVD-RAM, a DVD-RW, a DVD-R or DVD-Video is played, the unit can be set to automatically skip a portion of the program.

## Step 6 : Connecting the Power Cord

After all connections are complete, plug the power cord in the wall outlet.

“AUTO” in the front panel display flickers. This means that the current time is being set automatically (Auto Program) through the antenna under connection and also the channel is being set. The setup may take a few minutes.

When it normally operates, the current time is automatically set and displayed in the front panel display.

If “- - -” appears, however, it means that auto time setting has failed.

In that case, set the current time through the manual initial setup, as shown in step 8.



NOTE

- After “AUTO” message disappears, the recorder will perform Auto Channel Memory for about 3 minutes. If power is on, while Auto Channel Memory is in process, Auto Channel Memory will be stop.  
In this case, do Auto Channel Memory from MENU (see page 26).

## Step 7 : Preparing the Remote Control

### Install Batteries in the Remote Control

- Open the battery cover on the back of the remote.
- Insert two AAA batteries. Make sure that the polarities (+ and -) are aligned correctly.
- Replace the battery cover.

### If remote does not operate properly:


- Check the polarity + - of the batteries (Dry-Cell)
- Check if the batteries are drained.
- Check if remote sensor is blocked by obstacles.
- Check if there is any fluorescent lighting nearby.

Dispose of batteries according to local environmental regulations. Do not put them in the household trash.

## Setting the Remote Control

You can control part of another manufacturer's TV functions with this remote control.

Control function buttons involve: TV POWER, Channel Up/Down, Volume Up/Down, Direct Number buttons, TV MUTE, INPUT, ENTER and ARROW button.

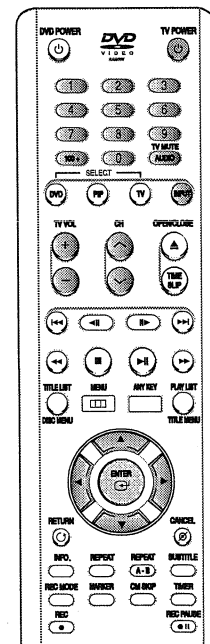

### Controlling TVs with the Remote Control

1. Press and hold the TV POWER button.
2. Enter a 2-digit code by using the numerical buttons on the remote control.

#### See “Controllable TV Codes”

If the code works, your TV set will be turned on or off.  
If it does not respond, try other codes.

#### Controllable TV Codes

BRAND	BUTTON
BLAUPUNKT	TV POWER +71
AIWA	TV POWER +82
ANAM	TV POWER +10,+11,+12,+13,+14,+15,+16,+17,+18
BANG & OLUFSON	TV POWER +57
BRANDT	TV POWER +73
BRIONVEGA	TV POWER +57
CGE	TV POWER +52
CONTINENTAL EDISON	TV POWER +75
DAEWOO	TV POWER +19, +20,+23,+24,+25,+26,+27,+28,+29, +30,+31,+32,+33,+34
EMESON	TV POWER +64
FERGUSON	TV POWER +73
FINLUX	TV POWER +06,+49,+57
FORMENTI	TV POWER +57
FUJITSU	TV POWER +84
GRADIENTE	TV POWER +70
GRUNDIG	TV POWER +49,+52,+71
HITACHI	TV POWER +60,+72,+73,+75
IMPERIAL	TV POWER +52
JVC	TV POWER +61,+79
LG	TV POWER +06,+19,+20,+21,+22,+78
LOEWE	TV POWER +06,+69
LOEWE OPTA	TV POWER +06,+57
MAGNAVOX	TV POWER +40
METS	TV POWER +57
MITSUBISHI	TV POWER +06,+48,+62,+65
MIVAR	TV POWER +52,+77
NEC	TV POWER +83
NEWSAN	TV POWER +68
NOBLEX	TV POWER +66
NOKIA	TV POWER +74
NORDMENDE	TV POWER +72,+73,+75
PANASONIC	TV POWER +53,+54,+74,+75
PHILIPS	TV POWER +06,+55,+56,+57
PHONOLA	TV POWER +06,+56,+57
PIONEER	TV POWER +58,+59,+73,+74
RADIOLA	TV POWER +06,+56
RADIOMARELLI	TV POWER +57
RCA	TV POWER +45,+46
REX	TV POWER +74
SABA	TV POWER +57,+72,+73,+74,+75
SALORA	TV POWER +74
SAMSUNG	TV POWER +01,+02,+03,+04,+05,+06,+07,+08,+09
SANYO	TV POWER +41,+42,+43,+44,+48
SCHNEIDER	TV POWER +6

BRAND	BUTTON
SELECO	TV POWER +74
SHARP	TV POWER +36,+37,+38,+39,+48
SIMENS	TV POWER +71
SINGER	TV POWER +57
SINUDYNE	TV POWER +57
SONY	TV POWER +35,+48
TELEAVA	TV POWER +73
TELEFUNKEN	TV POWER +67,+73,+75,+76
THOMSON	TV POWER +72,+73,+75
THOMSON ASIA	TV POWER +80,+81
TOSHIBA	TV POWER +47,+48,+49,+50,+51,+52
WEGA	TV POWER +57
YOKO	TV POWER +6
ZENITH	TV POWER +63



NOTE

- If you replace the remote control's batteries, set the brand code again.