

# Chapter Four

## SPECIAL FEATURES


This chapter explains the special features of your television.

### ➤ Setting Up Your Remote Control


Your Samsung TV comes equipped with a “universal” remote control. This remote not only operates your Samsung TV, but it can operate your VCR and your cable box as well, even if your VCR and cable box are made by other manufacturers. Before you can do this, however, you have to “set up” the remote.

#### Setting Up Your Remote Control to Operate Your VCR


**1**  
Turn off your VCR.

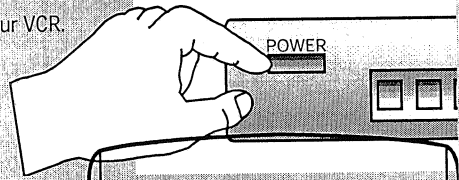


**2**  
On your Samsung remote control, press SET.

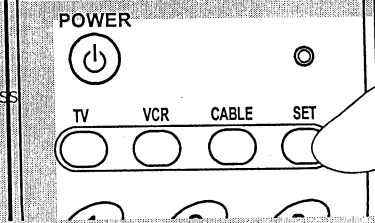


**3**  
Press the VCR button on the top right of your remote control.

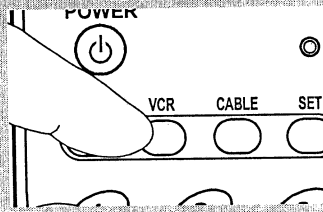

**4**  
Enter both digits of the VCR code listed on the next page for your brand of VCR.

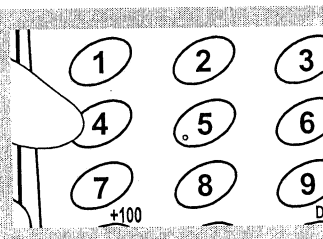

**5**  
Press POWER on the remote control. Your VCR should turn on. If your VCR turns on, your remote control is now “set up” correctly.

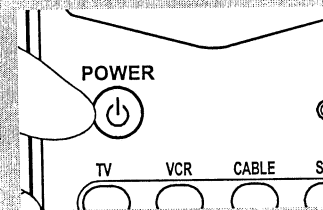

◀ Your remote control has three “modes”: the “TV” mode, the “VCR” mode, and the “CABLE” mode. Pressing the “VCR” button puts the remote control in the “VCR” mode.

◀ Make sure you enter both digits of the code, even if the first digit is a “0.”

If there is more than one code listed, try the first one.

◀ If your VCR does not turn on, repeat steps 2, 3, and 4, but try one of the other codes listed for your brand of VCR.


If no other codes are listed, try each VCR code, 00 through 72.

*continued...*

## SPECIAL FEATURES

**6**

Once your remote control is set up, press the **VCR** button any time you want to use the remote to operate your VCR.

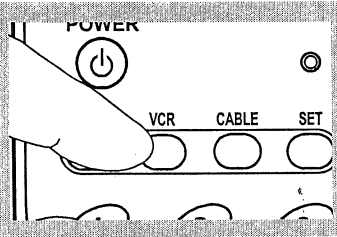

◀ When your remote control is in the "VCR" mode, the volume buttons still control your TV's volume.


When your remote is in the "TV" mode, the VCR control buttons (PLAY, PAUSE, etc.) will still operate your VCR.

**VCR Codes**


Aiwa	00	Memorex	00, 09, 11	Sanyo	19, 20, 43
Akai	15, 22, 26, 30, 45, 66		13, 20, 21, 43	Scott	47, 53, 58, 60
Anam	71, 72	MGA	17, 30	Sears	09, 11, 16, 19
Broksonic	47, 53, 59	Minolta	16, 44		20, 27, 33, 43, 44
Capehart	05	Mitsubishi	30, 37, 52, 61, 66	Sharp	21, 31
Canon/ Curtis Mathes	09	Mitsubishi (Unified)	17	Shintom	36
Craig	20, 65, 67	MTC	00, 65	Sony	02, 06, 07, 08, 09
Daewoo	03, 05, 18, 39, 68, 70	Multitech	00, 36	STS	16
Daytron	05	NAD	28	Sylvania	09, 17, 46
Dynatech	00, 21	NEC	12, 14, 15, 23, 34	Symphonic	00
Emerson	00, 01, 10, 11, 30, 35	Optonica	21, 31	Tandy	00, 43
	40, 47, 53, 56, 57, 59, 60	Panasonic	09, 63	Tatung	15
Fisher	20, 27, 33, 43	Penney	09, 12, 14, 16, 65	Teac	00, 15
Funai	00	Pentax	16, 32, 44	Technics	09
GE	09, 29, 32	Philco	09	Teknika	00, 09, 11, 25
Goldstar	04, 11, 12	Philips	09, 31, 38, 46	TMK	10
Harman/Kardon	12, 37	Pilot	11	Totevision	11, 65
Hitachi	00, 15, 16, 32, 44, 51, 64	Pioneer Unified	28, 34	Toshiba	17, 18, 33, 58, 60
JCL	09	Portland	05	Unitech	65
Jensen	15	Pulsar	13	Vector Research	12, 14
JVC	15, 34, 55	Quartz	19, 49	Victor	34
Kenwood	15, 19, 34	Quasar	09, 41	Video Concepts	14, 30, 62
Lloyd	00	RCA	09, 16, 32, 44, 48, 54	Videosonic	65
Logik	36	RCA (Unified)	29	Wards	00, 09, 16, 20, 21
LXI	11	Realistic	00, 09, 11, 19, 20		31, 36, 48, 60, 65
Magnavox	09, 38, 42, 46, 48		21, 31, 33, 43, 65	Yamaha	12, 15
Marantz	09, 12, 38, 50	Ricoh	08	Zenith	07, 08
Marta	11	Samsung	18, 24, 26, 65	Zenith (Unified)	13
MEI	09	Sansui	15, 34, 67		

**Setting Up Your Remote Control to Operate Your Cable Box****1**


Turn off your cable box.

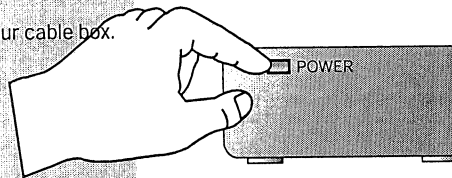**2**


On your Samsung remote control, press **SET**.

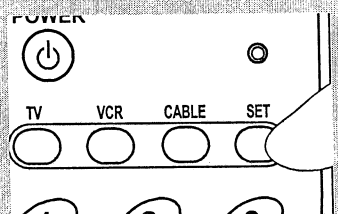

# OPERATION

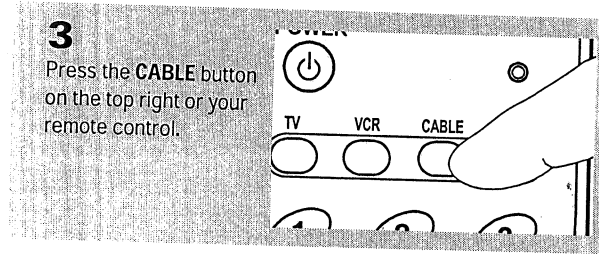


◀ Your remote control has three "modes": the "TV" mode, the "VCR" mode, and the "CABLE" mode. Pressing the "CABLE" button puts the remote control in the "CABLE" mode.

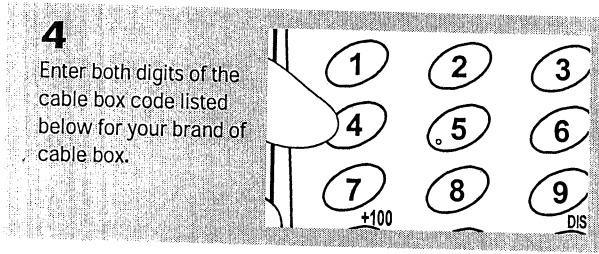


◀ Make sure you enter both digits of the code, even if the first digit is a "0."

If there is more than one code listed, try the first one.

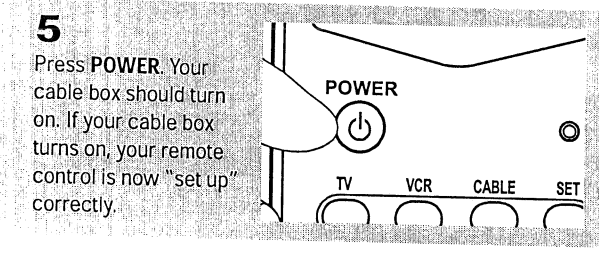

◀ If your cable box does not turn on, repeat steps 2, 3, and 4, but try one of the other codes listed for your brand of cable box.

If no other codes are listed, try each cable box code, 00 through 35.

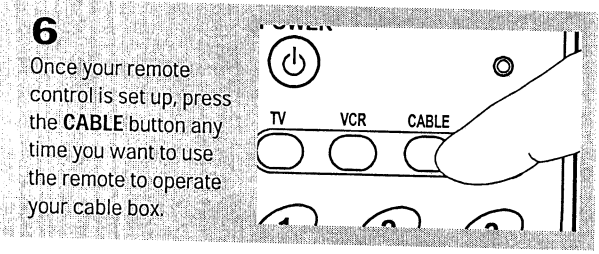

◀ When your remote control is in the "CABLE" mode, the volume buttons still control your TV's volume. Also, the VCR control buttons (PLAY, PAUSE, etc.) will still operate your VCR.

## Cable Box Codes

ABC	0, 07, 09, 12	Paragon	00	Starcom	02, 11, 19, 23
Antronix	26	Pioneer	16, 25, 31	Stargate	11, 18
Archer	26	Pulsar	00	Tandy	29
Comtronics	18	RCA	15	TeleCaption	27
Eagle Comtronics	18	Realistic	26	Texscan	22
Eastern	01	Regal	14, 30, 32, 34	Tocom	08, 09, 21
Gemini	11	Regency	01	Toshiba	00
General Instruments	07	Samsung	18, 25	Unika	26
Hamlin	06, 14, 30, 32	Scientific Atlanta	03, 05, 12, 33	United Artists	04
Hitachi	07	Signal	18	United Cable	02
Jerrold	02, 07, 10, 11, 19, 23	Signature	07	Universal	26
Memorex	00	SL Marx	18	Viewstar	29
Oak	04, 13, 28	Sprucer	15, 35	Zenith	00, 20
Panasonic	15, 24				