 



remote control

TOUR OF THE REMOTE CONTROL

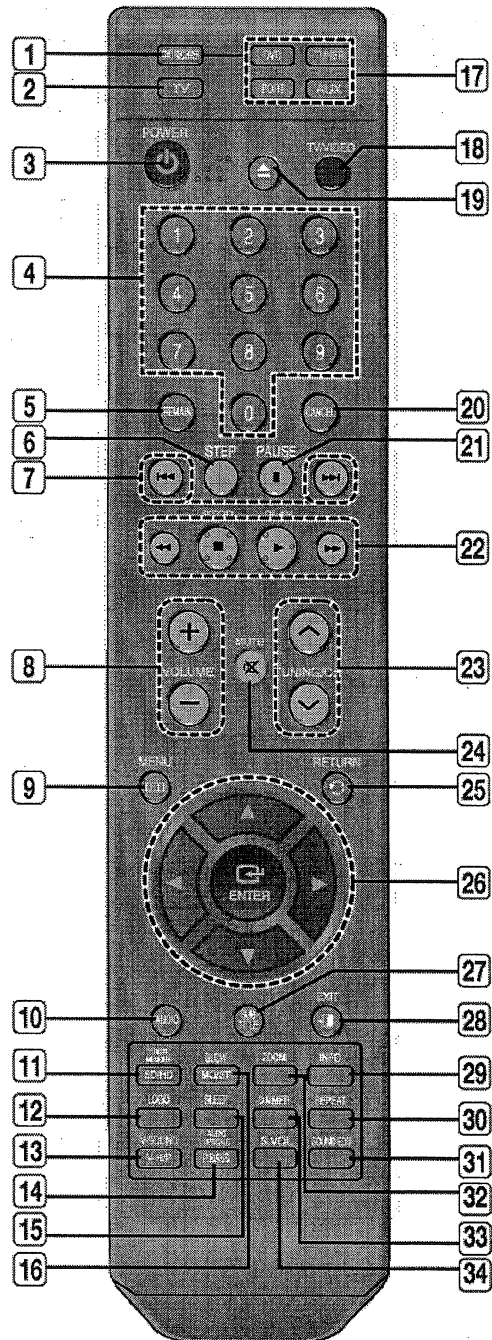

| | | | |
|-----------|---|-----------|---------------------|
| 1 | DVD RECEIVER button | 18 | TV/VIDEO button |
| 2 | TV button | 19 | EJECT button |
| 3 | POWER button | 20 | CANCEL button |
| 4 | NUMBER (0~9) buttons | 21 | PAUSE button |
| 5 | REMAIN button | 22 | ▶ PLAY button |
| 6 | STEP button | | ⏹ STOP button |
| 7 | TUNING PRESET/CD SKIP buttons | | ⏮ ⏭ SEARCH buttons |
| 8 | VOLUME button | 23 | TUNING/CH button |
| 9 | MENU button | 24 | MUTE button |
| 10 | AUDIO button | 25 | RETURN button |
| 11 | TUNER MEMORY, SD(Standard Definition)/HD(High Definition) button | 26 | CURSOR/ENTER button |
| 12 | LOGO button | 27 | SUBTITLE button |
| 13 | V-SOUND(Virtual Sound), V-H/P(Virtual Headphone) button | 28 | EXIT button |
| 14 | AUDIO UPSCALE, P.BASS button | 29 | INFO button |
| 15 | SLEEP button | 30 | REPEAT button |
| 16 | SLOW, MO/ST button | 31 | SOUND EDIT button |
| 17 | <div style="display: flex; flex-direction: column; gap: 2px;"> <div>DVD DVD button</div> <div>TUNER TUNER button</div> <div>AUX AUX button</div> <div>PORT PORT button</div> </div> | 32 | ZOOM button |
| | | 33 | DIMMER button |
| | | 34 | S.VOL button |

 Insert Remote Batteries

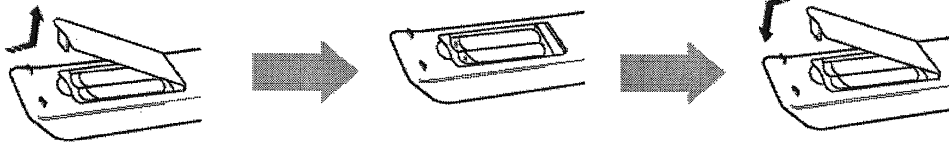

1. Remove the battery cover in the direction of the arrow.
2. Insert two 1.5V AAA batteries, paying attention to the correct polarities (+ and -).
3. Replace the battery cover.



Follow these precautions to avoid leaking or cracking cells:

- Place batteries in the remote control so they match the polarity : (+) to (+) and (-) to (-).
- Use the correct type of batteries. Batteries that look similar may differ in voltage.
- Always replace both batteries at the same time.
- Do not expose the batteries to heat or a flame.

remote control

 
SETTING THE REMOTE CONTROL

You can control certain functions of your TV with this remote control.

When operating a TV with the remote control

1. Press the **TV** button to set the remote to TV mode.
2. Press the **POWER** button to turn on the TV.
3. While holding down the **POWER** button, enter the code corresponding to your brand of TV.
 - If there is more than one code listed for your TV in the table, enter one at a time to determine which code works.


Example : For a Samsung TV
While holding down the **POWER** button, use the **number** buttons to enter 00, 15, 16, 17 and 40.
4. If the TV turns off, the setting is complete.
 - You can use the **TV POWER**, **VOLUME**, **CHANNEL**, and **Numeric** buttons (0-9).

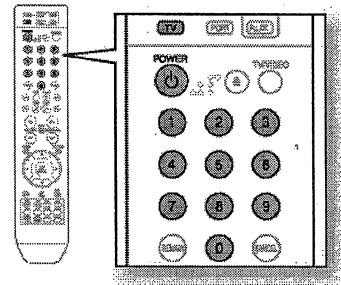

- The remote control may not work on some brands of TVs. Also, some operations may not be possible depending on your brand of TV.
- If you do not set the remote control with the code for your brand of TV, the remote control will work on a Samsung TV by default.

Operation Range of the Remote Control

 The remote control can be used up to approximately 7 meters in a straight line. It can also be operated at a horizontal angle of up to 30° from the remote control sensor.

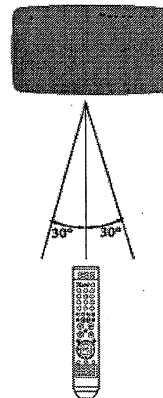

TV Brand Code List

| No. | Brand | Code | No. | Brand | Code |
|-----|-----------------------|---|-----|--------------------------|---|
| 1 | Admiral (M.Wards) | 56, 57, 58 | 44 | MTC | 18 |
| 2 | A Mark | 01, 15 | 45 | NEC | 18, 19, 20, 40, 59, 60 |
| 3 | Anem | 01, 02, 03, 04, 05, 06, 07, 08, 09, 10, 11, 12, 13, 14 | 46 | Nikei | 03 |
| 4 | AOC | 01, 18, 40, 46 | 47 | Onking | 03 |
| 5 | Bal & Howel (M.Wards) | 57, 58, 81 | 48 | Orwa | 03 |
| 6 | Brosonic | 59, 60 | 49 | Panasonic | 06, 07, 08, 09, 54, 66, 67, 73, 74 |
| 7 | Candle | 18 | 50 | Panney | 18 |
| 8 | Celtronic | 03 | 51 | Philco | 03, 15, 17, 18, 48, 54, 59, 62, 69, 90 |
| 9 | Citizen | 03, 18, 26 | 52 | Philips | 15, 17, 18, 40, 46, 54, 62, 72 |
| 10 | Theater | 97 | 53 | Pioneer | 63, 66, 80, 91 |
| 11 | Classic | 03 | 54 | Portland | 15, 18, 59 |
| 12 | Concerto | 18 | 55 | Proton | 40 |
| 13 | Contec | 46 | 56 | Quasar | 06, 66, 67 |
| 14 | Coronado | 15 | 57 | Radio Shack | 17, 48, 56, 60, 61, 75 |
| 15 | Craig | 03, 05, 61, 82, 83, 84 | 58 | RCA/Proscan | 18, 59, 67, 76, 77, 78, 92, 93, 94 |
| 16 | Croslex | 62 | 59 | Realistic | 03, 19 |
| 17 | Crown | 03 | 60 | Sampo | 40 |
| 18 | Curtis Mates | 59, 61, 63 | 61 | Samsung | 00, 15, 16, 17, 40, 43, 46, 47, 48, 49, 59, 60, 88 |
| 19 | CXC | 03 | 62 | Sanyo | 18, 61, 65 |
| 20 | Daewoo | 02, 03, 04, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 32, 34, 35, 36, 48, 59, 90 | 63 | Scott | 03, 40, 60, 61 |
| 21 | Daytron | 40 | 64 | Sears | 15, 18, 19 |
| 22 | Dynasty | 03 | 65 | Sharp | 15, 57, 64 |
| 23 | Emerson | 03, 15, 40, 46, 59, 61, 64, 82, 83, 84, 85 | 66 | Signature 2000 (M.Wards) | 57, 58 |
| 24 | Fisher | 19, 65 | 67 | Sony | 50, 51, 52, 53, 55 |
| 25 | Funai | 03 | 68 | Soundesign | 03, 40 |
| 26 | Futuretech | 03 | 69 | Spectricon | 01 |
| 27 | General Electric (GE) | 06, 40, 56, 59, 66, 67, 69 | 70 | SSS | 18 |
| 28 | Hall Mark | 40 | 71 | Sylvania | 18, 40, 48, 54, 59, 60, 62 |
| 29 | Hitachi | 15, 18, 50, 59, 69 | 72 | Symphonic | 61, 95, 96 |
| 30 | Inkel | 45 | 73 | Tatung | 06 |
| 31 | JC Penny | 56, 59, 67, 86 | 74 | Techwood | 18 |
| 32 | JVC | 70 | 75 | Teknika | 03, 15, 18, 25 |
| 33 | KIV | 59, 61, 87, 88 | 76 | TMK | 18, 40 |
| 34 | KEC | 03, 15, 40 | 77 | Toshiba | 19, 57, 63, 71 |
| 35 | KMC | 15 | 78 | Videch | 18 |
| 36 | LG (Goldstar) | 01, 15, 16, 17, 37, 38, 39, 40, 41, 42, 43, 44 | 79 | Videch | 59, 60, 69 |
| 37 | Luxman | 18 | 80 | Wards | 15, 17, 18, 40, 43, 54, 60, 64 |
| 38 | LXI (Sears) | 19, 54, 56, 59, 60, 62, 63, 65, 71 | 81 | Yamaha | 18 |
| 39 | Magnavox | 16, 17, 18, 48, 54, 56, 60, 62, 72, 89 | 82 | York | 40 |
| 40 | Marantz | 40, 64 | 83 | Yupiteru | 03 |
| 41 | Matsui | 54 | 84 | Zenith | 58, 79 |
| 42 | MGA | 18, 40 | 85 | Zonca | 01 |
| 43 | Mitsubishi/MGA | 18, 40, 59, 60, 75 | 86 | Dongyang | 03, 54 |

ENG

REMOTE CONTROL