 


Tour of the Remote Control

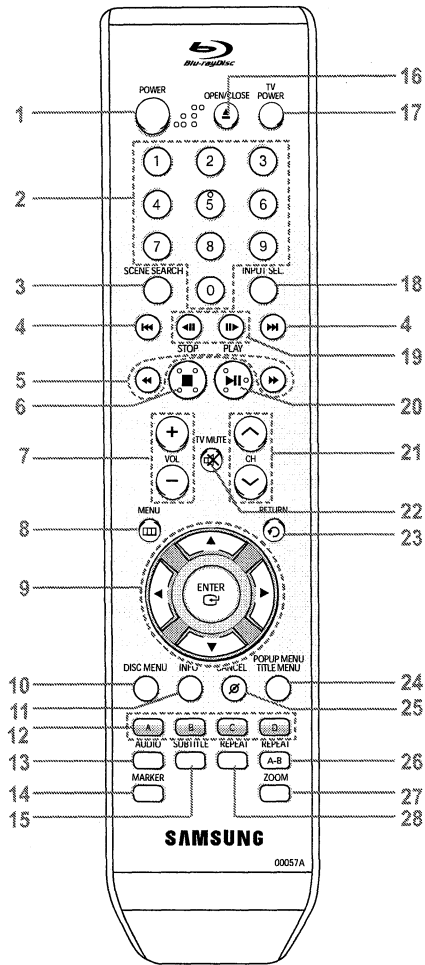

 
1. **POWER Button**
2. **NUMBER Buttons**
3. **SCENE SEARCH Button**
Easily search for desired scenes during playback with search categories such as Actor and Character.
4. **REVERSE/FORWARD SKIP Buttons**
Press to skip backwards or forwards.
5. **REVERSE/FORWARD SEARCH Buttons**
Press to search a disc backwards or forwards.
6. **STOP Button**
Press to stop a disc.
7. **VOL Button**
TV volume adjustment
8. **MENU Button**
Brings up the Blu-ray disc player's setup menu.
9. **ENTER/DIRECTION Buttons (▲▼◀▶ Buttons)**
10. **DISC MENU Button**
Use this to enter the disc menu.

11. **INFO Button**
This will display current setting or disc status.
12. **COLOR Button : RED(A), GREEN (B), YELLOW(C), BLUE(D)**
Allows access to common functions of the Blu-ray disc player.
13. **AUDIO Button**
Use this to access various audio functions on a disc (BD/DVD).
14. **MARKER Button**
Use this to bookmark a position while playing a disc.
15. **SUBTITLE Button**
Press this to switch the BD/DVD's subtitle language.
16. **OPEN/CLOSE Button**
To open and close the disc tray.
17. **TV POWER Button**
18. **INPUT SEL. Button**
Select among input terminals of TV.
19. **REVERSE/FORWARD STEP Buttons**
Each time this button is pressed, a new frame will appear.
20. **PLAY/PAUSE Button**
Press to play/pause a disc.
21. **CHANNEL Button**
Use this to select a TV program.
22. **TV MUTE Button**
Mutes the speakers of your TV.
23. **RETURN Button**
24. **POPUP MENU/TITLE MENU Button**
Use this to enter the popup menu/title menu.
25. **CANCEL Button**
26. **REPEAT A-B Button**
Allows you to repeat playback of the A-B section.
27. **ZOOM Button**
Enlarge JPEG Picture.
28. **REPEAT Button**
Allows you to repeat a title, chapter, track or disc.

Unpacking

Accessories

Check for the supplied accessories below.

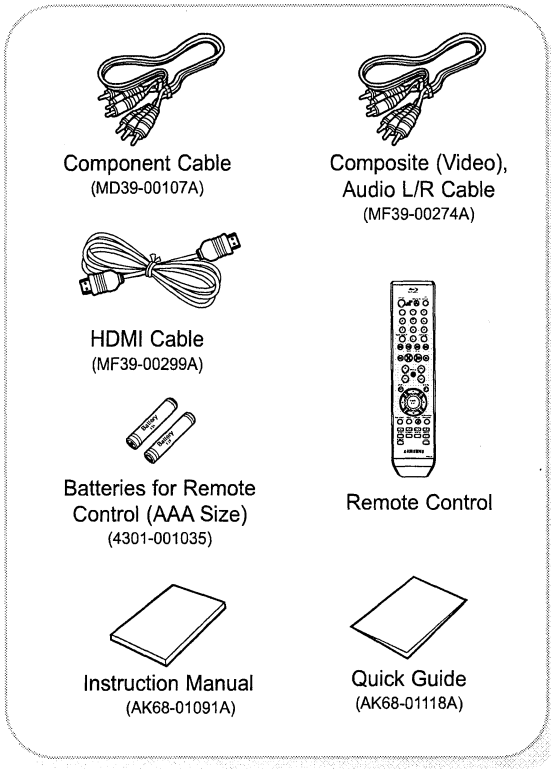

Preparing the Remote Control

 
Install Batteries in the Remote Control

- Open the battery cover on the back of the remote control.
- Insert two AAA batteries. Make sure that the polarities (+ and -) are aligned correctly.
- Close the battery cover.

If the remote does not operate properly:

- Check the polarity + - of the batteries (Dry-Cell)
- Check if the batteries are drained.
- Check if remote sensor is blocked by obstacles.
- Check if there is any fluorescent lighting nearby.

Dispose of batteries according to local environmental regulations. Do not put them in the household trash.

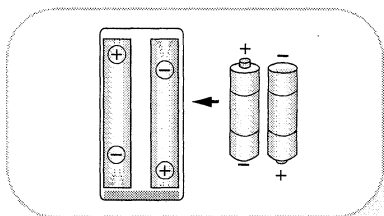

Setting the Remote Control

You can control certain functions of another manufacturer's TV with this remote control. Control function buttons include: **TV POWER**, **CH ^ v**, **VOL + -**, **TV MUTE**, **INPUT SEL.** button.

To determine whether your television is compatible, follow the instructions below.

1. Switch your television on.
2. Point the remote control towards the television.
3. Press and hold the **TV POWER** button and enter the two-figure code corresponding to the brand of your television, by pressing the appropriate number buttons.

Result: If your television is compatible with the remote control, it will switch off. It is now programmed to operate with the remote control.



- If several codes are indicated for your television brand, try each one in turn until you find one that works.
- If you replace the remote control's batteries, you must set the brand code again.

Then you can control the television using the following buttons after pressing the TV button.

Button	Function
TV POWER	Used to switch the television on and off.
INPUT SEL.	Used to select an external source.
VOL (+ -)	Used to adjust the volume of the television.
CH (^ v)	Used to select the desired channel.
TV MUTE	Used to toggle the sound on and off.



- The functions listed above will not necessarily work on all televisions. If you encounter problems, operate the television directly.

Controllable TV Codes

Brand	Code
SAMSUNG	TV POWER+01, +02, +03, +04, +05, +06, +07, +08, +09
AIWA	TV POWER+82
ANAM	TV POWER+10, +11, +12, +13, +14, +15, +16, +17, +18
BANG & OLUFSEN	TV POWER+57
BLAUPUNKT	TV POWER+71
BRANDT	TV POWER+73
BRIONVEGA	TV POWER+57
CGE	TV POWER+52
CONTINENTAL EDISON	TV POWER+75
DAEWOO	TV POWER+19, +20, +23, +24, +25, +26, +27, +28, +29, +30, +31, +32, +33, +34
EMERSON	TV POWER+64
FERGUSON	TV POWER+73
FINLUX	TV POWER+06, +49, +57
FORMENTI	TV POWER+57
FUJITSU	TV POWER+84
GRADIENTE	TV POWER+70
GRUNDIG	TV POWER+49, +52, +71
HITACHI	TV POWER+60, +72, +73, +75
IMPERIAL	TV POWER+52
JVC	TV POWER+61, +79
LG	TV POWER+06, +19, +20, +21, +22, +78
LOEWE	TV POWER+06, +69
LOEWE OPTA	TV POWER+06, +57
MAGNAVOX	TV POWER+40
METZ	TV POWER+57
MITSUBISHI	TV POWER+06, +48, +62, +65
MIVAR	TV POWER+52, +77
NEC	TV POWER+83
NEWSAN	TV POWER+68
NOBLEX	TV POWER+66
NOKIA	TV POWER+74
NORDMENDE	TV POWER+72, +73, +75
PANASONIC	TV POWER+53, +54, +74, +75
PHILIPS	TV POWER+06, +55, +56, +57
PHONOLA	TV POWER+06, +56, +57
PIONEER	TV POWER+58, +59, +73, +74
RADIOLA	TV POWER+06, +56
RADIOMARELLI	TV POWER+57
RCA	TV POWER+45, +46
REX	TV POWER+74
SABA	TV POWER+57, +72, +73, +74, +75
SALORA	TV POWER+74
SANYO	TV POWER+41, +42, +43, +44, +48
SCHNEIDER	TV POWER+06
SELECO	TV POWER+74
SHARP	TV POWER+36, +37, +38, +39, +48
SIEMENS	TV POWER+71
SINGER	TV POWER+57
SINUDYNE	TV POWER+57
SONY	TV POWER+35, +48
TELEAVA	TV POWER+73
TELEFUNKEN	TV POWER+67, +73, +75, +76
THOMSON	TV POWER+72, +73, +75
THOMSON ASIA	TV POWER+80, +81
TOSHIBA	TV POWER+47, +48, +49, +50, +51, +52
WEGA	TV POWER+57
YOKO	TV POWER+06
ZENITH	TV POWER+63