

Samsung Universal DVDVR Remote Quick Instruction

Part#: AK59-00062AG

1. Install the batteries.

Open the battery cover on the back of remote control.

Insert two AAA batteries. Make sure that the polarities (+ and -) are aligned correctly

Replace the battery cover.

"This remote requires two new AAA batteries"

2. To operate:

Press and release the desired mode button TV, VCR or DVD

"Depending on which product you wish to operate"

3. Press POWER button to turn on the product

Press other buttons to operate the features of your product.

If the remote control does not operate properly:

- Check the polarity + - of the batteries.
- Check if the remote sensor is blocked by obstacles.
- Check if the batteries are drained.
- Check if there is any fluorescent lighting nearby.

To determine whether your television is compatible, follow the instructions below.

1. Switch your television on.
2. Point the remote control towards the television.
3. Press and hold the TV button and enter the two-figure code simultaneously corresponding to the brand of your television by pressing the appropriate number buttons.

| Brand | Codes | Brand | Codes |
|------------|----------------|------------|----------|
| SAMSUNG | 01,14,15,23,31 | NEWSAN | 27 |
| DAEWOO | 19 | NOBLEX | 25 |
| EMERSON | 21 | PANASONIC | 12,24 |
| GRADIENTE | 30 | RCA | 07,29 |
| HITACHI | 10 | SANYO | 05,20 |
| JVC | 11 | SHARP | 02,16,22 |
| LG | 06,08,18 | SONY | 03 |
| LOEWE | 28 | TELEFUNKEN | 26 |
| MAGNAVOX | 04 | TOSHIBA | 09 |
| MITSUBISHI | 13 | ZENITH | 17 |

Result: If your television is compatible with the remote control, it will switch off. It is now programmed to operate with the remote control.

If several codes are indicated for your television brand, try each one in turn until you find one that works. If you replace the remote control's batteries, you must set the brand code again.

You can then control the television using the following buttons.

Button Function

TV POWER Used to switch the television on and off.

INPUT SEL. Used to select an external source.

TV VOL +/- Used to adjust the volume of the television.

TRK/CBC CH/TV CH(/) Used to select the desired channel.

TV MUTE Used to toggle the sound on and off.

0~9 Used to input number directly.

TV 100+/SET Button Used to select channels over 100.

The various functions may not be able to be controlled on all televisions. If you encounter problems, operate the television directly.