 



## Tour of the Remote Control

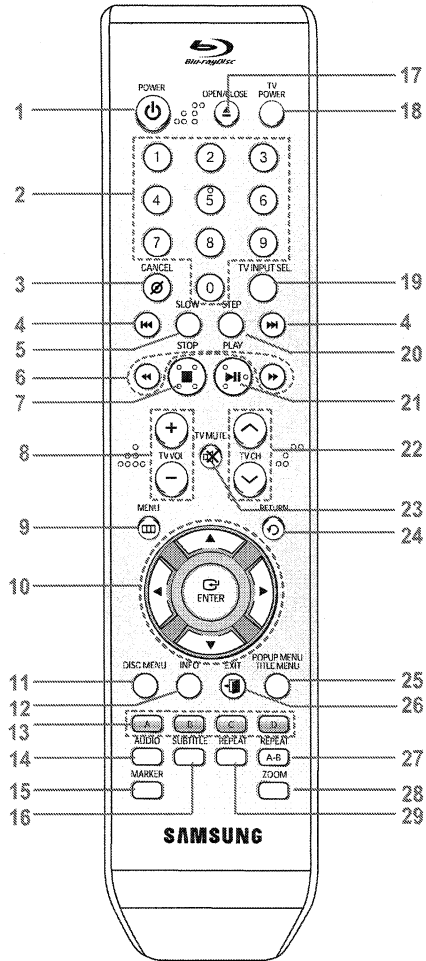

1. **POWER Button**
2. **NUMBER Buttons**
3. **CANCEL Button**
4. **REVERSE/FORWARD SKIP Buttons**  
Press to skip backwards or forwards.
5. **SLOW Button**  
Each time this button is pressed, the disc will play slowly.
6. **REVERSE/FORWARD SEARCH Buttons**  
Press to search a disc backwards or forwards.
7. **STOP Button**  
Press to stop a disc.
8. **TV VOL Buttons**  
TV volume adjustment
9. **MENU Button**  
Brings up the Blu-ray disc player's setup menu.
10. **ENTER/DIRECTION Buttons (▲▼◀▶ Buttons)**


11. **DISC MENU Button**  
Use this to enter the disc menu.
12. **INFO Button**  
This will display current setting or disc status.
13. **COLOR Buttons : RED(A), GREEN (B), YELLOW(C), BLUE(D)**  
Allow access to common functions of the Blu-ray disc player such as the Music or Photo List.
14. **AUDIO Button**  
Use this to access various audio functions on a disc (BD/DVD).
15. **MARKER Button**  
Use this to bookmark a position while playing a disc.
16. **SUBTITLE Button**  
Press this to switch the BD/DVD's subtitle language.
17. **OPEN/CLOSE Button**  
To open and close the disc tray.
18. **TV POWER Button**
19. **TV INPUT SEL. Button**  
After setup, allows you to set the input source on your TV.
20. **STEP Button**  
Each time this button is pressed, a new frame will appear.
21. **PLAY/PAUSE Button**  
Press to play/pause a disc.
22. **TV CH Button**  
Use this to select a TV program.
23. **TV MUTE Button**  
Mutes the speakers of your TV.
24. **RETURN Button**
25. **POPUP MENU/TITLE MENU Button**  
Use this to enter the popup menu/title menu.
26. **EXIT Button**
27. **REPEAT A-B Button**  
Allows you to repeat playback of a certain section.
28. **ZOOM Button**  
Enlarges photos on JPEG discs.
29. **REPEAT Button**  
Allows you to repeat a title, chapter, track or disc.
 
# Unpacking

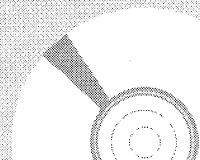

## Accessories

 Check for the supplied accessories below.

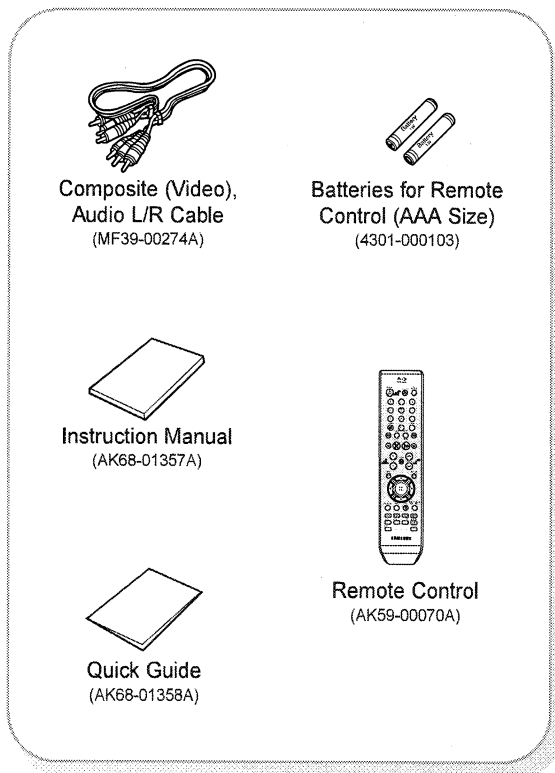

## Preparing the Remote Control

 
### Install Batteries in the Remote Control

- Open the battery cover on the back of the remote control.
- Insert two AAA batteries. Make sure that the polarities (+ and -) are aligned correctly.
- Close the battery cover.

### If the remote does not operate properly:

- Check the polarity + - of the batteries (Dry-Cell)
- Check if the batteries are drained.
- Check if remote sensor is blocked by obstacles.
- Check if there is any fluorescent lighting nearby.

Dispose of batteries according to local environmental regulations. Do not put them in the household trash.

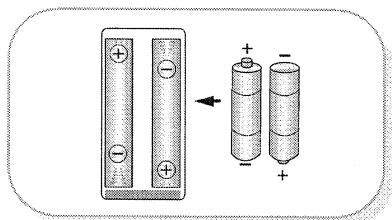

## Setting the Remote Control

You can control certain functions of your TV with this remote control.

Control function buttons include : **TV POWER**, **CH ^ v**, **VOL + -**, **TV MUTE**, **TV INPUT SEL.** button.

**To determine whether your television is compatible, follow the instructions below.**

1. Switch your television on.
2. Point the remote control towards the television.
3. Press and hold the **TV POWER** button and enter the two-figure code corresponding to the brand of your television, by pressing the appropriate number buttons. (see the next page for the code list).

**Result:** If your television is compatible with the remote control, it will switch off.

It is now programmed to operate with the remote control.



NOTE

- If several codes are indicated for your television brand, try each one in turn until you find one that works.
- If you replace the remote control's batteries, you must set the brand code again.

You can then control the television using the following buttons after pressing the **TV** button.

Button	Function
TV POWER	Used to switch the television on and off.
TV INPUT SEL.	Used to select an external source.
VOL (+ -)	Used to adjust the volume of the television.
CH ( ^ v )	Used to select the desired channel.
TV MUTE	Used to toggle the sound on and off.



NOTE

- The functions listed above will not necessarily work on all televisions. If you encounter problems, operate the television directly.

## Controllable TV Codes

Brand	Code
SAMSUNG	TV POWER+01, +02, +03, +04, +05, +06, +07, +08, +09
AIWA	TV POWER+82
ANAM	TV POWER+10, +11, +12, +13, +14, +15, +16, +17, +18
BANG & OLUFSEN	TV POWER+57
BLAUPUNKT	TV POWER+71
BRANDT	TV POWER+73
BRIONVEGA	TV POWER+57
CGE	TV POWER+52
CONTINENTAL EDISON	TV POWER+75
DAEWOO	TV POWER+19, +20, +23, +24, +25, +26, +27, +28, +29, +30, +31, +32, +33, +34
EMERSON	TV POWER+64
FERGUSON	TV POWER+73
FINLUX	TV POWER+06, +49, +57
FORMENTI	TV POWER+57
FUJITSU	TV POWER+84
GRADIENTE	TV POWER+70
GRUNDIG	TV POWER+49, +52, +71
HITACHI	TV POWER+60, +72, +73, +75
IMPERIAL	TV POWER+52
JVC	TV POWER+61, +79
LG	TV POWER+06, +19, +20, +21, +22, +78
LOEWE	TV POWER+06, +69
LOEWE OPTA	TV POWER+06, +57
MAGNAVOX	TV POWER+40
METZ	TV POWER+57
MITSUBISHI	TV POWER+06, +48, +62, +65
MIVAR	TV POWER+52, +77
NEC	TV POWER+83
NEWSAN	TV POWER+68
NOBLEX	TV POWER+66
NOKIA	TV POWER+74
NORDMENDE	TV POWER+72, +73, +75
PANASONIC	TV POWER+53, +54, +74, +75
PHILIPS	TV POWER+06, +55, +56, +57
PHONOLA	TV POWER+06, +56, +57
PIONEER	TV POWER+58, +59, +73, +74
RADIOLA	TV POWER+06, +56
RADIOMARELLI	TV POWER+57
RCA	TV POWER+45, +46
REX	TV POWER+74
SABA	TV POWER+57, +72, +73, +74, +75
SALORA	TV POWER+74
SANYO	TV POWER+41, +42, +43, +44, +48
SCHNEIDER	TV POWER+06
SELECO	TV POWER+74
SHARP	TV POWER+36, +37, +38, +39, +48
SIEMENS	TV POWER+71
SINGER	TV POWER+57
SINUDYNE	TV POWER+57
SONY	TV POWER+35, +48
TELEAVA	TV POWER+73
TELEFUNKEN	TV POWER+67, +73, +75, +76
THOMSON	TV POWER+72, +73, +75
THOMSON ASIA	TV POWER+80, +81
TOSHIBA	TV POWER+47, +48, +49, +50, +51, +52
WEGA	TV POWER+57
YOKO	TV POWER+06
ZENITH	TV POWER+63