 


### Graphic planes

Two individual, full HD resolution (1920x1080) video layers are available, on top of the HD video layer. One layer is assigned to video-related graphics (like subtitles), and the other layer is assigned to interactive elements, such as buttons or menus. Various wipes, fades and scroll effects may be available on both layers.

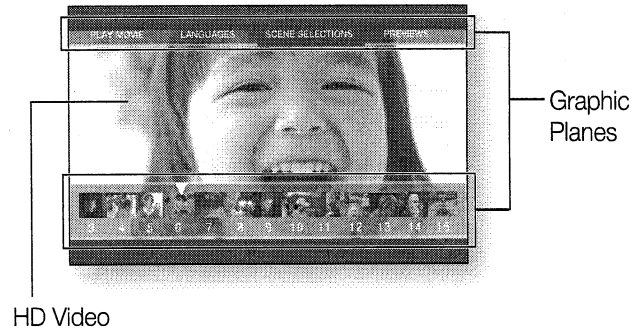

### Menu graphics

Support full color resolution graphics and animation, thereby greatly surpassing the capabilities of DVD-Video. Unlike DVD, Menus can be accessed during video playback.


### Menu sounds

When you highlight or select a menu option on a disc, sounds can be heard such as button clicks or a voice-over explaining the highlighted menu choice.

### Multi-page/PopUp Menu

With DVD-Video, playback is interrupted each time a new menu screen is accessed. Due to BD/HD DVD Disc's ability to preload data from the disc without interrupting playback, a menu may consist of several pages.

You can browse through the menu pages or select different menu paths, while the audio and video remain playing in the background.

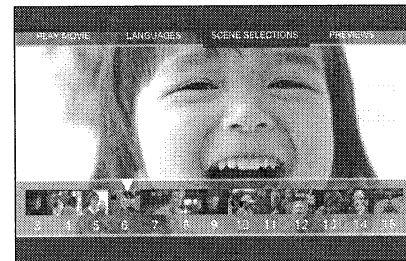

### Interactivity

With HD DVD, you can enjoy additional content such as animation on menu options and the movie, simultaneous playback of main and secondary movies using PIP (Picture-in-Picture), and the ability to download content via the Internet.

### User Browsable Slideshows

With BD/HD DVD Discs, you can browse through various still pictures while the audio remains playing.

### Subtitles

Depending on what is contained on the BD/HD DVD Disc, you may be able to select different font styles, sizes and colors for the subtitles, Subtitles may also be animated, scrolled or faded in and out.

### Multi-format System



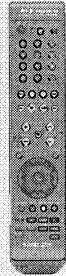
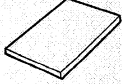
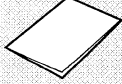
The HD DVD twin-format disc consists of the HD DVD and DVD layers on a single side. The HD DVD combi disc consists of the HD DVD and DVD layers on each side.

### Internet Connection (LAN Port)

Some HD DVD discs are designed to access a web site, allowing you to view additional content on your player.

## WHAT'S INCLUDED


Check for the supplied accessories below.
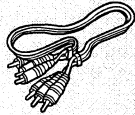
|   |  |   |
|---|--|---|
|  <p>Composite (Video), Audio L/R Cable<br/>(MF39-00274A)</p> |  <p>Batteries for Remote Control (AAA Size)<br/>(4301-001035)</p> |  <p>Remote Control (AK59-00075A)</p> |
|  <p>User Manual (AK68-01477A)</p>                            |  <p>Quick Guide (AK68-01480A)</p>                                 |   |

# remote control

## TOUR OF THE REMOTE CONTROL

### Installing batteries in the Remote Control

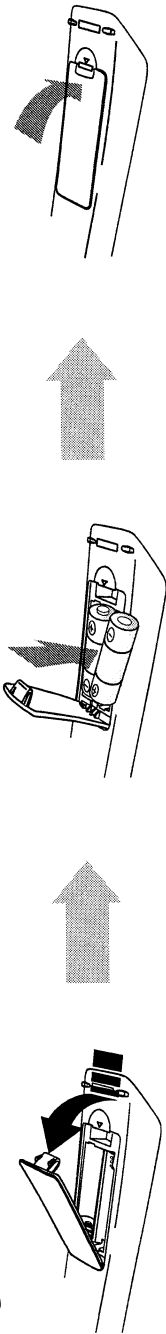

**1. Lift the cover at the back of the remote control upward as shown.**

**2. Install two AAA size batteries.**  
Make sure to match the "+" and "-" ends of the batteries with the diagram inside the compartment.

**3. Replace the cover.**  
Assuming typical TV usage, the batteries last for about one year.

