 



# key features of your blu-ray disc player

## WHAT'S INCLUDED


Check for the supplied accessories below.



 Adapter  
(BN44-00139A)




Adapter Cable  
(3903-000085)

 


Composite (Video), Audio L/R Cable  
(AC39-00073A)



 Assy Holder-Stand  
(AK97-02476A)



 Assy Bracket-Set & Bracket-Wall  
(AK97-02475A)




Wireless LAN Adapter  
(AK98-01080A)




Remote Control  
(AK59-00104L)



 
Batteries for Remote Control (AAA Size)  
(AC43-12002H)

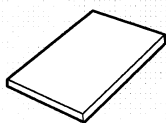

User Manual  
(AK68-01799A)

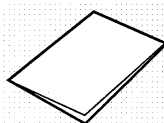 

Quick Guide  
(AK68-01800A)

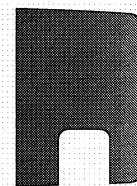 

COVER-JACK  
(AK96-01144A)




■ Screws for the bracket-wall are not included. Purchase screws appropriate for your type of wall.

# remote control
 
## TOUR OF THE REMOTE CONTROL


### Installing batteries in the Remote Control



1. Lift the cover at the back of the remote control upward as shown.

2. Install two AAA size batteries. Make sure to match the "+" and "-" ends of the batteries with the diagram inside the compartment.

 3. Replace the cover. Assuming typical TV usage, the batteries last for about one year.

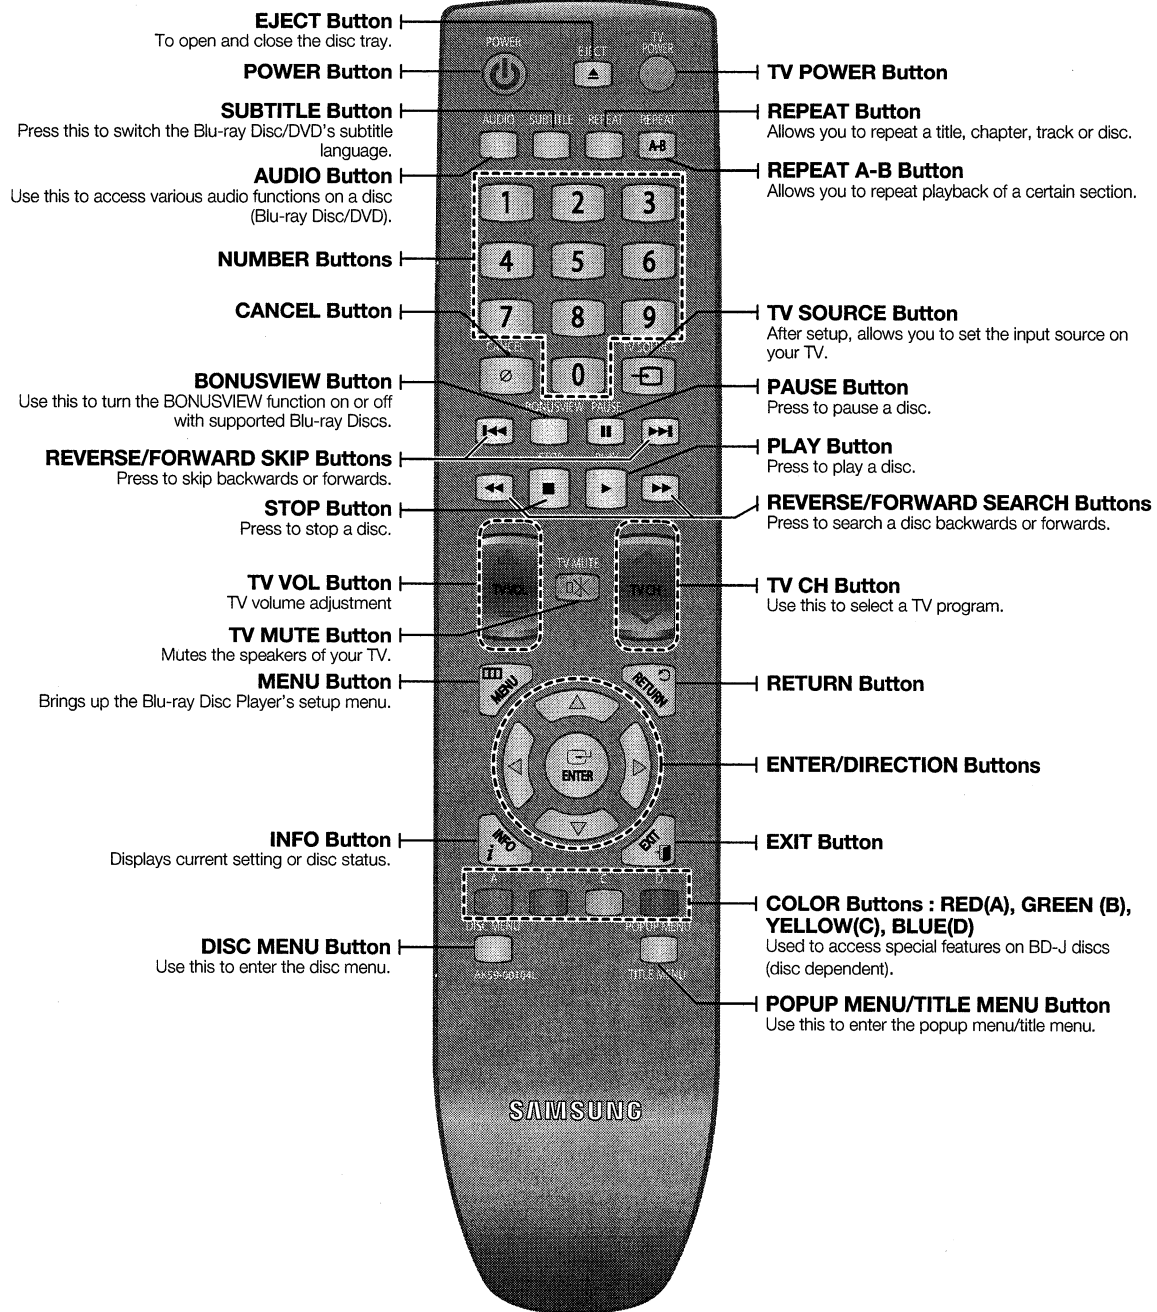

# remote control

## SETTING THE REMOTE CONTROL

You can control certain functions of your TV with this remote control.

Control function buttons include : **TV POWER**, **TV CH  $\wedge/\vee$** , **TV VOL +/-**, **TV MUTE**, **TV SOURCE** button.

**To determine whether your television is compatible, follow the instructions below.**

1. Switch your television on.
2. Point the remote control towards the television.
3. Press and hold the **TV POWER** button and enter the two-figure code corresponding to the brand of your television by pressing the appropriate number buttons. (see the next page for the code list).  
If your television is compatible with the remote control, it will switch off.  
It is now programmed to operate with the remote control.

- ✎ If several codes are indicated for your television brand, try each one in turn until you find one that works.
- ✎ If you replace the remote control's batteries, you must set the brand code again.

**You can then control the television using the following buttons after pressing the TV button.**

Button	Function
TV POWER	Used to switch the television on and off.
TV SOURCE	Used to select an external source.
TV VOL (+/-)	Used to adjust the volume of the television.
TV CH ( $\wedge/\vee$ )	Used to select the desired channel.
TV MUTE	Used to toggle the sound on and off.

- ✎ The functions listed above will not necessarily work on all televisions. If you encounter problems, operate the television directly.

## REGARDING THE BATTERY

**If the remote does not operate properly:**

- Check the polarity +/- of the batteries (Dry-Cell)
- Check if the batteries are drained.
- Check if remote sensor is blocked by obstacles.
- Check if there is any fluorescent lighting nearby.

**Dispose of batteries according to local environmental regulations. Do not put them in the household trash.**

