 


YOUR NEW TV

Remote Control Frequently Used Buttons

You can use the remote control up to a distance of about 23 feet from the TV. When using the remote, always point it directly at the TV.

- 1 POWER**
Turns the TV on and off.
- 2 MODE**
Selects a target device to controlled by the Samsung remote control (TV, VCR, Cable box or DVD).
- 3 VOL +, VOL -**
Press to increase or decrease the volume.
- 4 MUTE**
Press to temporarily cut off the sound.
- 5 MENU**
Displays the main on-screen menu.

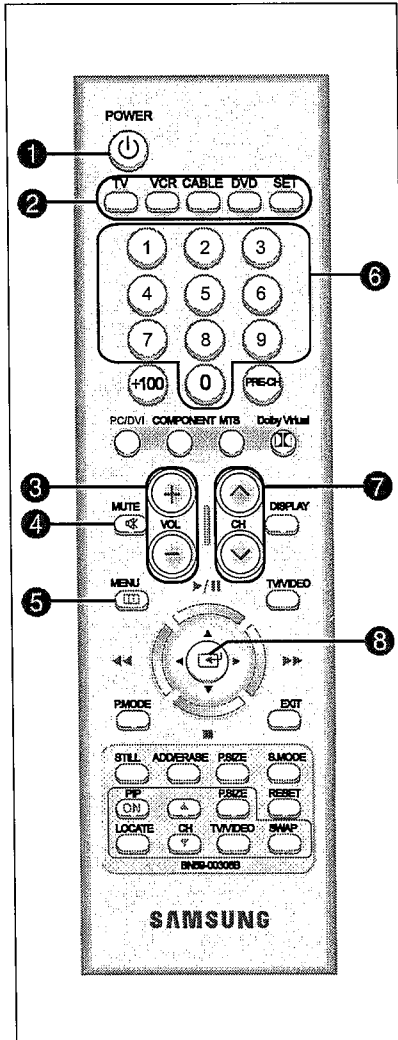

- 6 Number buttons**
Press to select channels directly on the TV.
- 7 CH ^ and CH v (Channel Up/Down)**
Press CH ^ or CH v to change channels.
- 8 JOYSTICK**
Use to select on-screen menu items and change menu values. (The remote control will only function with VCR or DVD units that are compatible with the LCD TV.)

YOUR NEW TV

Convenient Buttons

1 +100

Press to select channels over 100. For example, to select channel 121, press "+100", then press "2" and "1".

2 COMPONENT

Press to switch to the COMPONENT mode.

3 PC/DVI

Press to switch to the PC mode.

4 Menu adjustment and Video or DVD adjustment button

Moves or adjusts Menu. Adjusts the function of Video or DVD.

5 P.MODE

Adjusts the TV picture by selecting one of the preset factory settings.

6 ADD/ERASE

Press to add or erase channels in the TV's memory.

7 STILL

Press to stop the action during a particular scene. Press again to resume normal video.

8 PIP controls

CH

Displays the available channels in sequence. (These buttons change channels in the PIP window only.)

P.SIZE

Press to make the PIP window double, large or small.

LOCATE

Press to move the PIP window to any of the four corners of the TV screen.

 
TV/VIDEO

Press to select one of the available signal sources for the PIP window.

SWAP

Exchanges the video signal that is currently displayed on the main screen with the signal in the PIP window.

(While the main screen is in PC mode, it does not work.)

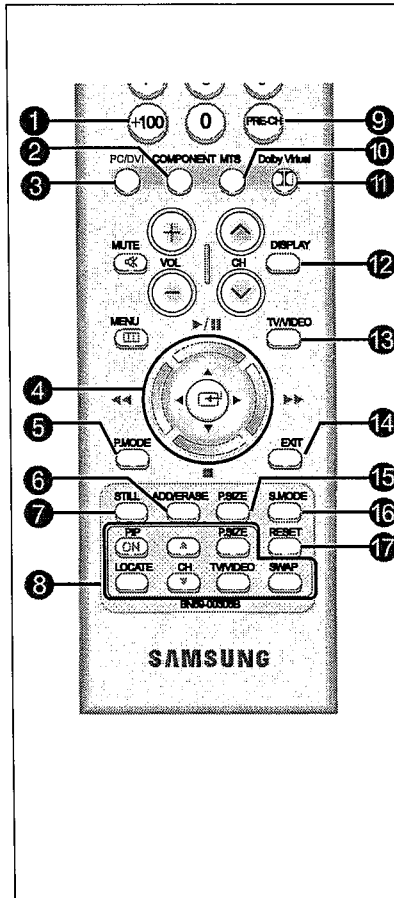

9 PRE-CH

Tunes to the previous channel.

10 MTS (Multichannel Television Stereo)

Press to choose stereo, mono or Separate Audio Program (SAP broadcast).

11 Dolby Virtual

This feature allows the TV L/R speakers to provide a Home Theater-like Dolby effect.

12 DISPLAY

Press to display the current channel and audio-video settings.

13 TV/VIDEO

Press to display all of the available video sources.

14 EXIT

Press the menu to exit.

15 P.SIZE

Press to change the screen size.

16 S.MODE

Adjust the TV sound by selecting one of the preset factory settings (or select your personal, customized sound settings).

17 RESET

Return to a previous menu on a disc/teletext store. (If the remote does not appear to function correctly, remove the batteries and press the 'RESET' key. Factory settings are restored when the batteries are replaced. Reset may be used when other products (DVD, VCR, etc.) are not working.)

You can use the remote control up to 23 feet from the TV. When using the remote, always point it directly at the TV.

Chapter Four

 
SPECIAL FEATURES

Setting Up Your Remote Control

After it has been set up properly, your remote control can operate in four different modes: TV, VCR, Cable, or DVD. Pressing the corresponding button on the remote control allows you to switch between these modes, and control whichever piece of equipment you choose.

Note

The remote control might not be compatible with all DVD Players, VCRs and Cable boxes.

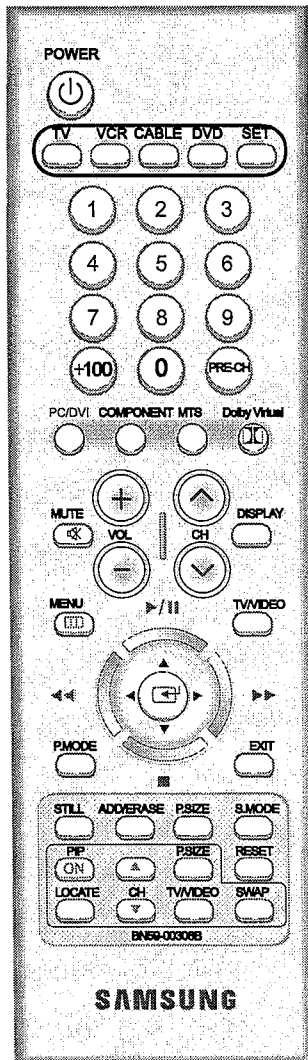

Setting Up the Remote to Operate Your VCR

 
- 1 Turn off your VCR.
- 2 Press the MODE button and make sure that the VCR LED is illuminated.
- 3 Press the Set button on your TV's remote control.
- 4 Using the number buttons on your remote control, enter three digits of the VCR code listed on page 4.4 of this manual for your brand of VCR. Make sure you enter three digits of the code, even if the first digit is a "0". (If more than one code is listed, try the first one.)
- 5 Press the Power button on the remote control. Your VCR should turn on if your remote is set up correctly.

If your VCR does not turn on after set up, repeat steps 2, 3, and 4, but try one of the other codes listed for your brand of VCR. If no other codes are listed, try each VCR code, 000 through 089.

Note on Using Remote Control Modes: VCR

When your remote control is in "VCR" mode, the volume buttons still control your TV's volume.

Setting Up the Remote to Operate Your Cable Box

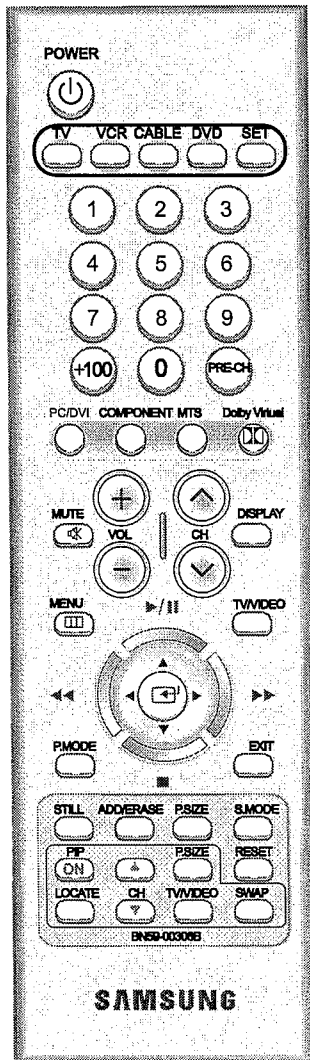


- 1 Turn off your cable box.
- 2 Press the MODE button and make sure that the Cable LED is illuminated.
- 3 Press the SET button on your TV's remote control.
- 4 Using the number buttons on your remote control, enter three digits of the cable box code listed on page 4.4 of this manual for your brand of cable box. Make sure you enter three digits of the code, even if the first digit is a "0."
If there is more than one code listed, try the first one.
- 5 Press the Power button on the remote control. Your cable box should turn on if your remote is set up correctly.

If your cable box does not turn on after set up, repeat steps 2, 3, and 4, but try one of the other codes listed for your brand of cable box. If no other codes are listed, try each code, 000 through 077.

Note on Using Remote Control Modes: Cable Box

When your remote control is in "Cable Box" mode, the volume buttons still control your TV's volume.

 Setting Up the Remote to Operate Your DVD

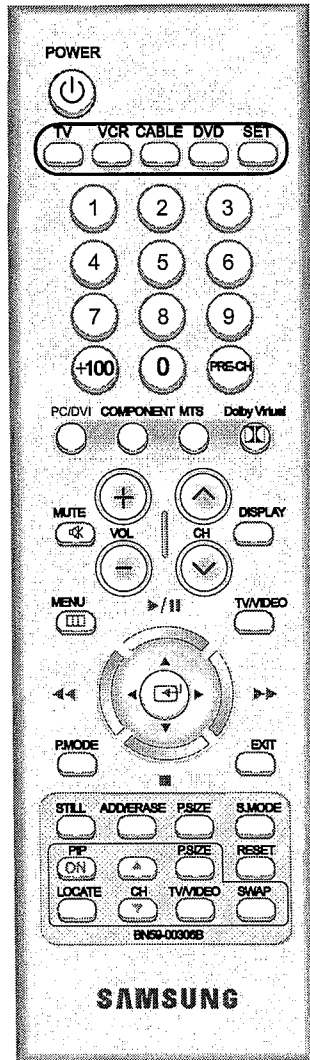

- 1 Turn off your DVD.
- 2 Press the MODE button and make sure that the DVD LED is illuminated.
- 3 Press the SET button on your TV's remote control.
- 4 Using the number buttons on your remote control, enter three digits of the DVD code listed on page 4.4 of this manual for your brand of DVD. Make sure you enter three digits of the code, even if the first digit is a "0."
If there is more than one code listed, try the first one.
- 5 Press the Power button on the remote control. Your DVD should turn on if your remote is set up correctly.

If your DVD does not turn on after set up, repeat steps 2, 3, and 4, but try one of the other codes listed for your brand of DVD. If no other codes are listed, try each code, 000 through 008.

Note on Using Remote Control Modes: DVD

When your remote control is in "DVD" mode, the volume buttons still control your TV's volume.

Remote Control Codes

VCR Codes

Admiral	015,088	KLH	082	RCA	009,014,016,017,037,044,046,063,078
Aiwa	024	LG	001,002,007	Samsung	000,016,022,031,041,051
Audio Dynamics	022,025	Lloyd	024	Sansui	025
Bell&Howell	011	Logik	040	Sanyo	011,021
Broksonic	019	LXI	024	Scott	022,050,058,077
Candle	016,018,022,054,055,061	Magnavox	017,038,062,065	Sears	011,014,018,021,027,028,044,052,057
Canon	017,062	Marantz	011,017,023,025,038,039,055,070	Sharp	015,036,048,054
Citizen	016,018,022,054,055,061	Marta		Shintom	026,035,040,064
Colortyme	023	MEI		Signature	024
Craig	016,021	Memorex		Sony	026,035,047
Curtis-Mathes	009,016,017,023,024,055,062,073,076	MGA		Sylvania	017,024,038,062,065
Daewoo	003,004,005,006,007,008,022,054,085	Midland		Symphonic	024
DBX		Minota		Tandy	011,024
Dimensia	009	Mitsubishi		Tashiko	
Dynatech	024	Montgomery ward		Tatung	039
Electrohome	036	MTC	016,024	Teac	024,039,078
Emerson	017,018,019,022,024,029,032,036,043,050,051,056,058,066,071,074,076,077,079	Multitech	016,024,040,041	Technics	017
Fisher	011,021,027,028,052,057,067	NEC	011,023,025,039,055,070,073	Temika	
Funai	024	Optimus	015	TMK	076
GE		Panasonic	017,062,084,086	Toshiba	014,022,028,057,058
Go Video	016	Pentax	014,044	Totevision	016,018
Hamman Kardon	023	Pentax Reserch+	055	Unitech	
Hitach	014,024,044,045	Philco	017,038,062,065	Vector Research	
Instant Replay	017	Philips	017,038	Victor	
JC Penney	011,014,016,017,023,025,039,044,060,062	Pioneer	014,025,042,059	Video Concepts	
JCL	011,017,023,025,039,055	Portland	053,054,061	Videosonic	
JVC		ProScan	009	Wards	
kenwood	011,023,025,039,055	Quartz	011	Yamaha	
		Quasar	017,053	Zenith	
		Radio Shack/Realistics	011,015,017,018,021,024,028,036,052,062		

Cable Box Codes

Anvision	015,016	NSC	017	Signature	054
Cable star	015,016	Oak	024,046	Sprucer	035
Eagle	015,016	Osk Sigma	024	Starcom	054
Eastm Int.		Panasonic	011,035,047,069	Stargate 2000	066
General Instrument	054	Philips	015,016,027,029,034,036,037,040,041,048,049	Sylvania	019,067
GI	012,013,023,031,032,033,038,044,075,076,077	Pioneer	026,028,052	Texscan	019,067
Hamlin	011,012,020,021,042,056	Randtek	015,016	Tocom	025,029,057,058,063
Hitachi	045,051,054	RCA	008,035,074	Unika	039,040,049
Jerrold	012,013,023,031,032,033,038,044,054,070,073	Regal	011,020,021	Universal	059,060
Macom	045,051	Regency	010,041	Viewstar	015,016,027,029,034,036,037,040,041,048,049
Magnavox	015,016,027,029,034,036,037,040,041,048,049	SA		Warner Amex	052
		Samsung	000,011,030,052,071,072	Zenith	022,050,065,069

DVD Codes

Philips	007
Proscan	008
RCA	008
Toshiba	002
Panasonic	006
Sony	004
Samsung	000