


SETUP

Tour of the Remote Control

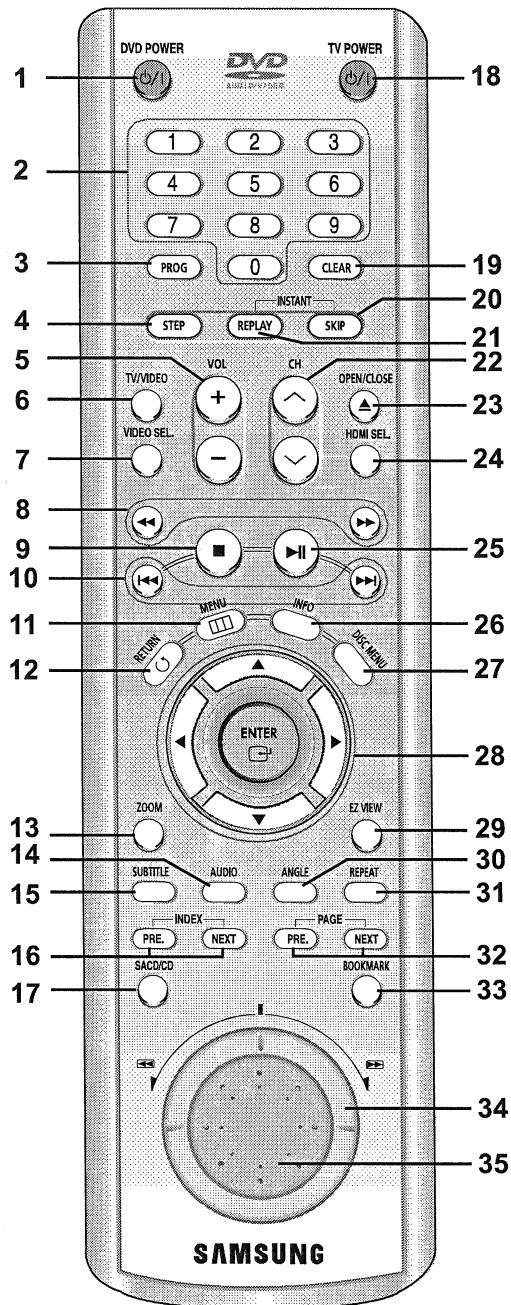

1. **DVD POWER Button**
Turns the power on or off.
2. **NUMBER Buttons**
3. **PROG Button**
Allows you to program a specific order.
4. **STEP Button**
Advances play one frame at a time.
5. **VOL (+, -) Buttons**
Control volume.
6. **TV/VIDEO Button**
Press to display all of the available video sources (i.e., TV, Cable, Video)

7. **VIDEO SEL. Button**
Selects Video output format.
8. **SEARCH Buttons (◀ / ▶)**
Allow you to search forward/backward through a disc.
9. **STOP Button (■)**
10. **SKIP Buttons (◀◀ / ▶▶)**
Use to skip the title, chapter or track.
11. **MENU Button**
Brings up the DVD player's menu.
12. **RETURN Button**
Returns to a previous menu.
13. **ZOOM Button**
Enlarges DVD picture.
14. **AUDIO Button**
Use this button to access various audio functions on a disc.
15. **SUBTITLE Button**
16. **INDEX Buttons**
Use to skip the INDEX.
17. **SACD/CD Button**
Selects Super Audio CD or CD playback mode.
18. **TV POWER Button**
Turns the TV's power on or off.
19. **CLEAR Button**
Use to remove menus or status displays from the screen.
20. **INSTANT SKIP Button**
This function skips playback ahead 10 seconds.
21. **INSTANT REPLAY Button**
This function is used to replay the previous 10 seconds of a movie from the current position.
22. **CH (∧, ∨) Buttons**
Channel selection.
23. **OPEN/CLOSE (▲) Button**
To open and close the disc tray.
24. **HDMI SEL. Button**
HDMI or DVI Output resolution setup.
25. **PLAY/PAUSE Button (▶||)**
Begin/Pause disc play.
26. **INFO Button**
Displays the current disc mode.
27. **DISC MENU Button**
Brings up the Disc menu.
28. **ENTER/▲▼◀▶ Buttons**
This button functions as a toggle switch.
29. **EZ VIEW Button**
The aspect ratio of a picture can easily be adjusted according to the screen size of your TV (16:9 or 4:3).
30. **ANGLE Button**
Use to access various camera angles on a DVD.
31. **REPEAT Button**
Allows you to repeat play a title, chapter, track, or disc.
32. **PAGE Buttons**
Use to skip the PAGE.
33. **BOOKMARK Button**
34. **SHUTTLE DIAL (Search mode)**
Performs fast motion play.
35. **JOG DIAL (Step mode)**
Operates frame by frame play. In CD mode, performs track search.

Chapter 6

REFERENCE

Controlling a TV with the Remote control

The remote control can also be set up to control most TVs. To program the remote control, use the code that corresponds to your brand.

TV Codes			
BRAND	CODE	BRAND	CODE
ANAM	10, 11, 12, 13, 14, 15, 16, 17, 18	NORDMENDE	72, 73
AIWA	82	NOKIA	74
BANG&OLUFSEN	57	PANASONIC	53, 54, 74, 75
BLAUPUNKT	71	PHILIPS	06, 55, 56, 57
BRANDT	73	PHONOLA	06, 56, 57
BRIONVEGA	57	PIONEER	58, 59, 73, 74, 75
CGE	52	RADIOLA	06, 56
CONTINENTAL EDISON	75	RADIOMARELLI	57
DAEWOO	19, 20, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34	RCA	45, 46
		REX	74
EMERSON	64	SABA	57, 72, 73, 74, 75
FERGUSON	73	SALORA	74
FINLUX	06, 49, 57	SAMSUNG	01, 02, 03, 04, 05, 06, 07, 08, 09
FORMENTI	57	SANYO	41, 42, 43, 44, 48
FUJITSU	84	SCHNEIDER	06
GRADIENTE	70	SELECO	74
GRUNDIG	49, 52, 71	SHARP	36, 37, 38, 39, 48
HITACHI	60, 72, 73, 75	SIEMENS	71
IMPERIAL	52	SINGER	57
JVC	61, 79	SINUDYNE	57
LG	06, 19, 20, 21, 22, 78	SONY	35, 48
LOEWE	06, 69	TELEAVA	73
LOEWE OPTA	06, 57	TELEFUNKEN	67, 73, 75, 76
MAGNAVOX	40	THOMSON	72, 73, 75
METZ	57	THOMSON ASIA	80, 81
MITSUBISHI	06, 48, 62, 65	TOSHIBA	47, 48, 49, 50, 51, 52
MIVAR	52, 77	WEGA	57
NEC	83	YOKO	06
NEWSAN	68	ZENITH	63
NOBLEX	66		

1. Turn on the TV.
2. Point the DVD's remote control at the TV.
3. While holding the TV POWER button down, enter the code for your brand.
4. If the TV turns off, setup is complete. Enter other codes of the same brand if the first code does not work.

You can control the TV POWER, CH (∧, ∨), VOL (+, -) and TV/WIDEO functions of another manufacturer's TV.

- The remote control may not be able to control every model TV of the brands listed.
- If you replace the remote control's batteries, set the brand code again.

e.g) For Samsung TVs

While holding down the TV POWER button, enter 0 and then 1.