


SETUP

Tour of the Remote Control

- 1 **POWER button**
Turns the DVD-VCR's power on and off.
- 2 **NUMBER buttons**
- 3 **100+ button**
- 4 **DVD button**
Use to operate DVD.
- 5 **VCR button**
Use to operate VCR.
- 6 **DVD/M.CARD button**
Use to select DVD or M.CARD mode.
- 7 **VOL (+, -) buttons**
- 8 **Playback-related buttons**
Search/Skip/Stop/Play/Pause
- 9 **SUBTITLE button**
Use to display the DVD's subtitle language.
- 10 **MENU button**
Brings up the DVD-VCR player's menu.
- 11 **ENTER/▲▼◀▶ buttons**
This button functions as a toggle switch.
- 12 **REC button**
Use to begin recording. (VCR)
- 13 **CLEAR button**
Use to remove menus or status displays from the screen.
- 14 **EZVIEW/SPEED button**
The aspect ratio of a picture can easily be adjusted according to the screen size of your TV (16:9 or 4:3).

Use to select the tape recording speed. (VCR)
- 15 **MODE button**
Use to select the program or random play.

REPEAT button
Allows you to repeat play a title, chapter, track, or disc. (DVD)

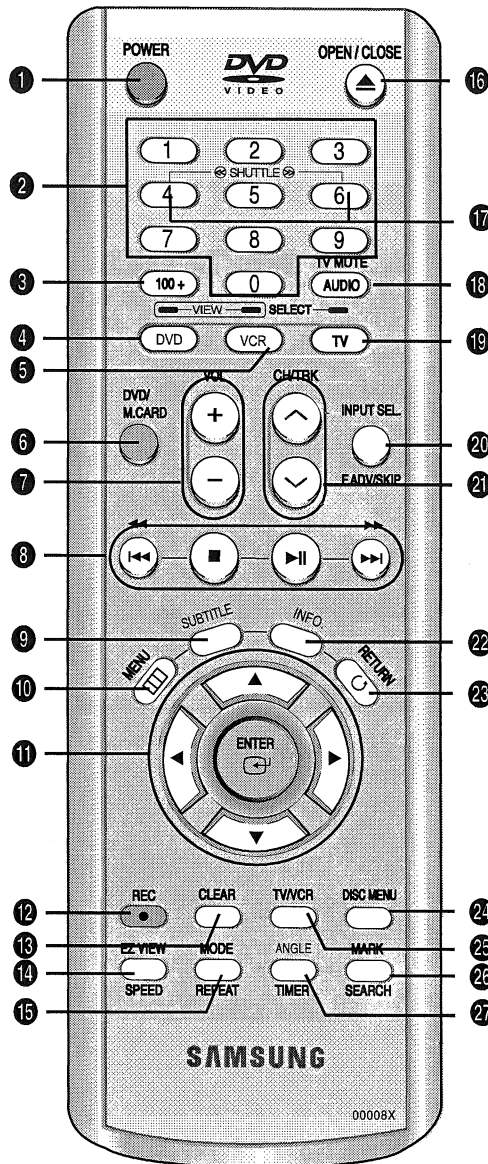

- 16 **OPEN/CLOSE button**
- 17 **SHUTTLE (◀▶) buttons**
Use to play a sequence at variable speeds. (VCR)
- 18 **AUDIO/TV MUTE button**
Use this to access various audio functions on a disc. (DVD mode)
This operates as Sound Mute. (TV mode)
- 19 **TV button**
Use to operate TV.
- 20 **F.ADV/SKIP/INPUT SEL. button**
Use to advance play one frame at a time. (DVD and VCR)
Use to fast forward a video tape. (VCR)
Use to select an external signal source.
- 21 **CH/TRK button**
Use to change channels. (TV)
Use to adjust tape tracking. (VCR)
- 22 **INFO. button**
Displays the current disc mode. (DVD)
- 23 **RETURN button**
Returns to a previous menu.
- 24 **DISC MENU button**
Brings up the Disc menu. (DVD)
- 25 **TV/VCR button**
Use to switch between TV and VCR mode.
- 26 **MARK/SEARCH button**
Use to memorize scenes for replay. (DVD)
Displays the VCR Function menu. (VCR)
- 27 **ANGLE/TIMER button**
Use to access various camera angles on a disc. (DVD)
Displays the Manual Clock menu.

Chapter 6

REFERENCE

Using the TV Buttons on the Remote Control

Your DVD-VCR remote control will work with Samsung televisions and compatible brands.

To determine whether your television is compatible, follow the instructions below.

- 1 Switch your television on.
- 2 Point the remote control towards the television.
- 3 Hold down the TV button and enter the two-figure code corresponding to the brand of your television, by pressing the appropriate numeric buttons.

TV Codes	
BRAND	CODE
SAMSUNG	01, 14, 15, 23
DAEWOO	19
EMERSON	21
HITACHI	10
LG	06, 08, 18
LOEWE	28
MAGNAVOX	04
NEWSAN	27
NOBLEX	25
PANASONIC	12, 24
RCA	07, 29
SANYO	05, 20
SHARP	02, 16, 22
SONY	03
TELEFUNKEN	26
TOSHIBA	09
ZENITH	17

Note

- If your television is compatible with the remote control, it will switch off. It is now programmed to operate with the remote control.
- If several codes are indicated for your television brand, try each one in turn until you find one that works.

You can then control the television using the following buttons.

Button	Function
POWER	Used to switch the television on and off.
INPUT SEL.	Used to select an external source.
VOL + or -	Used to adjust the volume of the television.
CH (^ or v)	Used to select the required channel.
TV MUTE	Used to toggle the sound on and off.

The various functions will not necessarily work on all televisions. If you encounter problems, operate the television directly.