 


Remote Control Unit

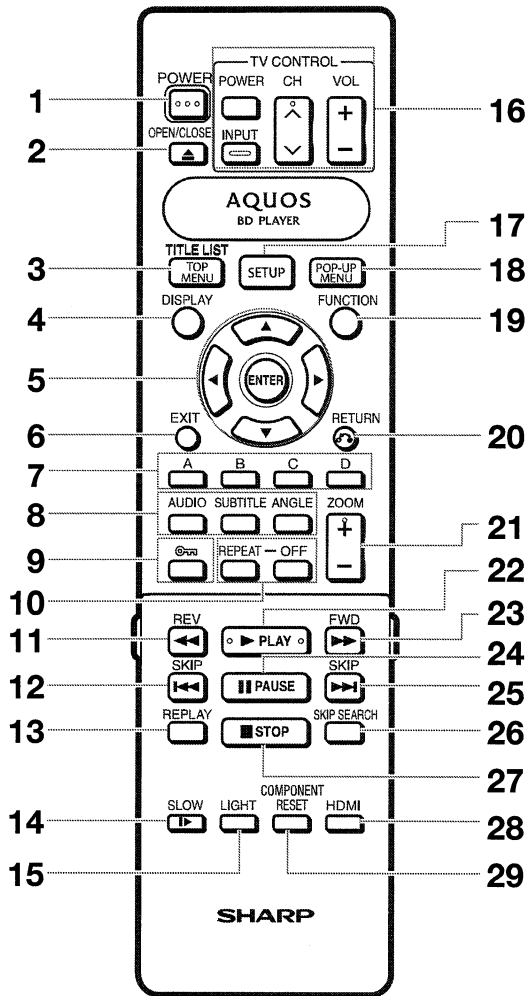

- 1 POWER (p. 22)
- 2 ▲ OPEN/CLOSE (p. 24)
- 3 TOP MENU, TITLE LIST (pp. 25, 26)
- 4 DISPLAY (p. 21)
- 5 Cursor buttons (▲/▼/◀/▶), ENTER (pp. 22, 36)
- 6 EXIT (pp. 22, 36)
- 7 A (Red), B (Green), C (Blue), D (Yellow) (p. 27)
- 8 AUDIO (p. 29), SUBTITLE (p. 29), ANGLE (p. 30)
- 9 🔒 (Lock) (See below.)
- 10 REPEAT (pp. 28, 29), OFF (for REPEAT) (pp. 28, 29)
- 11 ◀◀ REV (p. 28)
- 12 ◀◀◀ SKIP (p. 26)
- 13 REPLAY (p. 28)
- 14 ▶ SLOW (p. 28)
- 15 LIGHT (p. 23)
- 16 TV CONTROL buttons (p. 21)
- 17 SETUP (pp. 22, 36)
- 18 POP-UP MENU (p. 25)
- 19 FUNCTION (p. 31)
- 20 ⏪ RETURN (p. 28)
- 21 ZOOM +/− (p. 28)
- 22 ▶ PLAY (p. 24)
- 23 ▶▶ FWD (p. 28)
- 24 || PAUSE (p. 28)
- 25 ▶▶|| SKIP (p. 26)
- 26 ◼ SKIP SEARCH (p. 28)
- 27 ◼ STOP (p. 24)
- 28 HDMI (p. 14)
- 29 COMPONENT RESET (p. 33)
- 30 Number buttons (p. 32)
- 31 ENTER (p. 32)

This button is the same operation as **5** ENTER.


- 32 CLEAR (p. 32)

To clear the input number

- 33 Non-functional buttons

These buttons on the remote control are non-functional. They have no operation at all.

Buttons under the cover

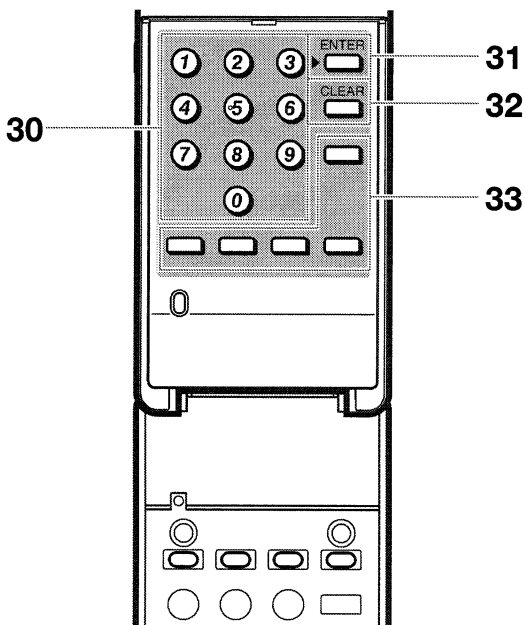

Keylock function

You can set the keylock to prevent accidental operations.

This function allows TVs compatible with AQUOS LINK to also perform a Key Lock on the player.

Press and hold 🔒 (Lock) for more than 5 seconds.

- Each time you perform this operation, the function is activated or deactivated.
- If you try to operate the Player while the keylock function is set, "Hold" blinks on the front display panel to indicate that the keylock function is set.

Hold


NOTE

- This remote control unit is equipped with two **ENTER** buttons (**5** and **31** listed above). The **ENTER** button under the cover is useful when using with the **Number** buttons.


Before Starting Playback

Loading the Batteries in the Remote Control


- 1 Press down on the tab in the direction of the arrow to remove the battery cover.

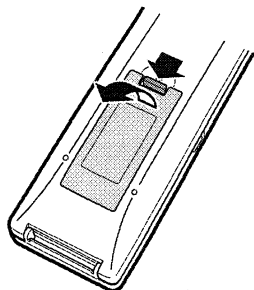

- 2 Load the two R-03 size batteries ("AAA" size, UM/SUM-4) supplied with the remote control unit. Make sure that the battery poles (+) and (-) are positioned as indicated.

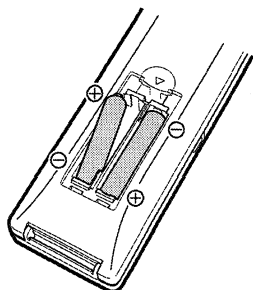


- 3 Slide the battery cover in the direction of the arrow until it clicks.

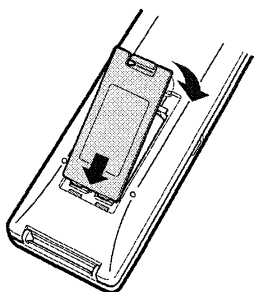

NOTE


- Do not subject the remote control unit to shock, water or excessive humidity.
- The remote control unit may not function if the Player's remote sensor is in direct sunlight or any other strong light.
- Incorrect use of batteries may cause them to leak or burst. Read the battery warnings and use the batteries properly.
- Do not mix old and new batteries, or mix different brands.
- Remove the batteries if you will not use the remote control unit for an extended period of time.

Approximate operating range of remote control

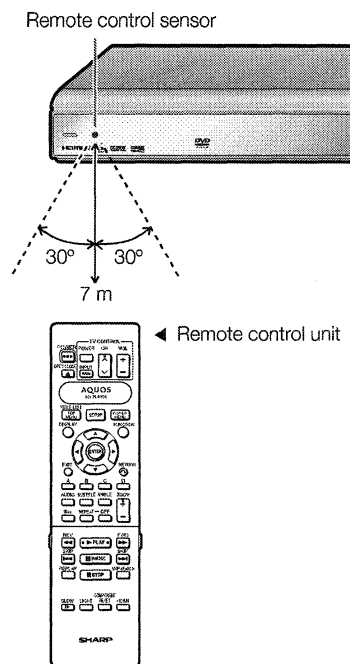

Connecting the Power Cord


Plug the supplied AC cord into the AC IN terminal on the rear of the Player. Then plug into AC outlet.

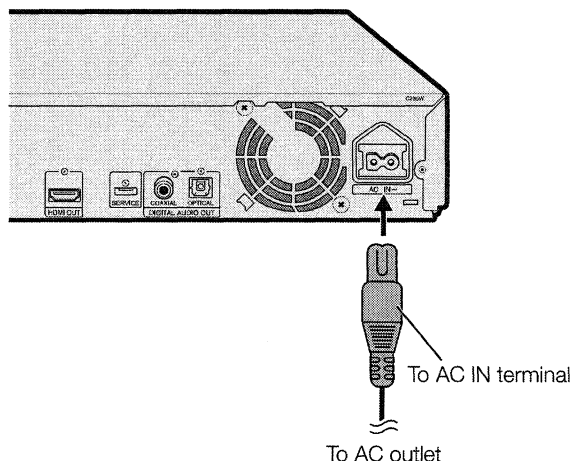

NOTE

- Place the Player close to the AC outlet, and keep the power plug within reach.
- TO PREVENT RISK OF ELECTRIC SHOCK, DO NOT TOUCH THE UN-INSULATED PARTS OF ANY CABLES WHILE THE AC CORD IS CONNECTED.
- The STANDBY indicator blinks while the Player is preparing for starting up. You cannot turn the Player on until the STANDBY indicator stops blinking.

Before Starting Playback

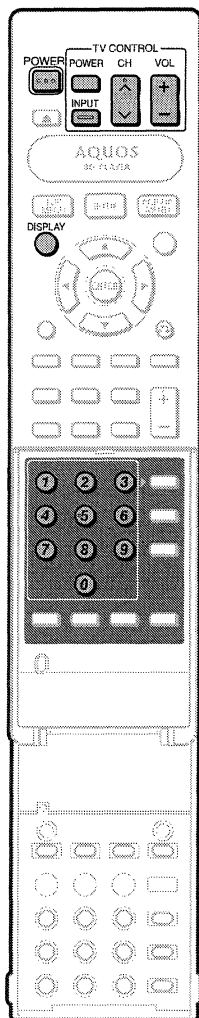

Setting the Remote Control Code


- 3 types of remote control codes operate this Player: RC-1, RC-2 and RC-3. If you operate this Player by remote control along with another SHARP Blu-ray Disc Player or DVD Player placed next to it simultaneously, switching the remote control code (both the Player and remote control) to one of the signals (RC-1, RC-2 or RC-3) will let you operate only with this Player.
- Make sure to set the Player and remote control to the same remote code. You can not operate the Player if they are not set to the same code.

Setting the Remote Control Code of the Remote

Example: Setting the code to "RC-3".

- 1 Press and hold **3** first and then **POWER** on the remote control together for more than 5 seconds.
- 2 Press **POWER** to turn off the player.


POWER

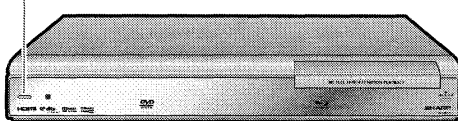

Setting the Remote Control Code of the Player


- 3 Point the remote control at the player, then press and hold the **DISPLAY** button.

Remote control sensor

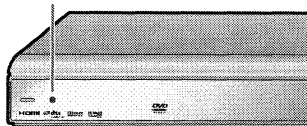

The display on the player changes as shown below, and the player will be set to the same number as the remote control.

Example: Change "RC-1" to "RC-3".

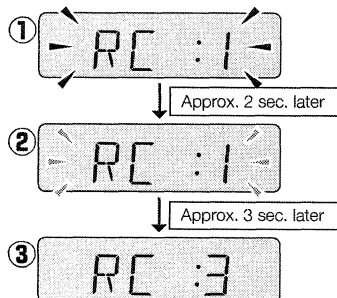

If remote control does not work

First, press **Power** to turn on the player. Press **POWER** on the remote control and check the front panel display (RC-1, RC-2 or RC-3). Set the remote control code according to the display and press **POWER** to see if you can turn on/off the Player.

Operating a SHARP TV Using the Remote Control

The Universal Remote Control may operate the basic functions of the SHARP TV.

TV function control

- TV Power: POWER
- TV Channel up/down: CH \wedge / \vee
- TV Volume up/down: VOL + / -
- TV-AV Selector: INPUT

3

Disc Playback