 


Remote

The available functions of the remote differ depending on the disc or the situation.

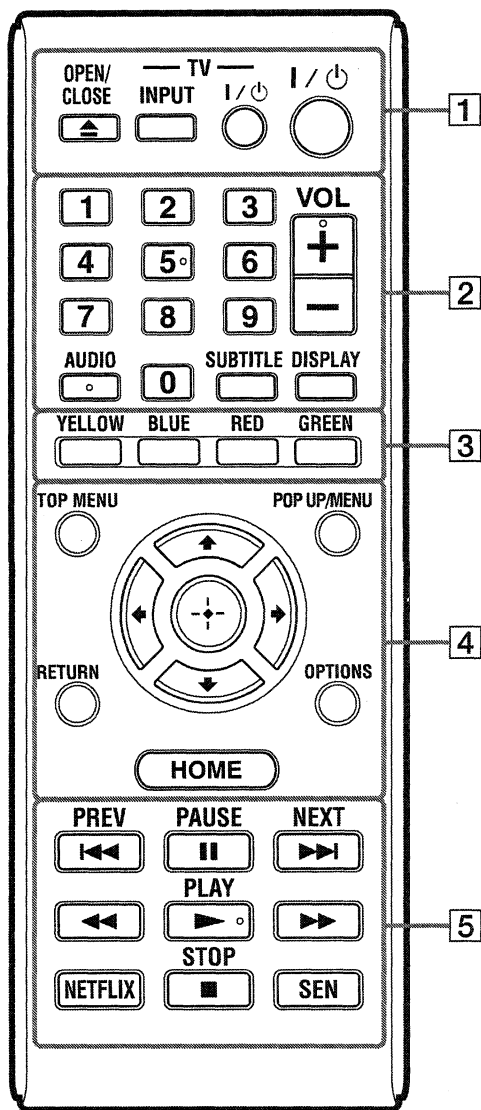

Number 5, AUDIO, VOL +, and ► PLAY buttons have a tactile dot. Use the tactile dot as a reference when operating the player.

The player automatically returns to standby mode

If any button on the player or remote is not pressed for more than 30 minutes, the player automatically returns to standby mode.

1 ▲ OPEN/CLOSE

Opens or closes the disc tray.

-TV- INPUT

Switches between TV and other input sources.

-TV- I/

Turns on the TV, or sets to standby mode.

I/

Turns on the player, or sets to standby mode.

2 Number buttons (0 - 9)

Enters the title/chapter numbers, etc.

VOL +/-

Adjusts the TV volume.

AUDIO (page 17)

Selects the language track when multi-lingual tracks are recorded on BD-ROMs/DVD VIDEOS.

Selects the sound track on CDs.

SUBTITLE (page 17)

Selects the subtitle language when multi-lingual subtitles are recorded on BD-ROMs/DVD VIDEOS.

DISPLAY (page 12)

Displays the playback information on the screen.

3 Color buttons (YELLOW/BLUE/RED/GREEN)

Shortcut keys for interactive functions.

4 TOP MENU

Opens or closes the BD's or DVD's Top Menu.

POP UP/MENU

Opens or closes the BD-ROM's Pop-up Menu, or the DVD's menu.

OPTIONS (page 14)

Displays the available options on the screen.

HOME

Enters the player's home menu.

Displays the wall paper when pressed on the category icon of the home menu.

RETURN

Returns to the previous display.



Moves the highlight to select a displayed item.

Center button (ENTER)

Enters the selected item.

5 I◀◀ PREV/NEXT ▶▶I

Skips to the previous/next chapter, track, or file.

II PAUSE

Pauses or re-starts playback.

◀◀/▶▶ (fast reverse/fast forward)

- Fast reverses/fast forwards the disc when pressed during playback. Each time you press the button during playback of videos, the search speed changes.
- Plays in slow motion, when pressed for more than one second in pause mode.
- Plays one frame at a time, when pressed briefly in pause mode.

▶ PLAY

Starts or re-starts playback.

NETFLIX (page 13)

Accesses the “NETFLIX” online service.

■ STOP

Stops playback and remembers the stop point (resume point).

 
The resume point for a title/track is the last point you played or the last photo for a photo folder.

SEN

Accesses the “Sony Entertainment Network™” online service.

Home menu display

The home menu appears when you press HOME. Select a category using ◀/▶. Select an item using ↑/↓, and press ENTER.

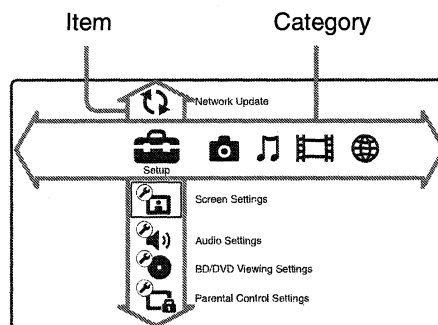

[Setup]: Adjusts the player settings.

[Photo]: Displays photos.

[Music]: Plays music.

[Video]: Plays videos.

[Network]: Displays network items.

AVCHD format disc will not play if it has not been correctly finalized.

 
- *3 The player does not play coded files such as Lossless.



- Some files may not play depending on the format, the encoding, or recording condition.
- Some files edited on a PC may not play.
- The player can recognize the following files or folders in BDs, DVDs, CDs and USB devices:
 - up to folders in the 3rd tree
 - up to 500 files in a single tree
- Some USB devices may not work with this player.
- The player can recognize Mass Storage Class (MSC) devices, Still Image Capture Device (SICD) class devices and 101 keyboard.
- To avoid data corruption or damage to the USB memory or devices, turn off the player when connecting or removing the USB memory or devices.
- The player may not play high bit rate video files on DATA CDs smoothly. You are recommended to play such files using DATA DVDs.

Notes About the Discs

- To keep the disc clean, handle the disc by its edge. Do not touch the surface. Dust, fingerprints, or scratches on the disc may cause it to malfunction.

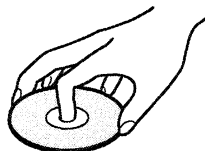

- Do not expose the disc to direct sunlight or heat sources such as hot air ducts, or leave it in a car parked in direct sunlight as the temperature may rise considerably inside the car.
- After playing, store the disc in its case.
- Clean the disc with a cleaning cloth. Wipe the disc from the center out.



- Do not use solvents such as benzine, thinner, commercially available disc/lens cleaners, or anti-static spray intended for vinyl LPs.
- If you have printed the disc's label, dry the label before playing.
- Do not use the following discs.

- A lens cleaning disc.
- A disc that has a non-standard shape (e.g., card, heart).
- A disc with a label or sticker on it.
- A disc that has cellophane tape or sticker adhesive on it.
- Do not resurface the playing side of a disc to remove surface scratches.

Code numbers of controllable TVs

While holding down -TV- , enter the TV manufacturer's code using the number buttons.

If more than one code number is listed, try entering them one at a time until you find the one that works with your TV.

Manufacturer	Code number
Sony	01 (default)
Hitachi	02
LG/Goldstar	04
Mitsubishi/MGA	13
NEC	04
Panasonic	19
Philips	21
Pioneer	16
RCA	10
Samsung	20
Sharp	18
Toshiba	07

Language code list

For details, see [BD/DVD Viewing Settings] (page 17).

The language spellings conform to the ISO 639: 1988 (E/F) standard.

Code Language			
1027	Afar	1028	Abkhazian
1032	Afrikaans	1039	Amharic
1044	Arabic	1045	Assamese
1051	Aymara	1052	Azerbaijani
1053	Bashkir	1057	Byelorussian
1059	Bulgarian	1060	Bihari
1061	Bislama	1066	Bengali
1067	Tibetan	1070	Breton

Code Language		
1079	Catalan	1093 Corsican
1097	Czech	1103 Welsh
1105	Danish	1109 German
1130	Bhutani; Dzongkha	1142 Greek
1144	English	1145 Esperanto
1149	Spanish	1150 Estonian
1151	Basque	1157 Persian
1165	Finnish	1166 Fiji
1171	Faroese	1174 French
1181	Frisian	1183 Irish
1186	Scots Gaelic	1194 Galician
1196	Guarani	1203 Gujarati
1209	Hausa	1217 Hindi
1226	Croatian	1229 Hungarian
1233	Armenian	1235 Interlingua
1239	Interlingue	1245 Inupiak
1248	Indonesian	1253 Icelandic
1254	Italian	1257 Hebrew
1261	Japanese	1269 Yiddish
1283	Javanese	1287 Georgian
1297	Kazakh	1298 Greenlandic; Kalaallisut
1299	Cambodian; Khmer	1300 Kannada
1301	Korean	1305 Kashmiri
1307	Kurdish	1311 Kirghiz
1313	Latin	1326 Lingala
1327	Laotian; Lao	1332 Lithuanian
1334	Latvian	1345 Malagasy
1347	Maori	1349 Macedonian
1350	Malayalam	1352 Mongolian
1353	Moldavian	1356 Marathi
1357	Malay	1358 Malese; Maltese
1363	Burmese	1365 Nauru
1369	Nepali	1376 Dutch
1379	Norwegian	1393 Occitan
1403	Oromo	1408 Oriya
1417	Punjabi; Panjabi	1428 Polish
1435	Pashto; Pushto	1436 Portuguese
1463	Quechua	1481 Rhaeto- Romance
1482	Kirundi; Rundi	1483 Romanian
1489	Russian	1491 Kinyarwanda
1495	Sanskrit	1498 Sindhi
1501	Sangho; Sango	1502 Serbo-Croatian
1503	Singhalese; Sinhalese	1505 Slovak
1506	Slovenian	1507 Samoan
1508	Shona	1509 Somali
1511	Albanian	1512 Serbian
1513	Siswati; Swati	1514 Sesotho; Sotho southern
1515	Sundanese	1516 Swedish
1517	Swahili	1521 Tamil
1525	Telugu	1527 Tajik
1528	Thai	1529 Tigrinya
1531	Turkmen	1532 Tagalog
1534	Setswana; Tswana	1535 Tonga; Tonga islands

Code Language		
1538	Turkish	1539 Tsonga
1540	Tatar	1543 Twi
1557	Ukrainian	1564 Urdu
1572	Uzbek	1581 Vietnamese
1587	Volapük	1613 Wolof
1632	Xhosa	1665 Yoruba
1684	Chinese	1697 Zulu
1703	Not specified	

Parental control/area code

For details, see [Parental Control Area Code]
(page 17).

Code Area		
2044	Argentina	2047 Australia
2046	Austria	2057 Belgium
2070	Brazil	2090 Chile
2092	China	2093 Colombia
2115	Denmark	2165 Finland
2174	France	2109 Germany
2200	Greece	2219 Hong Kong
2248	India	2238 Indonesia
2239	Ireland	2254 Italy
2276	Japan	2304 Korea
2333	Luxembourg	2363 Malaysia
2362	Mexico	2376 Netherlands
2390	New Zealand	2379 Norway
2427	Pakistan	2424 Philippines
2428	Poland	2436 Portugal
2489	Russia	2501 Singapore
2149	Spain	2499 Sweden
2086	Switzerland	2543 Taiwan
2528	Thailand	2184 United Kingdom