


Remote

The available functions of the remote differ depending on the disc or the situation.

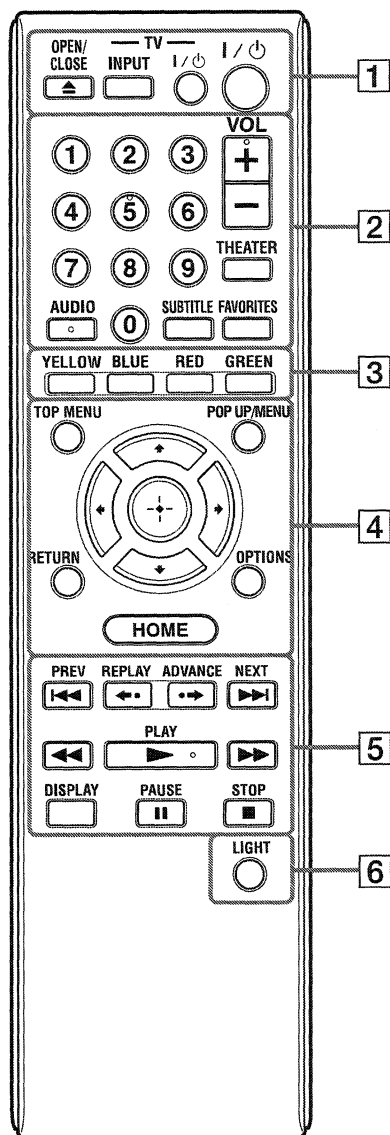

Number 5, AUDIO, VOL +, and ► PLAY buttons have a tactile dot. Use the tactile dot as a reference when operating the player.

The player automatically returns to standby mode

If any button on the player or remote is not pressed for more than 30 minutes, the player automatically returns to standby mode.

1 ▲ OPEN/CLOSE

Opens or closes the disc tray.

-TV- INPUT

Switches between TV and other input sources.

-TV- I/O (on/standby)

Turns on the TV, or sets to standby mode.

I/O (on/standby)

Turns on the player, or sets to standby mode.

2 Number buttons (0 - 9)

Enters the title/chapter numbers, etc.

VOL +/-

Adjusts the TV volume.

THEATER (page 33)

Switches to the optimum video mode for watching movies automatically.

The THEATER button functions only when connected to a Sony Theater Mode-compatible AV amplifier (receiver) or Sony Theater Mode-compatible TV.

AUDIO (page 24)

Selects the language track when multi-lingual tracks are recorded on BD-ROMs/DVD VIDEOS.

Selects the sound track on CDs.

SUBTITLE (page 24)

Selects the subtitle language when multi-lingual subtitles are recorded on BD-ROMs/DVD VIDEOS.

FAVORITES (page 19)

Displays the Internet content added to the Favorites List. You can save up to 18 of your favorite Internet content programs.

3 Color buttons (YELLOW/BLUE/RED/GREEN)

Short cut keys for interactive functions.

4 TOP MENU

Opens or closes the BD's or DVD's Top Menu.

POP UP/MENU

Opens or closes the BD-ROM's Pop-up Menu, or the DVD's menu.

OPTIONS (page 18)

The options menu that can be selected appears on the screen.

HOME

Enters the player's home menu.

Displays the wall paper when pressed on the category icon of the home menu.

RETURN

Returns to the previous display.



Moves the highlight to select a displayed item.

Center button (ENTER)

Enters the selected item.

5 ◀◀ PREV/NEXT ▶▶

Skips to the previous/next chapter, track, or file.

◀◀ REPLAY/ADVANCE ▶▶

Briefly replays the current scenes for 10 seconds/briefly fast forwards the current scenes for 15 seconds.

◀◀/▶▶ (fast reverse/fast forward)

- Fast reverses/fast forwards the disc when pressed during playback. Each time you press the button during playback of videos, the search speed changes.
- Plays in slow motion, when pressed for more than one second in pause mode.
- Plays one frame at a time, when pressed briefly in pause mode.

▶▶ PLAY

Starts or re-starts playback.

DISPLAY (page 17)

Displays the playback information on the screen.

|| PAUSE

Pauses or re-starts playback.

■ STOP

Stops playback and remembers the stop point (resume point).


The resume point for a title/track is the last point you played or the last photo for a photo folder.

6 LIGHT (BDP-BX37 for Canada models only)

Lights up the 4 and 5 buttons (except ◀◀/▶▶ and ENTER) and is useful for operation in the dark.

Home menu display

The home menu appears when you press HOME. Select a category using ◀◀/▶▶. Select an item using ◀/▶, and press ENTER.

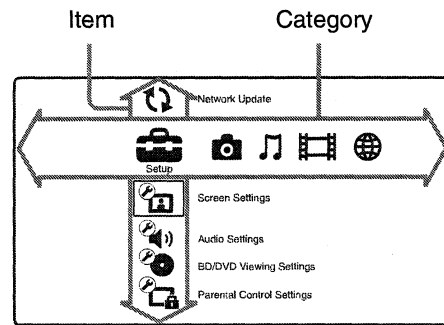

- (Setup): Adjusts the player settings.
- (Photo): Displays photos.
- (Music): Plays music.
- (Video): Plays videos.
- (Network): Displays network items.

Code numbers of controllable TVs

While holding down -TV- , enter the TV's manufacturer code using the number buttons.

If more than one code number is listed, try entering them one at a time until you find the one that works with your TV.

Manufacturer	Code number
Sony	01 (default)
Daewoo ^{*1}	22
Emerson ^{*1}	14
Funai ^{*1}	23
General Electric ^{*1}	06
Goldstar ^{*2}	03, 04, 17
Hitachi	02
JVC ^{*1}	09
LG	04
Mitsubishi/MGA	13
NEC	04
Panasonic	19
Philips ^{*3}	08, 21
Pioneer	16
Radio Shack ^{*1}	05
RCA	10
Samsung ^{*4}	12, 20
Sanyo ^{*1}	11
Sharp ^{*5}	05, 18
Toshiba	07
Zenith ^{*1}	15

^{*1} BDP-BX37 for Canada models only

^{*2} Only 04 can be selected for BDP-S370/BX37 (U.S. models) and BDP-S370 (Canada models).

^{*3} Only 21 can be selected for BDP-S370/BX37 (U.S. models) and BDP-S370 (Canada models).

^{*4} Only 20 can be selected for BDP-S370/BX37 (U.S. models) and BDP-S370 (Canada models).

^{*5} Only 18 can be selected for BDP-S370/BX37 (U.S. models) and BDP-S370 (Canada models).

Language code list

For details, see “BD/DVD Viewing Settings” (page 24).

The language spellings conform to the ISO 639: 1988 (E/F) standard.

Code Language			
1027	Afar	1186	Scots Gaelic
1028	Abkhazian	1194	Galician
1032	Afrikaans	1196	Guarani
1039	Amharic	1203	Gujarati
1044	Arabic	1209	Hausa
1045	Assamese	1217	Hindi
1051	Aymara	1226	Croatian
1052	Azerbaijani	1229	Hungarian
1053	Bashkir	1233	Armenian
1057	Byelorussian	1235	Interlingua
1059	Bulgarian	1239	Interlingue
1060	Bihari	1245	Inupiak
1061	Bislama	1248	Indonesian
1066	Bengali	1253	Icelandic
1067	Tibetan	1254	Italian
1070	Breton	1257	Hebrew
1079	Catalan	1261	Japanese
1093	Corsican	1269	Yiddish
1097	Czech	1283	Javanese
1103	Welsh	1287	Georgian
1105	Danish	1297	Kazakh
1109	German	1298	Greenlandic;
1130	Bhutani; Dzongkha		Kalaallisut
1142	Greek	1299	Cambodian; Khmer
1144	English	1300	Kannada
1145	Esperanto	1301	Korean
1149	Spanish	1305	Kashmiri
1150	Estonian	1307	Kurdish
1151	Basque	1311	Kirghiz
1157	Persian	1313	Latin
1165	Finnish	1326	Lingala
1166	Fiji	1327	Laotian; Lao
1171	Faroese	1332	Lithuanian
1174	French	1334	Latvian
1181	Frisian	1345	Malagasy
1183	Irish	1347	Maori
1349	Macedonian	1511	Albanian
1350	Malayalam	1512	Serbian
1352	Mongolian	1513	Siswati; Swati
1353	Moldavian	1514	Sesotho; Sotho southern
1356	Marathi	1515	Sundanese
1357	Malay	1516	Swedish
1358	Malese; Maltese	1517	Swahili
1363	Burmese	1521	Tamil
1365	Nauru	1525	Telugu
1369	Nepali	1527	Tajik
1376	Dutch	1528	Thai
1379	Norwegian	1529	Tigrinya
1393	Occitan	1531	Turkmen
1403	Oromo	1532	Tagalog
1408	Oriya	1534	Setswana; Tswana
1417	Punjabi; Panjabi	1535	Tonga;
1428	Polish		Tonga islands
1435	Pashto; Pushto	1538	Turkish
1436	Portuguese	1539	Tsonga
1463	Quechua	1540	Tatar
1481	Rhaeto-Romance	1543	Twi
1482	Kirundi; Rundi	1557	Ukrainian
1483	Romanian	1564	Urdu
1489	Russian	1572	Uzbek
1491	Kinyarwanda	1581	Vietnamese
1495	Sanskrit	1587	Volapük
1498	Sindhi	1613	Wolof
1501	Sangho; Sango	1632	Xhosa
1502	Serbo-Croatian	1665	Yoruba
1503	Singhalese;	1684	Chinese
	Sinhalese	1697	Zulu
1505	Slovak	1703	not specified
1506	Slovenian		
1507	Samoa		
1508	Shona		
1509	Somali		

Additional Information

Parental control/area code

For details, see “Parental Control Area Code” (page 24).

Number, Area (Code)		
2044, Argentina (ar)	2219, Hong Kong (hk)	2427, Pakistan (pk)
2047, Australia (au)	2248, India (in)	2424, Philippines (ph)
2046, Austria (at)	2238, Indonesia (id)	2428, Poland (pl)
2057, Belgium (be)	2239, Ireland (ie)	2436, Portugal (pt)
2070, Brazil (br)	2254, Italy (it)	2489, Russia (ru)
2090, Chile (cl)	2276, Japan (jp)	2501, Singapore (sg)
2092, China (cn)	2304, Korea (kr)	2149, Spain (es)
2093, Colombia (co)	2333, Luxembourg (lu)	2499, Sweden (se)
2115, Denmark (dk)	2363, Malaysia (my)	2086, Switzerland (ch)
2165, Finland (fi)	2362, Mexico (mx)	2543, Taiwan (tw)
2174, France (fr)	2376, Netherlands (nl)	2528, Thailand (th)
2109, Germany (de)	2390, New Zealand (nz)	2184, United Kingdom (gb)
2200, Greece (gr)	2379, Norway (no)	