


If you want to control your TV with the supplied remote

You can control the volume, input source, and power switch of your Sony TV with the supplied remote.

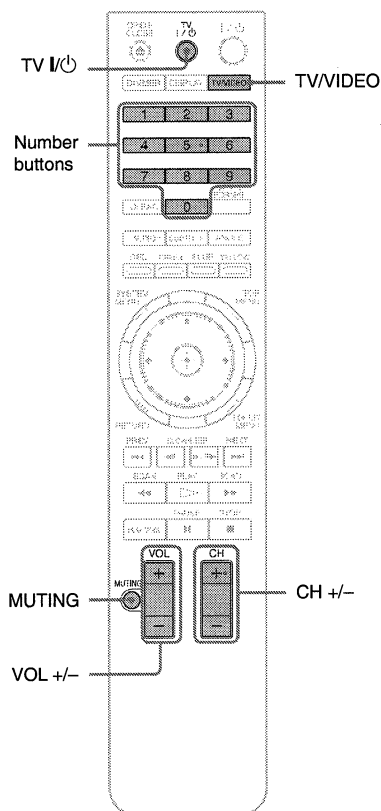

By pressing	You can
TV I/O	Turn the TV on or off.
VOL +/-	Adjust the volume of the TV.
TV/VIDEO	Switch the TV's input source between the TV and other input sources.
CH +/-	Select the channel up and down.
MUTING	Mute the sound (for Sony TV only).

To control other TVs with the remote

You can control the volume, input source, and power switch of non-Sony TVs as well.

If your TV is listed in the table below, set the appropriate manufacturer's code.

- 1 While holding down TV I/O, press the number buttons to select your TV manufacturer's code (see the table below).
- 2 Release TV I/O.

◆Code numbers of controllable TVs

If more than one code number is listed, try entering them one at a time until you find the one that works with your TV.

Manufacturer	Code number
Sony	01 (default)
Daewoo	22, 04
Emerson	14
GE	06
Hitachi	02, 04
JVC	09
LG/Gold star	03, 17, 04
MGA/Mitsubishi	13, 04
NEC	04, 12
Panasonic	19
Philips	08, 21
Pioneer	16
RCA	10, 04
R.Shack	05
Samsung	04, 12, 20
Sanyo	11
Sharp	05, 18
Toshiba	07, 18
Zenith	15

◆To return the remote to its default settings


- 1 Remove the batteries from the remote.
- 2 Re-insert the batteries while pressing down 1, 2, and 3 of the number buttons.
- 3 Wait for a few seconds.

Note

Depending on the connected unit, you may not be able to control your TV using all or some of the buttons on the supplied remote.

Guide to the Remote

The following covers all of the remote's functions. Refer to the list when necessary.

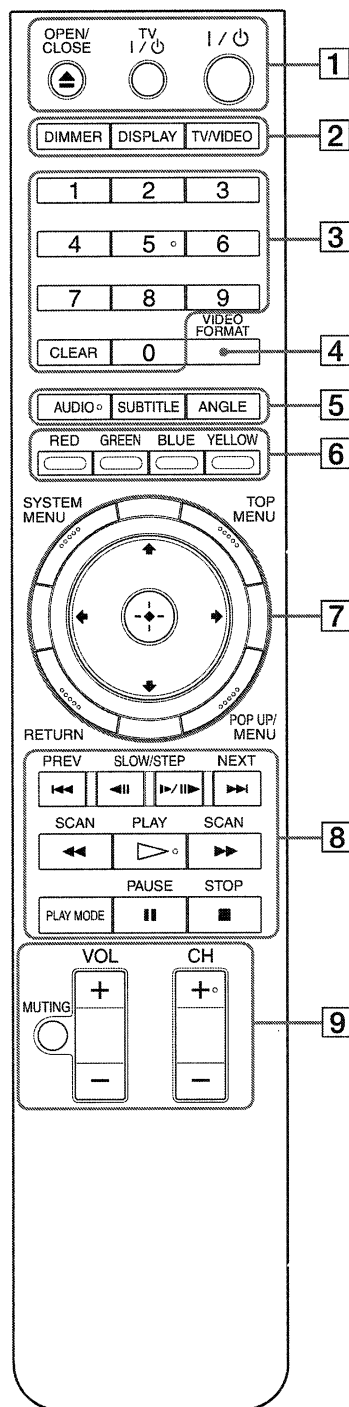

Number 5, AUDIO, CH+, and buttons have a tactile dot. Use the tactile dot as a reference when operating the player.

1 OPEN/CLOSE (page 20)

- Opens/closes the disc tray.

TV I/⏻ (page 17)

- Turns the TV on or to standby mode.

I/⏻ (page 18)

- Turns on, or sets the player to standby mode.

2 DIMMER (page 59)

- Changes the brightness of the front panel display on the player (when completely darkened, indicators on the front panel are also turned off and the FL OFF indicator lights up).

DISPLAY (page 26)

- Displays the disc information on the screen.

TV/VIDEO (page 17)

- Switches between TV and other input sources.

3 Number buttons (page 26)

- Enters the title/chapter numbers, etc.

CLEAR

- Clears the entry field.

4 VIDEO FORMAT (page 45)

- Changes the video output resolution from the HDMI OUT jack and the COMPONENT VIDEO OUT jacks. Press this button repeatedly if no picture appears.

5 AUDIO*¹ (page 49)

- Selects the sound track or the language track on a BD/DVD.

*¹ When playing MPEG-2 movie files or MP3 music files on a DATA DVD, or a music CD, you cannot use this button.

SUBTITLE (page 49)

- Selects the subtitle language on a BD/DVD.

ANGLE

- Switches to other viewing angles when available.

6 Color buttons (RED/GREEN/BLUE/YELLOW)

- Short cut keys for selecting items on some BD's menus (can also be used for BD's Java interactive operations).

7 SYSTEM MENU (page 22)

- Enters/exits the player's start menu ("System Menu").

TOP MENU (page 20)

- Opens/closes the BD's or DVD's top menu.

POP UP/MENU (page 20)

- Opens/closes the BD's pop up menu, or the DVD's disc menu.

RETURN (page 20, 22)

- Returns to the previous display.

◀/↑/↓/▶ (page 20, 22)

- Moves the highlight to select a displayed item.

Center button (ENTER) (page 20, 22)

- Enters the selected item.

8 ◀◀/▶▶ PREV/NEXT

- Skips to the previous/next chapter, track, or file.

◀◀/▶▶ SLOW/STEP*2

- Plays in slow motion or stop motion. To return to normal play, press ▷.
- To play in slow motion
Press ▶▶ during playback. When slow motion play starts, press ▶▶ repeatedly to change the speed : 1/16 → 1/8 → 1/4 → 1/2 of normal playback speed.
- To play in stop motion (step by step)
Press ▶▶ during playback, then press ◀◀ or ▶▶ repeatedly.

◀◀/▶▶ SCAN*2

- Scans backwards or forward. The speed changes when pressed repeatedly.

*2 Depending on the disc or file type, the function may not work or the scan speeds may differ.

▷ PLAY

- Starts or re-starts playback.

PLAY MODE

- Switches to other play modes (Repeat Play, etc.) when pressed during playback.
- Searches for a specific point (page 26).

■ PAUSE

- Pauses/re-starts playback.

■ STOP

- Stops playback.
- Clears the resume point when pressed twice. The resume point for a title is the last point you played, the last track for an audio file, or the last photo for a photo file.

- 9 For TVs operable with the following buttons, see page 17.

MUTING (page 17)

- Mutes the TV sound.

VOL (volume) +/- (page 17)

- Adjusts the TV volume.

CH (channel) +/- (page 17)

- Selects the TV channels up and down.

Playing in various play mode

BD DVD DATA DVD CD

1 During playback, press PLAY MODE repeatedly.

Available items differ depending on the current title/track/file or the disc type. To cancel the Play Mode, press PLAY MODE again.

◆When playing a video or movie title

Items	Details
Time Search	Searches for a specific point (page 26).
Title Search (BD-ROM/DVD VIDEO only)	Searches for a title (page 26).
Repeat Chapter (BD-ROM/DVD VIDEO only)	Repeats the current chapter.
Repeat Title	Repeats the current title.

◆When playing a music track

Items	Details
Repeat Track	Repeats the current track.
Repeat All	Repeats all the tracks on the disc or the "Music" Title List.
Random	Plays all the tracks on the disc or the "Music" Title List in a random order.

◆When playing a photo image

Items	Details
Repeat All	Repeats all the files on the disc or "Photos" Title List.
Random	Plays all the files on the disc or "Photos" Title List in a random order.