


Remote

The available functions of the remote differ depending on the disc or the situation.

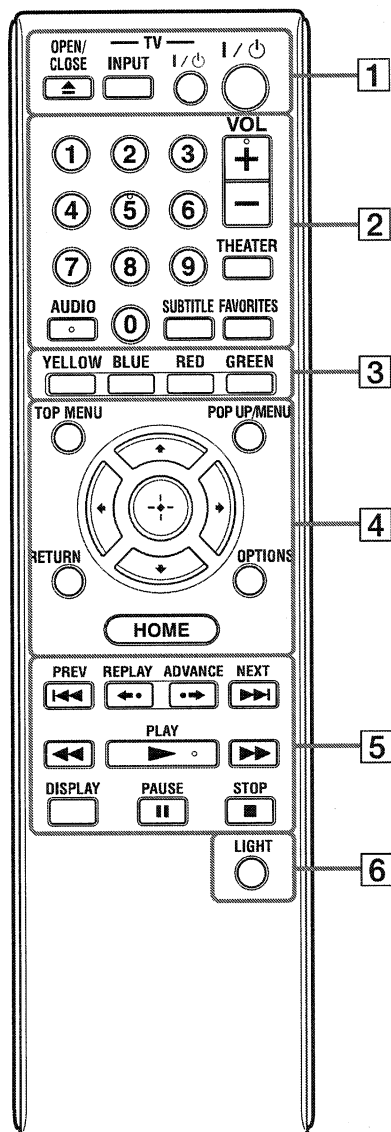

Number 5, AUDIO, VOL +, and ► PLAY buttons have a tactile dot. Use the tactile dot as a reference when operating the player.

The player automatically returns to standby mode

If any button on the player or remote is not pressed for more than 30 minutes, the player automatically returns to standby mode.

1 ▲ OPEN/CLOSE

Opens or closes the disc tray.

-TV- INPUT

Switches between TV and other input sources.

-TV- I/⏻ (on/standby)

Turns on the TV, or sets to standby mode.

I/⏻ (on/standby)

Turns on the player, or sets to standby mode.

2 Number buttons (0 - 9)

Enters the title/chapter numbers, etc.

VOL +/-

Adjusts the TV volume.

THEATER (page 35)

Switches to the optimum video mode for watching movies automatically.

The THEATER button functions only when connected to a Sony Theater Mode-compatible AV amplifier (receiver) or Sony Theater Mode-compatible TV.

AUDIO (page 25)

Selects the language track when multi-lingual tracks are recorded on BD-ROMs/DVD VIDEOS.

Selects the sound track on CDs.

SUBTITLE (page 25)

Selects the subtitle language when multi-lingual subtitles are recorded on BD-ROMs/DVD VIDEOS.

FAVORITES (page 19)

Displays the Internet content added to the Favorites List. You can save up to 18 of your favorite Internet content programs.

3 Color buttons (YELLOW/BLUE/RED/GREEN)

Short cut keys for interactive functions.

4 TOP MENU

Opens or closes the BD's or DVD's Top Menu.

POP UP/MENU

Opens or closes the BD-ROM's Pop-up Menu, or the DVD's menu.

OPTIONS (page 19)

The options menu that can be selected appears on the screen.

HOME

Enters the player's home menu.
Displays the wall paper when pressed on the category icon of the home menu.

RETURN

Returns to the previous display.



Moves the highlight to select a displayed item.

Center button (ENTER)

Enters the selected item.

5 I◀◀ PREV/NEXT ▶▶I

Skips to the previous/next chapter, track, or file.

◀• REPLAY/ADVANCE •▶

Briefly replays the current scenes for 10 seconds/briefly fast forwards the current scenes for 15 seconds.

◀◀/▶▶ (fast reverse/fast forward)

- Fast reverses/fast forwards the disc when pressed during playback. Each time you press the button during playback of videos, the search speed changes.
- Plays in slow motion, when pressed for more than one second in pause mode.
- Plays one frame at a time, when pressed briefly in pause mode.

▶▶ PLAY

Starts or re-starts playback.

DISPLAY (page 17)

Displays the playback information on the screen.

|| PAUSE

Pauses or re-starts playback.

■ STOP

Stops playback and remembers the stop point (resume point).


The resume point for a title/track is the last point you played or the last photo for a photo folder.

6 LIGHT

Lights up the [4] and [5] buttons (except ◀/↑/↓/▶ and ENTER) and is useful for operation in the dark.

Home menu display

The home menu appears when you press HOME. Select a category using ◀/▶. Select an item using ↑/↓, and press ENTER.

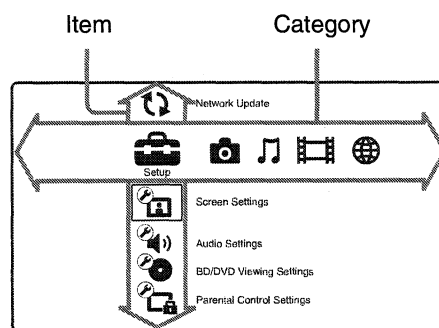

(Setup): Adjusts the player settings.

(Photo): Displays photos.

(Music): Plays music.

(Video): Plays videos.

(Network): Displays network items.

- Music and video recognition technology and related data are provided by Gracenote®. Gracenote is the industry standard in music recognition technology and related content delivery. For more information, please visit www.gracenote.com. CD, DVD, Blu-ray Disc, and music and video-related data from Gracenote, Inc., copyright © 2000-present Gracenote. Gracenote Software, copyright © 2000-present Gracenote. One or more patents owned by Gracenote apply to this product and service. See the Gracenote website for a nonexhaustive list of applicable Gracenote patents. Gracenote, CDDb, MusicID, MediaVOCS, the Gracenote logo and logotype, and the “Powered by Gracenote” logo are either registered trademarks or trademarks of Gracenote in the United States and/or other countries.



- The Wi-Fi CERTIFIED™ Logo is a certification mark of the Wi-Fi Alliance.
- The Wi-Fi Protected Setup™ Mark is a mark of the Wi-Fi Alliance.
- “Wi-Fi CERTIFIED™” and “Wi-Fi Protected Setup™” are trademarks of the Wi-Fi Alliance.
- DLNA®, the DLNA Logo and DLNA CERTIFIED® are trademarks, service marks, or certification marks of the Digital Living Network Alliance.
- Other system and product names are generally trademarks or registered trademarks of the manufacturers. ™ and ® marks are not indicated in this document.

Code numbers of controllable TVs

While holding down -TV- , enter the TV's manufacturer code using the number buttons.

If more than one code number is listed, try entering them one at a time until you find the one that works with your TV.

Manufacturer	Code number
Sony	01 (default)
Daewoo	22
Emerson	14
Funai	23
General Electric	06
Goldstar	03, 04, 17
Hitachi	02
JVC	09
LG	04
Mitsubishi/MGA	13
NEC	04
Panasonic	19
Philips	08, 21
Pioneer	16
Radio Shack	05
RCA	10
Samsung	12, 20
Sanyo	11
Sharp	05, 18
Toshiba	07
Zenith	15

Language code list

For details, see “BD/DVD Viewing Settings” (page 25).

The language spellings conform to the ISO 639: 1988 (E/F) standard.

Code Language					
1027	Afar	1186	Scots Gaelic	1349	Macedonian
1028	Abkhazian	1194	Galician	1350	Malayalam
1032	Afrikaans	1196	Guarani	1352	Mongolian
1039	Amharic	1203	Gujarati	1353	Moldavian
1044	Arabic	1209	Hausa	1356	Marathi
1045	Assamese	1217	Hindi	1357	Malay
1051	Aymara	1226	Croatian	1358	Malese; Maltese
1052	Azerbaijani	1229	Hungarian	1363	Burmese
1053	Bashkir	1233	Armenian	1365	Nauru
1057	Byelorussian	1235	Interlingua	1369	Nepali
1059	Bulgarian	1239	Interlingue	1376	Dutch
1060	Bihari	1245	Inupiak	1379	Norwegian
1061	Bislama	1248	Indonesian	1393	Occitan
1066	Bengali	1253	Icelandic	1403	Oromo
1067	Tibetan	1254	Italian	1408	Oriya
1070	Breton	1257	Hebrew	1417	Punjabi; Panjabi
1079	Catalan	1261	Japanese	1428	Polish
1093	Corsican	1269	Yiddish	1435	Pashto; Pushto
1097	Czech	1283	Javanese	1436	Portuguese
1103	Welsh	1287	Georgian	1463	Quechua
1105	Danish	1297	Kazakh	1481	Rhaeto-Romance
1109	German	1298	Greenlandic;	1482	Kirundi; Rundi
1130	Bhutani; Dzongkha		Kalaallisut	1483	Romanian
1142	Greek	1299	Cambodian; Khmer	1489	Russian
1144	English	1300	Kannada	1491	Kinyarwanda
1145	Esperanto	1301	Korean	1495	Sanskrit
1149	Spanish	1305	Kashmiri	1498	Sindhi
1150	Estonian	1307	Kurdish	1501	Sangho; Sango
1151	Basque	1311	Kirghiz	1502	Serbo-Croatian
1157	Persian	1313	Latin	1503	Singhalese;
1165	Finnish	1326	Lingala		Sinhalese
1166	Fiji	1327	Laothian; Lao	1505	Slovak
1171	Faroese	1332	Lithuanian	1506	Slovenian
1174	French	1334	Latvian	1507	Samoan
1181	Frisian	1345	Malagasy	1508	Shona
1183	Irish	1347	Maori	1509	Somali
				1511	Albanian
				1512	Serbian
				1513	Siswati; Swati
				1514	Sesotho; Sotho
					southern
				1515	Sundanese
				1516	Swedish
				1517	Swahili
				1521	Tamil
				1525	Telugu
				1527	Tajik
				1528	Thai
				1529	Tigrinya
				1531	Turkmen
				1532	Tagalog
				1534	Setswana; Tswana
				1535	Tonga;
					Tonga islands
				1538	Turkish
				1539	Tsonga
				1540	Tatar
				1543	Twi
				1557	Ukrainian
				1564	Urdu
				1572	Uzbek
				1581	Vietnamese
				1587	Volapük
				1613	Wolof
				1632	Xhosa
				1665	Yoruba
				1684	Chinese
				1697	Zulu
				1703	not specified

Parental control/area code

For details, see “Parental Control Area Code” (page 25).

Number, Area (Code)		
2044, Argentina (ar)	2219, Hong Kong (hk)	2427, Pakistan (pk)
2047, Australia (au)	2248, India (in)	2424, Philippines (ph)
2046, Austria (at)	2238, Indonesia (id)	2428, Poland (pl)
2057, Belgium (be)	2239, Ireland (ie)	2436, Portugal (pt)
2070, Brazil (br)	2254, Italy (it)	2489, Russia (ru)
2090, Chile (cl)	2276, Japan (jp)	2501, Singapore (sg)
2092, China (cn)	2304, Korea (kr)	2149, Spain (es)
2093, Colombia (co)	2333, Luxembourg (lu)	2499, Sweden (se)
2115, Denmark (dk)	2363, Malaysia (my)	2086, Switzerland (ch)
2165, Finland (fi)	2362, Mexico (mx)	2543, Taiwan (tw)
2174, France (fr)	2376, Netherlands (nl)	2528, Thailand (th)
2109, Germany (de)	2390, New Zealand (nz)	2184, United Kingdom (gb)
2200, Greece (gr)	2379, Norway (no)	