


Index to Parts and Control

For more information, refer to the pages indicated in parentheses.

Remote control

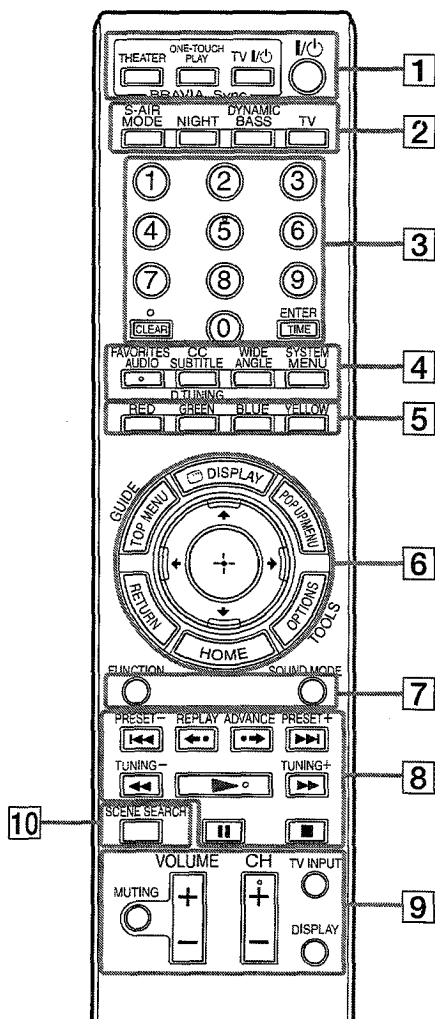

Number 5, FAVORITES/AUDIO, CH +, and ► buttons have a tactile dot. Use the tactile dot as a reference when operating the remote.

- **[BD]** : For system operations
- **[TV]** : For TV operations
(For details, see “Controlling Your TV with the Supplied Remote” (page 69).)

1 THEATER (page 64) **[TV]**

Switches to the optimum video mode for watching movies automatically.

ONE-TOUCH PLAY (pages 36, 64)

[BD]

By only pressing the button, the TV turns on, the TV is set for BD/DVD input selector, and the system starts playing a disc automatically.

TV I/⏻ (on/standby) (page 69) **[TV]**

Turns on the TV or sets it to standby mode.

I/⏻ (on/standby) (pages 28, 29, 36, 51)

[BD]

Turns on the system or sets it to standby mode.

2 S-AIR MODE (page 58) **[BD]**

Selects playback mode for the S-AIR receiver.

NIGHT (page 50) **[BD]**

Activates the night mode function.

DYNAMIC BASS (page 49) **[BD]**

Reinforces bass frequencies.

TV (page 69) **[TV]**

Changes to the TV operation mode for the remote.

3 Number buttons (pages 36, 52, 69)

[BD] **[TV]**

Enters the title/chapter numbers, radio frequencies, etc.

CLEAR (pages 40, 53) **[BD]**

Clears the entry field.

TIME (page 41) **[BD]**

Displays the elapsed/remaining playback time in the front panel display.

• **(page 69) [TV]**

Inputs “.” (dot) when inputting numerics.

ENTER (page 69) **[TV]**

Enters the selected item.

4 AUDIO (pages 48, 49) **[BD]**

Selects the audio format/track.

SUBTITLE (page 38) **[BD]**

Selects the subtitle language when multi-lingual subtitles are recorded on a BD-ROM/DVD VIDEO.

D.TUNING (page 53) **[BD]**

Selects the radio frequencies.

ANGLE (page 38) BD

Switches to other viewing angles when multi-angles are recorded on a BD-ROM/DVD VIDEO.

SYSTEM MENU (pages 33, 42, 49, 53, 56, 71) BD

Enters the system menu.

FAVORITES (page 69) TV

Displays the favorite channel list.

CC (page 69) TV

Displays closed captioning (when available).

WIDE (page 69) TV

Changes the aspect ratio of the connected TV.

[5] Color buttons (RED/GREEN/BLUE/YELLOW) (page 84) BD

Short cut keys for selecting items on some BD's menus (can also be used for BD's Java interactive operations).

[6] TOP MENU (page 39) BD

Opens or closes the BD's or DVD's Top Menu.

BD **DISPLAY (page 41)** BD

Displays the playback information on the TV screen.

POP UP/MENU (page 39) BD

Opens or closes the BD-ROM's Pop-up Menu, or the DVD's menu.

OPTIONS (pages 36, 44, 45, 51) BD

Displays the options menu on the TV screen.

HOME (pages 29, 36, 44, 45, 51, 66, 74)BD TV

Enters or exits the system's home menu.

RETURN (pages 69, 84) BD TV

Returns to the previous display.

←/↑/↓/→ BD TV

Moves the highlight to a displayed item.

⊕ (ENTER) BD TV

Enters the selected item.

GUIDE (page 69) TV

Displays the Digital Electronic Programme Guide (EPG).

TOOLS (page 69) TV

Displays the operation menu for the current display.

[7] FUNCTION (pages 32, 36, 44, 45, 51, 55) BD

Selects the playback source.

SOUND MODE (page 47) BD

Selects the sound mode.

[8] Playback operation buttons BD

See "Playback" (page 36).

⏮/⏭ (previous/next)**⏮/⏭ REPLAY/ADVANCE****⏮/⏭ (fast reverse/fast forward)****▶ (play)****⏸ (pause)****■ (stop)****Radio operation buttons** BD

See "Tuner" (page 51).

PRESET +/-**TUNING +/-****[9] MUTING (pages 36, 44, 69)** BD TV

Turns off the sound temporarily.

VOLUME +/- (pages 36, 69) BDTV

Adjusts the volume.

CH +/- (page 69) TV

Selects the channels up and down.

TV INPUT (page 69) TV

Switches the TV's input source between the TV and other input sources.

DISPLAY (page 51) BD

Changes the radio information in the front panel display between radio frequency and station name.

[10] SCENE SEARCH (page 40) BD

Switches to Scene Search mode that lets you move quickly between scenes within the title currently being played back.

- 9** Press $\uparrow/\downarrow$ to select [Off], then press $\oplus$.

Note

- The test tone signals are not output from the HDMI OUT jack.

Tip

- To adjust the volume of all the speakers at one time, press VOLUME +/-.

Controlling Your TV with the Supplied Remote

By adjusting the remote signal, you can control your TV with the supplied remote.

Note

- When you replace the batteries of the remote, the code number may reset itself to the default (SONY) setting. Reset the appropriate code number.

Preparing the remote for controlling the TV

Press and hold TV I/⏻ while entering your TV's manufacturer's code (see the table) using the number buttons. Then release TV I/⏻.

If you successfully set the manufacturer's code, the TV button flashes twice slowly. If the setting is unsuccessful, the TV button flashes five times quickly.

Code numbers of controllable TVs

If more than one code number is listed, try entering them one at a time until you find the code that works with your TV.

Manufacturer	Code number
SONY	501 (default), 502
DAEWOO	506
EMERSON	567
FUNAI	548
GE	509
GOLDSTAR/LG	503, 517, 544, 568
GRUNDIG	533
HITACHI	514
ITT	521, 522
JVC	516
LOEWE	518
MITSUBISHI/MGA	527
NEC	503
NOKIA	521, 522, 573, 575
PANASONIC	553, 572
PHILIPS	515, 518, 557, 570
PIONEER	526

Manufacturer	Code number
RADIO SHACK	565
RCA/PROSCAN	510
SABA	530, 537, 558
SAMSUNG	515, 517, 544, 566, 569, 571, 574
SANYO	508, 545
SHARP	535, 565
TELEFUNKEN	547, 558
THOMSON	547, 549
TOSHIBA	541, 551
ZENITH	543

Controlling the TV with the remote

You can control the TV using the following buttons. To use these buttons (other than THEATER, TV , TV INPUT), set the remote to the TV mode by pressing TV, so that TV lights up for 1 second.

To exit the TV mode, press TV so that TV flashes four times.

Note

- While in the TV mode, if you press any of the following buttons, TV lights up. (Depending on the manufacturer setting, some buttons may not work, and TV does not light up.)
- When you press other than the following buttons while the remote is in the TV mode, TV flashes four times and the remote exits the TV mode automatically, and the system is operated as the function of the pressed button.
- Depending on the TV, you may not be able to use some or all of the buttons.

By pressing	You can
TV 	Turn the TV on or off.
THEATER	Enjoy optimal images and sound suited for movies.
TV INPUT	Switch the TV's input source between the TV and other input sources.
VOLUME +/-	Adjust the TV volume.
CH +/-	Select the TV channel.
MUTING	Turn off the TV sound temporarily.

By pressing	You can
Number buttons,  , ENTER	Select the TV channel.
HOME	Display the menu of the TV.
FAVORITES	Display the favorite channel list.
CC	Display closed captioning.
GUIDE	Display the Digital Electronic Programme Guide (EPG).
TOOLS	Display the operation menu for the current display.
RETURN	Return to the previous channel or layer on the menu of the TV.
•	Input “.” (dot) when inputting numerics.
WIDE	Change the aspect ratio of the connected TV.
 /↑/↓/→, 	Select the item on the menu.
DISPLAY	Display the information.

Tip

- The function of these buttons are same as the remote buttons of the SONY TV. For details, refer to the operating instructions of the TV.