


Remote control

The buttons for system operation only are described below. See “Controlling Your TV or Other Components with the Supplied Remote” (page 51) for the buttons for operation of the connected components.

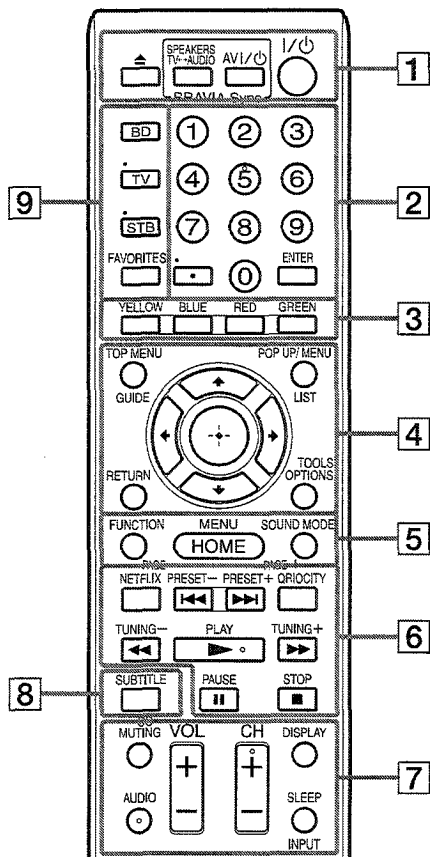

- Number 5, AUDIO, CH +, and ► buttons have a tactile dot. Use the tactile dot as a reference when operating the remote.
- Names of buttons that work after pressing the TV or STB operation mode buttons are indicated with yellow label.

1 ▲ (open/close)

Opens or closes the disc tray.

SPEAKERS TV←AUDIO

Selects whether TV sound is output from the system's speakers or the TV's speaker(s). This function works only when you set [Control for HDMI] to [On] (page 64).

AV I/⏻ (on/standby) (page 51)

Turns on the TV or other component, or sets it to standby mode.

I/⏻ (on/standby) (pages 29, 45)

Turns on the system or sets it to standby mode.

2 Number buttons (pages 46, 51)

Enters the title/chapter numbers, preset station number, etc.

ENTER

Enters the selected item.

3 Color buttons (yellow/blue/red/green)

Short cut keys for selecting items on some BD menus (can also be used for Java interactive operations on BDs).

4 TOP MENU

Opens or closes the BD's or DVD's Top Menu.

POP UP/MENU

Opens or closes the BD-ROM's Pop-up Menu, or the DVD's menu.

OPTIONS (pages 31, 40, 53)

Displays the options menu on the TV screen or in the front panel display. (The location differs based on the selected function.)

RETURN

Returns to the previous display.

←/↑/↓/→

Moves the highlight to a displayed item.

⊕ (enter)

Enters the selected item.

5 FUNCTION (pages 30, 45)

Selects the playback source.

HOME (pages 29, 45, 48, 49, 53, 54, 55, 59)

Enters or exits the system's home menu.

SOUND MODE (page 43)

Selects the sound mode.

6 Playback operation buttons

See "Playback" (page 34).

◀◀/▶▶ (previous/next)

Skip to the previous/next chapter, track, or file.

◀◀/▶▶ (fast/slow/freeze frame)

Fast reverse/fast forward the disc during playback. Each time you press the button, the search speed changes.

Activates slow-motion play when pressed for more than one second in pause mode. Plays one frame at a time when pressed in pause mode.

Slow-motion and single-frame playback are not available for Blu-ray 3D Discs.

▶ (play)

Starts or re-starts playback (resume play). Activates One-Touch Play (page 47) when the system is on and set to the "BD/DVD" function.

⏸ (pause)

Pauses or re-starts playback.

■ (stop)

Stops playback and remembers the stop point (resume point). The resume point for a title/track is the last point you played or the last photo for a photo folder.

Radio operation buttons

See "Tuner" (page 45).

PRESET +/-

TUNING +/-

Online service direct access buttons

NETFLIX

Accesses the "NETFLIX" online service.

QRIOCITY

Accesses the "Qriocity" online service.

7 MUTING

Turns off the sound temporarily.

AUDIO (pages 43, 44)

Selects the audio format/track.

VOL +/- (page 45)

Adjusts the volume.

DISPLAY (pages 34, 38, 53)

Displays playback and web browsing information on the TV screen.

Displays the preset radio station, frequency, etc., in the front panel display.

Displays the stream information/decoding status in the front panel display when the function is set to other than "BD/DVD."

When the system is set to the "HDMI1," "HDMI2," "TV," or "SAT/CABLE" function, the stream information/decoding status appears only when a digital signal is input.

The stream information/decoding status may not appear depending on the stream or item being decoded.

SLEEP (page 50)

Sets the sleep timer.

8 SUBTITLE (page 62)

Selects the subtitle language when multilingual subtitles are recorded on a BD-ROM/DVD VIDEO.

9 Operation mode buttons (page 51)

Changes the component to be operated on the remote.

BD: You can operate this Blu-ray Disc/DVD Home Theatre System.

TV: You can operate a TV.

STB: You can operate a cable box, digital satellite receiver, digital video receiver, etc.

FAVORITES

Displays the Internet contents added to the Favorites List. You can save 18 favorite Internet contents.

Controlling Your TV or Other Components with the Supplied Remote

You can control your TV and other components such as a cable box or digital satellite receiver with the supplied remote. The remote is initially set to control Sony components.

You can control non-Sony components by changing the preset code of the remote. For operation, see "Changing the preset code of the remote (Preset mode)" (page 52).

Note

- When you replace the batteries of the remote, the remote setting may be reset to the default (SONY) setting.

Controlling your components with the supplied remote

- 1 Press the TV or STB operation mode button that matches the component you want to control.
- 2 Press the appropriated buttons listed in the following table.
 - ●: The button can be used with the default setting of the remote.
 - ○: The button can be used when you change the preset code of the remote.

Button	Remote's mode	
	TV	STB
AV I/⏻	●	●
Number buttons	●	●
.	●	●
ENTER	●	●
AUDIO	●	●
SUBTITLE (CC)	●	○
SLEEP (INPUT)	●	●
Color buttons (YELLOW/ BLUE/RED/ GREEN)	●	○

Button	Remote's mode	
	TV	STB
TOP MENU (GUIDE)	●	●
FAVORITES	●	●
POP UP/MENU (LIST)	○	●
←/↑/↓/→, ⊕	●	●
RETURN	●	●
HOME (MENU)	●	●
OPTIONS (TOOLS)	●	●
FUNCTION (PAGE -)	○	○
SOUND MODE (PAGE +)	○	○
⏮/⏭	●	○
NETFLIX	●	○
QRIOCITY	●	○
⏮/⏭	●	●
▶	●	●
⏮	●	●
■	●	●
MUTING	●	●
VOL +/-	●	●
CH +/-	●	●
DISPLAY	●	●

Note

- In TV or STB mode, if you press any of the buttons above, the TV or STB operation mode button lights up. (However, depending on the code setting, some buttons may not work, and the TV or STB operation mode button may not light up.)
- If you press other than the buttons above when the remote is in TV or STB mode, the TV or STB operation mode button does not light up.
- Depending on the TV or component, you may not be able to use some of the buttons.

Changing the preset code of the remote (Preset mode)

- 1** Press HOME.
The home menu appears on the TV screen.
- 2** Press $\leftarrow/\rightarrow$ to select  [Setup].
- 3** Press $\uparrow/\downarrow$ to select [Remote Controller Setting Guide], then press $\oplus$.
- 4** Press $\uparrow/\downarrow$ to select [Preset Mode], then press $\oplus$.
- 5** Press $\uparrow/\downarrow$ to select the component type that you want to operate with the supplied remote, then press $\oplus$.
- 6** Press $\uparrow/\downarrow$ to select the device's manufacturer, then press $\oplus$.
- 7** Press POP UP/MENU while pressing the operation mode button TV (for a TV) or STB (for a cable box, digital satellite receiver, digital video recorder, etc.).
The remote enters Preset mode. The TV or STB operation mode button (whichever button you pressed) starts flashing.
- 8** When the TV or STB operation mode button starts flashing, enter the code on the TV screen using the number buttons, then press ENTER.
If you successfully set the code, the TV or STB operation mode button will flash twice slowly. If the setting is unsuccessful, the TV or STB operation mode button will flash five times quickly.

Note

- You can quit Preset mode by pressing the TV or STB operation mode button (whichever button is flashing).
- If you do not operate the remote for more than 10 seconds during presetting mode, the remote exits from presetting mode.

Clearing the preset code from the remote's memory

- 1** Press and hold AV I/⏻ first, then press VOL -, then press CH -.
The BD, TV, and STB operation buttons light up.
- 2** Release all buttons.
The BD, TV, and STB operation mode buttons turn off and the preset code is cleared. The remote returns to its default settings.

Saving Power in Standby Mode

Check that the following settings are both made:

- [Control for HDMI] in [HDMI Settings] is set to [Off] (page 64).
- [Quick Start Mode] is set to [Off] (page 64).