 


Index to Parts and Control

For more information, refer to the pages indicated in parentheses.

Remote control

For details of using the remote, see “Using the remote” (page 16).

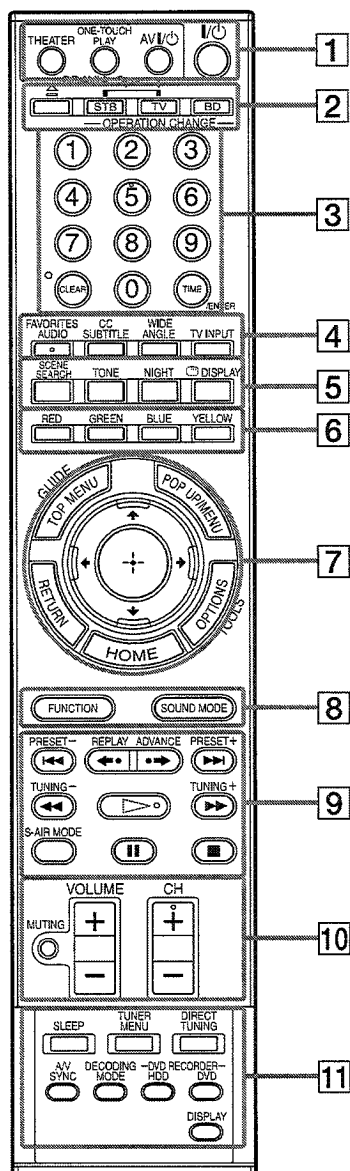

With the cover opened.

Number 5, FAVORITES/AUDIO, CH +, and buttons have a tactile dot. Use the tactile dot as a reference when operating.

- **BD** : For system operations
- **TV** : For TV operations
- **STB** : For set-top box/digital satellite receiver/Sony component (such as VCR, or DVD player/recorder, etc.) operations
(For details, see “Controlling the TV or Other Components with the Supplied Remote” (page 101).)

1 THEATER (96) **TV**

Switches to the optimum video mode for watching movies automatically.

ONE-TOUCH PLAY (65, 96) **BD**

By only pressing the button, the TV turns on, the TV is set for BD/DVD input selector, and the system starts playing a disc automatically.

AV I/O (on/standby) (101) **TV** **STB**

Turns on the connected component such as the TV or set-top box/digital satellite receiver, or set to standby mode.

I/O (on/standby) (60, 65, 83) **BD**

Turns on the system, or set to standby mode.

2 (open/close) (65) **BD**

Opens or closes the disc tray.

OPERATION CHANGE (16, 101)

Changes the source to be operated on the remote.

STB : You can operate set-top box/digital satellite receiver.

TV : You can operate TV.

BD : You can operate the unit.

3 Number buttons (65, 84, 101) **BD**

TV **STB**

Enters the title/chapter numbers or radio frequencies, etc.

CLEAR (70, 101) **BD** **TV** **STB**

Clears the entry field.

TIME (71) **BD**

Displays the elapsed/remaining playback time in the front panel display.

ENTER (101) **TV** **STB**

Enters the selected item.

4 AUDIO (81) BD

Selects the audio format/track.

SUBTITLE (68) BD

Selects the subtitle language when multi-lingual subtitles are recorded on a BD-ROM/DVD VIDEO.

ANGLE (68) BD

Switches to other viewing angles when multi-angles are recorded on a BD-ROM/DVD VIDEO.

TV INPUT (101) TV

Switches the TV's input source between the TV and other input sources.

FAVORITES (101) TV

Displays the favorite channel list.

CC (101) TV

Changes the subtitle of the TV.

WIDE (101) TV

Changes the aspect ratio of the connected TV.

5 SCENE SEARCH (70) BD

Switches to Scene Search mode that lets you move quickly between scenes within the title currently being played back.

TONE (105) BD

Adjusts the sound by changing the frequency envelope of a sound.

NIGHT (105) BD

Activates the night mode function.

 DISPLAY (71) BD

Displays the playback information on the TV screen.

6 Color buttons (RED/GREEN/BLUE/YELLOW) (85, 117) BD

Short cut keys for selecting items on some BD's menus (can also be used for BD's Java interactive operations).

7 TOP MENU (69) BD

Opens or closes the BD's or DVD's Top Menu.

POP UP/MENU (69) BD

Opens or closes the BD-ROM's Pop-up Menu, or the DVD's menu.

OPTIONS (65, 73, 75, 83) BD STB

Displays the options menu that can be selected appears on the TV screen.

HOME (60, 65, 73, 75, 83, 89, 98, 107)

BD TV STB

Enters or exits the system's home menu.

RETURN (83, 101, 117) BD TV

STB

Returns to the previous display.

←/↑/↖/→ (60, 65, 73, 75, 83, 89, 98, 107)

BD TV STB

Moves the highlight to select a displayed item.

+ (ENTER) (60, 65, 73, 75, 83, 89, 98, 107) BD TV STB

Enters the selected item.

GUIDE (101) TV

Displays the Digital Electronic Programme Guide (EPG).

TOOLS (101) TV

Displays the operation menu for the current display.

8 FUNCTION (60, 64, 65, 73, 75, 83, 88)

BD

Selects the playback source.

SOUND MODE (80) BD

Selects a suitable sound mode for movies or music.

9 **◀◀/▶▶ (previous/next) (65, 73, 75)**

BD **TV**

Skips to the previous/next chapter, track, or file. To go to the beginning of the previous track, press **◀◀** twice.

PRESET +/- (83) **BD**

Selects the preset radio station.

◀•/•▶ REPLAY/ADVANCE (65)

BD **TV** **STB**

Replays the scene/briefly fast forwards the scene.

◀◀/▶▶ (fast reverse/fast forward) (65, 73) **BD **TV** **STB****

Fast reverses/fast forwards the disc when pressed during playback.

Each time you press the button, search speed changes.

To resume normal speed, press **▶**.

TUNING +/- (83) **BD**

Searches the radio station.

▶ (play) (65, 73, 75) **BD **TV** **STB****

Starts or re-starts playback.

Plays a slideshow when a disc containing JPEG image files is inserted.

|| (pause) (65, 73, 75) **BD **TV** **STB****

Pauses or re-starts playback.

■ (stop) (65, 73, 75) **BD **TV** **STB****

Stops playback and remembers the stop point (resume point).

The resume point for a title/track is the last point you played or the last photo for a photo folder.

S-AIR MODE (89) **BD**

Selects playback mode for the S-AIR receiver.

10 **MUTING (65, 73, 101) **BD** **TV****

Turn off the sound temporarily.

VOLUME +/- (65, 101) **BD **TV****

Adjusts the volume.

CH +/- (101) **TV **STB****

Selects the channels up and down.

11 **SLEEP (106) **BD****

Sets the sleep timer.

TUNER MENU (86) **BD**

Enters the menu for the tuner settings.

DIRECT TUNING (86) **BD**

Selects the radio frequencies.

A/V SYNC (73) **BD**

Adjusts the delay between the picture and sound.

DECODING MODE (77) **BD**

Selects the system's pre-programmed decoding modes that bring exciting and powerful sound of movie theaters into your home.

DISPLAY (83) **BD**

Changes the radio information in the front panel display between radio frequency and station name.

DVD RECORDER (101) **STB**

Changes the operation mode for Sony DVD recorders.

 
HDD: HDD mode

DVD: DVD mode

Using the remote

Inserting batteries into the remote

Insert two R6 (size AA) batteries (supplied) by matching the $\oplus$ and $\ominus$ ends on the batteries to the markings inside the compartment.

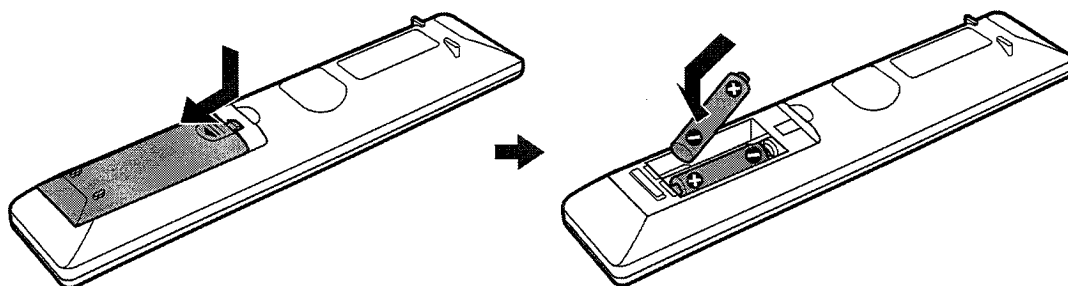


Note

- Do not leave the remote in an extremely hot or humid place.
- Do not use a new battery with an old one.
- Do not drop any foreign object into the remote casing, particularly when replacing the batteries.
- If you do not intend to use the remote for an extended period of time, remove the batteries to avoid possible damage from battery leakage and corrosion.

About operation of the remote

 You can operate this system, TV, and set-top box/digital satellite receiver using the supplied remote. Change the operation mode by using OPERATION CHANGE.

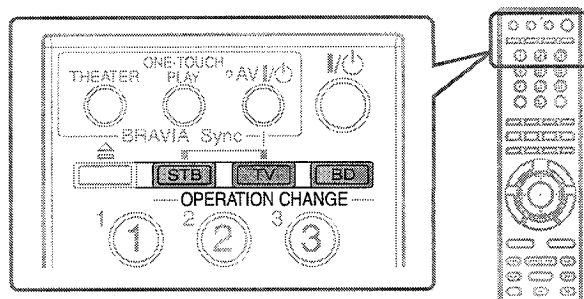

■ System operation

Press BD (BD lights up for 1 second).

The remote enters system operation mode, and BD lights up when you press buttons for operation. When operating the system, point the remote at the remote sensor  on the unit.

■ TV operation

Press TV (TV lights up for 1 second).

The remote enters TV operation mode, and TV lights up when you press buttons for operation (TV does not light up when you press a button that is not available for the TV).

To operate the TV, set the remote signal to suit your TV. For details, see “Controlling the TV or Other Components with the Supplied Remote” (page 101).

■ Set-top box/digital satellite receiver/Sony component (such as VCR, DVD player/recorder, etc.) operation

Press STB (STB lights up for 1 second).

The remote enters set-top box/digital satellite receiver operation mode, and STB lights up when you press buttons for operation (STB does not light up when you press a button that is not available for the set-top box/digital satellite receiver).

To operate the set-top box/digital satellite receiver/Sony Component, set the remote signal to suit your set-top box/digital satellite receiver. For details, see “Controlling the TV or Other Components with the Supplied Remote” (page 101).

 
Note

- Do not expose the remote sensor to direct sunlight or lighting apparatus. Doing so may cause a malfunction.

To use the remote at a distance from the system

(BDV-IT1000ES only)

You can use the remote away from the system by connecting an IR repeater system (not supplied) to the unit. Use this optional item when you install the unit in a place where the remote signal cannot be received.

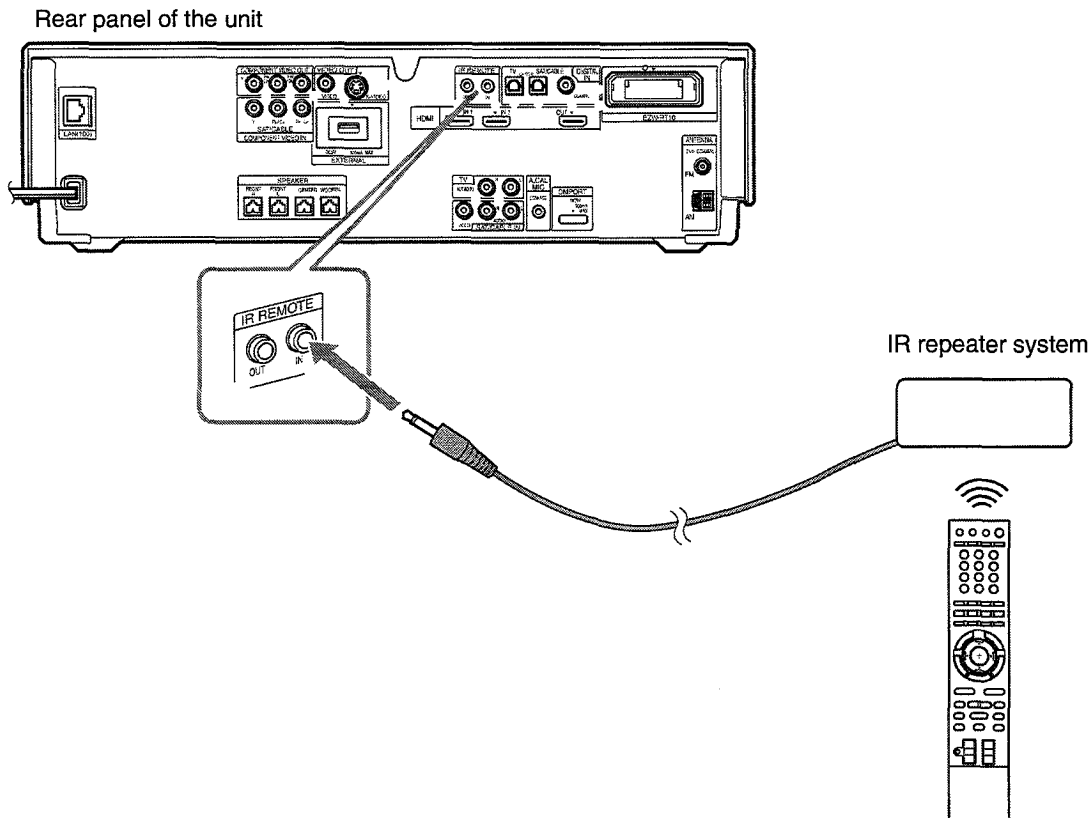

Note

- When you perform [Auto Calibration] in the Easy Setup (page 60), the default settings are changed.
- Depending on the input stream, [Distance] may not be effective.

■ [Level]

You can adjust the sound level of the speakers, center speaker, and subwoofer. You can set the parameters from -6.0 dB to +6.0 dB. Be sure to set [Test Tone] to [On] for easy adjustment.

[Front L/R] 0.0 dB: Set the front speaker level.

[Center] 0.0 dB*: Set the center speaker level.

[Surround L/R] 0.0 dB*: Set the surround speaker level.

[Surround Back L/R] 0.0 dB*: Set the surround Back speaker level.

[Subwoofer] 0.0 dB: Set the subwoofer level.

* This item appears when you set to [Yes] in the [Connection] setting.

■ [Test Tone]

The speakers will emit a test tone to adjust [Level].

[Off]: The test tone is not emitted from the speakers.

[On]: The test tone is emitted from each speaker in sequence while adjusting level. When you select one of the [Speaker Settings] items, the test tone is emitted from each speaker in sequence.

Adjust the sound level as follows.

- 1** Set the [Test Tone] to [On].
- 2** Press $\leftarrow/\uparrow/\downarrow/\rightarrow$ repeatedly to select the desired speaker and the level.
- 3** Press $\oplus$.
- 4** Repeat Steps 1 to 3.
- 5** Press $\leftarrow/\uparrow/\downarrow/\rightarrow$ repeatedly to set [Test Tone] to [Off] after adjusting the speaker level.

Note

- The test tone signals are not output from the HDMI OUT jack.

Tip

- To adjust the volume of all the speakers at one time, press VOLUME +/-.

Controlling the TV or Other Components with the Supplied Remote

By adjusting the remote signal, you can control your TV, a Sony component (such as a VCR, DVD player/recorder, etc.), CATV, or set-top box/digital satellite receiver with the supplied remote.

Note

- When you replace the batteries of the remote, the code number may reset itself to the default (SONY) setting. Reset the appropriate code number.

Preparing the remote for controlling the components

- 1** Press POP UP/MENU while pressing TV (for TV) or STB (for a Sony component, CATV, set-top box/digital satellite receiver, etc.).

TV or STB (pressed button) flashes.

- 2** While TV or STB is flashing, enter the manufacturer's code (see the table) using the number buttons, then press TIME.

If you successfully set the manufacturer's code, TV or STB will flash twice slowly. If the setting is unsuccessful, TV or STB will flash five times quickly.

Code numbers of controllable components

If more than one code number is listed, try entering them one at a time until you find the code that works with your TV.

TV

Manufacturer	Code number
SONY	5001 (default), 5002
AIWA	5001
AKAI	5003
DAEWOO	5003, 5015, 5044
GE	5003, 5009, 5010, 5044
GOLDSTAR/LG	5003, 5015, 5017, 5044, 5068

Manufacturer	Code number
HITACHI	5003, 5014, 5015, 5017, 5044, 5057, 5071
JVC	5016
KMC	5017
MAGNAVOX	5003, 5015, 5017, 5018, 5044, 5066
MARANTZ	5027
MITSUBISHI/MGA	5003, 5027, 5044, 5066, 5068
NEC	5003, 5017, 5044, 5066
PANASONIC	5009, 5053, 5072
PHILIPS	5015, 5018, 5057, 5070, 5071
PIONEER	5009, 5025, 5051
RCA/PROSCAN	5003, 5010, 5044
SAMPO	5066
SAMSUNG	5003, 5015, 5017, 5044, 5057, 5066, 5069, 5074
SHARP	5017, 5035, 5065
TOSHIBA	5035, 5041, 5051

Sony component

VCR	7001, 7002, 7003
DVD player/recorder	4001, 4002, 4003, 4004

CATV

Manufacturer	Code number
SONY	8501
ABC	8513, 8555
ADELPHIA	8507, 8510
ADVANCED NEWHOUSE	8507
ALTRIO	8507
AMERICAST	8505
ATLANTIC BROADBAND	8507
BELL & HOWELL	8513
BELL SOUTH	8505
BLUE RIDGE	8507
BRIGTH HOUSE	8507
CABLEVISION	8507
CHARTER	8507
COMCAST	8507
COX	8507
DIRECTOR	8503
GEMINI	8036, 8543

Manufacturer	Code number
GENERAL INSTRUMENT	8018, 8032, 8503, 8512, 8513, 8514, 8515, 8516, 8517, 8518, 8519, 8532, 8553, 8554, 8557
GNC	8505
GOLDSTAR	5825
HAMLIN	8023, 8024, 8025, 8026, 8532, 8533, 8534, 8535, 8536
ILLICO	8507
JERROLD	8001, 8002, 8003, 8004, 8005, 8006, 8007, 8008, 8018, 8022, 8032, 8503, 8512, 8513, 8514, 8515, 8516, 8517, 8518, 8519, 8532, 8553, 8554, 8557
MACOM	8033, 8034, 8035, 8540, 8541, 8542
MAGNAVOX	8037
MEMOREX	8506, 8523, 8544
MOTOROLA	8503, 8510, 8511
NET	8030, 8552
OAK	8027, 8028, 8029, 8537, 8538, 8539
PACE	8507
PANASONIC	8019, 8020, 8021, 8523, 8529, 8530, 8531
PARAGON	8506, 8523
PHILIPS	8039, 8040, 8041, 8043, 8044, 8504, 8546, 8547, 8548, 8549, 8550, 8551
PIONEER	8014, 8015, 8507, 8525, 8526
PULSAR	8506, 8523
QUASAR	8523
REGAL	8532, 8533, 8534, 8535, 8536
RODGERS	8507
RUNCO	8506, 8523
SAMSUNG	8038, 8525, 8545
SCIENTIFIC ATLANTA	8009, 8010, 8011, 8502, 8507, 8508, 8509, 8520, 8521, 8522, 8555, 8556
SEREN	8507
SIGECOM	8507
SUSQUEHANNA	8507
TIME WARNER	8507
TOCOM	8016, 8017, 8031, 8527, 8528, 8553
TOSHIBA	8506, 8523
VIDEOTRON	8507

Manufacturer	Code number
WIDEOPENWEST	8505, 8507
ZENITH	8012, 8013, 8505, 8506, 8523, 8524

Set-top box/digital satellite receiver

Manufacturer	Code number
SONY	8201, 8202, 8203, 8701, 8702, 8703
ADB	8262
ALPHASTAR	8710
AMSTRAD	8204, 8225, 8226, 8247, 8259
B sky B	8243
CANAL +	8208
CROSSDIGITAL	8717
DGTEC	8292, 8293, 8294
DIRECTV	8713, 8717, 8718, 8719, 8723, 8714
DISH NETWORK	8712, 8714, 8725
ECHOSTAR	8712, 8720
GALAXIS	8212, 8214, 8216, 8232, 8233, 8254, 8272
GE	8719
GENERAL INSTRUMENT	8711
Gold Box	8238
Grundig	8228, 8229, 8237, 8265
HIRSCHMANN	8263
HITACHI	8707
HUGHES	8706
Hyundai	8245
Jerrold	8240
JVC	8712, 8714, 8720
KATHREIN	8224, 8244, 8250
MAGNAVOX	8715, 8716, 8718
MATSUI	8227
MEMOREX	8716
NIKKO	8223
NOKIA	8219, 8239, 8257, 8276, 7277
NTV PLUS 2000	8242
On digital	8273
PACE	8217, 8218, 8222, 8243, 8260, 8261
PANASONIC	8267, 8705

Manufacturer	Code number
PAYSAT	8716
PHILIPS	8255, 8278, 8715, 8716, 8718
PROSCAN	8704, 8709, 8719
RADIX	8213, 8226, 8231, 8253
RCA	8704, 8709, 8719, 8721
SABA	8210, 8211, 8230, 8234, 8235, 8248, 8270, 8286
SAMSUNG	8287, 8288, 8717, 8722
Sky	8243
SKY MASTER	8205, 8207, 8285
Sky+	8295
STAR SIGHT	8716
STRONG	8289, 8290, 8291
TECHNISAT	8220, 8221, 8236, 8241, 8246, 8252, 8266, 8268, 8279, 7280
Thomson	8234, 8271, 8274, 8275
TOMSON	8283, 8284
TOSHIBA	8708
TPS	8256
UNIDEN	8715, 8716
WATSON	8206
Zehnder	8209, 8215, 8249, 8251, 8264, 8268, 8269, 8281, 8282

Controlling the TV with the remote

You can control the TV using the following buttons. To use these buttons, set the remote to the TV mode by pressing TV (TV lights up for 1 second).

Note

- During the TV mode, if you press any of the following buttons, TV lights up. (Depending on the manufacturer setting, some buttons may not work, and TV does not light up.)
- When you press other than the following buttons during the remote is in the TV mode, TV does not light up.
- Depending on the TV, you may not be able to control your TV or to use some of the buttons.

By pressing	You can
AV 	Turn the TV on or off.
THEATER	Enjoy optimal image suited for movies.
TV INPUT	Switch the TV's input source between the TV and other input sources.
VOLUME +/-	Adjust the TV volume.
CH +/-	Select the TV channel.
MUTING	Turn off the TV sound temporarily.
Number buttons,  , ENTER	Select the TV channel.
HOME	Display the menu of the TV.
FAVORITES	Display the favorite channel list.
CC	Change the subtitle of the TV.
GUIDE	Display the Digital Electronic Programme Guide (EPG).
TOOLS	Display the operation menu for the current display.
RETURN	Return to the previous channel or layer on the menu of the TV.
.	Input "." (dot) when inputting numerics.
WIDE	Change the aspect ratio of the connected TV.
 ,  ,  ,  , 	Select the item on the menu.
 *	Start playback.
 *	Pause playback.
 *	Stop playback.

By pressing	You can
 ,  *	Skips to the previous/next chapter, track, or file.
 ,  ,  *	Replay the scene/briefly fast forward the scene.
 ,  *	Fast reverse/fast forward during playback.

- * Only available for the component that is connected to the TV with the HDMI or iLINK connection. For details, see the operating instructions of the TV.

Tip

- The function of these buttons are same as the remote buttons of the Sony TV. For details, refer to the operating instructions of the TV.

Controlling the Sony component, CATV, or set-top box/digital satellite receiver

You can control the Sony component such as a VCR or DVD player/recorder, CATV, or set-top box/digital satellite receiver using the following buttons. To use these buttons, set the remote to the STB mode by pressing STB (STB lights up for 1 second).

Note

- During the STB mode, if you press any of the following buttons, STB lights up. (Depending on the manufacturer setting, some buttons may not work, and STB does not light up.)
- When you press other than the following buttons during the remote is in the STB mode, STB does not light up.
- Depending on the component, you may not be able to control the component or to use some of the buttons.

By pressing	You can
AV I/O	Turn the set-top box/digital satellite receiver on or off.
CH +/-	Select the set-top box/digital satellite receiver channel.
Number buttons,  , ENTER	Select the set-top box/digital satellite receiver channel.
HOME	Display the menu of the set-top box/digital satellite receiver.
TOOLS	Display the operation menu for the current display.
RETURN	Return to the previous channel or layer on the menu of the set-top box/digital satellite receiver.
CLEAR	Clear the entry field.
 /  /  , 	Select the item on the menu.
DVD RECORDER (HDD, DVD)*	Change the operation mode for Sony DVD recorders.
 *	Start playback.
 *	Pause playback.
 *	Stop playback.
 *	Briefly fast forward the scene.
 /  *	Fast reverse/fast forward during playback.

* Only available for Sony component such as a VCR, DVD player/recorder, etc.

Using the Sound Effect

Enjoying the sound at low volume

You can enjoy sound effects or dialog, as you would in a movie theater, even at low volume. It is useful for watching movies at night.

Press NIGHT.

“NIGHT ON” appears in the front panel display and the sound effect is activated.

During the night mode is on, “NIGHT” lights up in the front panel display.

Note

- When sound is output from the center speaker, this effect is more pronounced, as speech (movie dialog, etc.) is easy to hear. When sound is not output from the center speaker, or you are using the headphones, the system optimally adjusts the volume.

To turn off the sound effect

Press NIGHT so that “NIGHT” disappears from the front panel display.

Adjusting the sound

You can adjust the sound by changing the tonal balance of the sound.

1 Press TONE repeatedly until the desired setting appears in the front panel display.

- “BASS”: You can adjust the bass frequencies.
- “MIDDLE” (BDV-IS1000 only): You can adjust the middle frequencies.
- “TREBLE”: You can adjust the treble frequencies.

2 Press / to adjust the sound.

The adjusted value appears in the front panel display. You can set the value from -6.0 to +6.0.