

Getting Started

 
Unpacking

Check that you have the following items:

- Speakers (5)
- Subwoofer (1)
- AM loop antenna (aerial) (1)
- FM wire antenna (aerial) (1)
- Speaker cords (5 m × 4, 15 m × 2)
(16.5 ft. × 4, 49.5 ft. × 2)
- Video Cord (1)
- Remote Commander (remote) (1)
- Size AAA (R03) batteries (2)
- Wall-mount pads
- Operating Instructions
- Speaker and TV connections (card) (1)

Inserting Batteries into the Remote

You can control the system using the supplied remote. Insert two size AAA (R03) batteries by matching the ⊕ and ⊖ ends on the batteries to the markings inside the compartment. When using the remote, point it at the remote sensor  on the system.

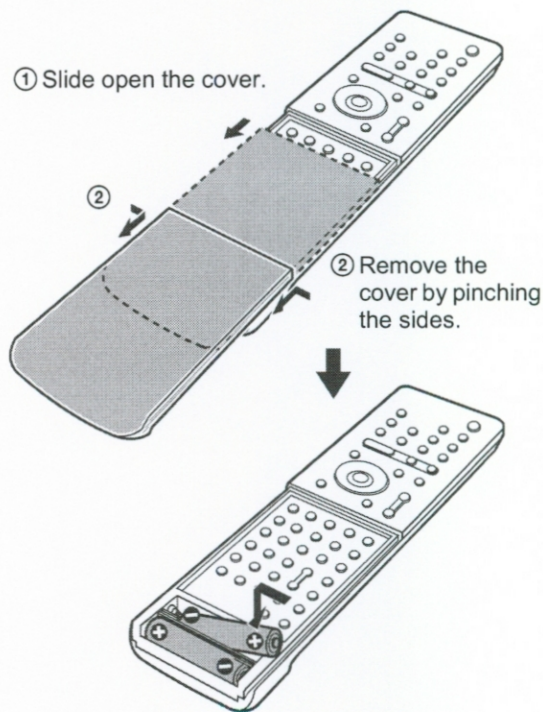


Note

- Do not leave the remote in an extremely hot or humid place.
- Do not use a new battery with an old one.
- Do not drop any foreign object into the remote casing, particularly when replacing the batteries.
- Do not expose the remote sensor to direct light from the sun or lighting apparatus. Doing so may cause a malfunction.
- If you do not intend to use the remote for an extended period of time, remove the batteries to avoid possible damage from battery leakage and corrosion.

Other Operations

Controlling the TV with the Supplied Remote

 By adjusting the remote signal, you can control your TV with the supplied remote.

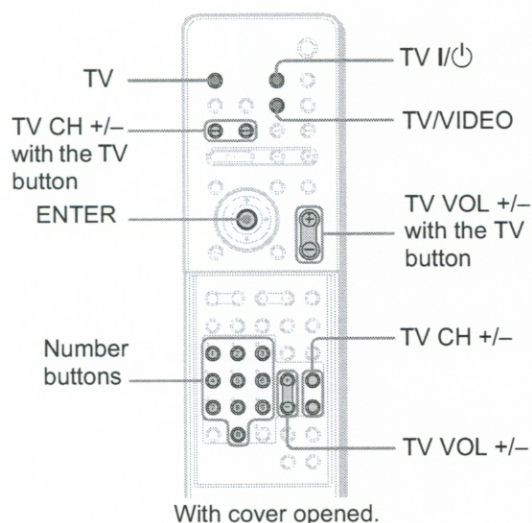

Note

- If you enter a new code number, the code number previously entered will be erased.
- When you replace the batteries of the remote, the code number may reset itself to the default (SONY) setting. Reset the appropriate code number.

Controlling TVs with the remote

Press and hold TV I/II while entering your TV's manufacturer's code (see the table) using the number buttons. Then release TV I/II.

If you set successfully the manufacturer's code, the remote transmits the on/off signal of the TV.

Code numbers of controllable TVs

If more than one code number is listed, try entering them one at a time until you find the one that works with your TV.

TV

Manufacturer	Code number
SONY	001 (default)
DAEWOO	002, 004, 005, 006
FISHER	009
GOLDSTAR	020
HITACHI	014, 015
JVC	018
LOEWE	027, 028
MAGNAVOX	034
MITSUBISHI/MGA	022
PANASONIC	049, 050
PIONEER	029
RCA/PROSCAN	012, 032, 033
SAMSUNG	036
SANYO	010
SHARP	039, 040
TOSHIBA	046
ZENITH	016, 017

CATV

Manufacturer	Code number
SONY	101
HAMLIN/REGAL	123, 124, 125, 126, 127
JERROLD/GI	102, 103, 104, 105, 106, 107, 108, 109, 119
OAK	128, 129, 130
PANASONIC	120, 121, 122
PIONEER	115, 116
SCIENTIFIC ATLANTA	110, 111, 112
TOCOM	117, 118, 131
ZENITH	113, 114

To control the TV

You can control the TV by using following buttons.

By pressing	You can
TV I/II	Turn the TV on or off.
TV/VIDEO*	Switch the TV's input source between the TV and other input sources.
TV VOL +/-*	Adjust the TV volume.
TV CH +/-*	Select the TV channel.
Number buttons*	Select the TV channel.

- * To use these buttons, set the remote to the TV mode by pressing the TV button. To cancel the TV mode, press the TV button again.

You can select the TV channels by using the number buttons.

 
To select the TV channels, press the number buttons, then ENTER.

Note

- Depending on the TV, you may not be able to control your TV or to use some of the buttons above.
- The TV mode turns off when you do not operate the remote for 10 seconds.

Using the THEATRE SYNC Function

THEATRE SYNC allows you to turn on your SONY TV and this system, changes the system mode to “DVD,” and then switches the TV’s input source you set with one button push.

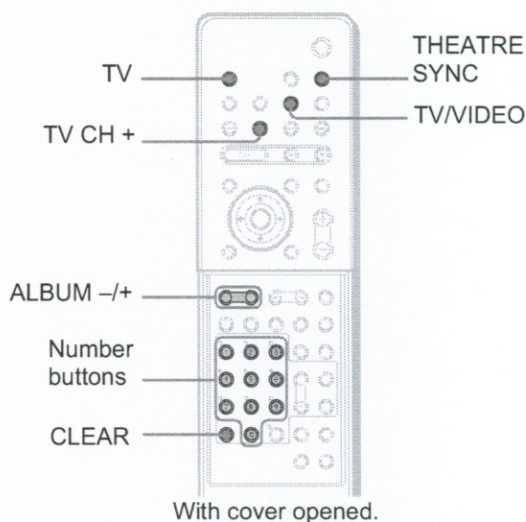

Other Operations

Preparing for the THEATRE SYNC function

Register the TV’s input source connected to this system.

Press and hold TV/VIDEO while entering the code for the TV’s input source connected to this system (see the table) using the number buttons.

 
The TV’s input source is selected.

If you successfully set the TV’s input source code, the TV button flashes twice slowly. If the setting is unsuccessful, the TV button flashes 5 times quickly.

Set your TV’s input to the input you used to connect the system. For details, see the instructions of your TV.

continued

Remote

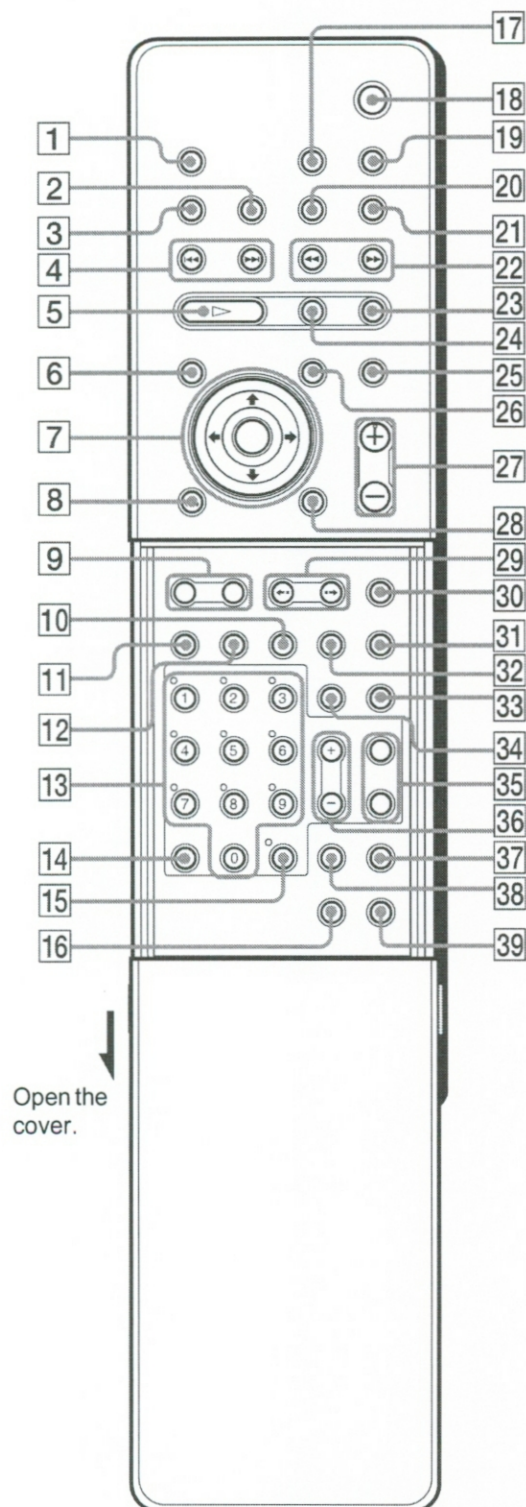

- 1 TV (64)
- 2 DISC SKIP (31)
- 3 SOUND FIELD (55)

- 4 **◀◀/▶▶** PRESET -/+ , TV CH -/+ (28, 32, 68)
- 5 **▷** (play) (31)
The **▷** button has a tactile dot.*
- 6 **TOP MENU** (36)
- 7 **←/↑/↓/→/ENTER** (27, 33, 45, 55, 58, 60, 67, 72)
←/↑/↓/→ have tactile dots.*
- 8 **↶** RETURN (38)
- 9 **ALBUM -/+** (32, 65)
- 10 **ANGLE** (59)
- 11 **AUDIO** (53)
The AUDIO button has a tactile dot.*
- 12 **SUBTITLE** (59)
- 13 **Number buttons** (36, 60, 64)
The number 5 button has a tactile dot.*
- 14 **CLEAR, -/-** (28, 33, 65)
- 15 **ENTER**
- 16 **PROGRESSIVE, TUNER MENU** (22, 68)
- 17 **TV I/⏻** (on/standby) (64)
- 18 **I/⏻** (on/standby) (27, 31, 68)
- 19 **THEATRE SYNC** (65)
- 20 **TV/VIDEO, SLEEP** (64, 70)
- 21 **FUNCTION** (22, 31, 57, 67)
- 22 **◀◀/▶▶ ◀/▶** SLOW, TUNING -/+ (46, 68)
- 23 **■** (stop) (32, 60, 68)
- 24 **⏸** (pause) (32)
- 25 **MUTING** (32)
- 26 **MENU** (36)
- 27 **VOLUME, TV VOL +/-** (31, 68)
The VOLUME, TV VOL + button has a tactile dot.*
- 28 **☐** DISPLAY (10, 28, 33, 60, 72)
- 29 **◀•/◀◀/•→/▶▶** REPLAY, ADVANCE, STEP (32)
- 30 **DISPLAY** (68)
- 31 **DSGX** (58)
- 32 **PICTURE NAVI** (42)
- 33 **REPEAT** (35)
- 34 **FM MODE** (68)

Additional Information

continued

35 TV CH -/+ (64)

The TV CH + button has a tactile dot.*

36 TV VOL +/- (64)

37 MULTI/2CH (37)

38 SA-CD/CD (37)

39 AMP MENU (27, 45, 58, 67)

* Use the tactile dot as a reference when operating the system.