


Remote control

The buttons for system operation only are described below. See “Controlling Your TV or Other Components with the Supplied Remote” (page 56) for the buttons for operation of the connected components.

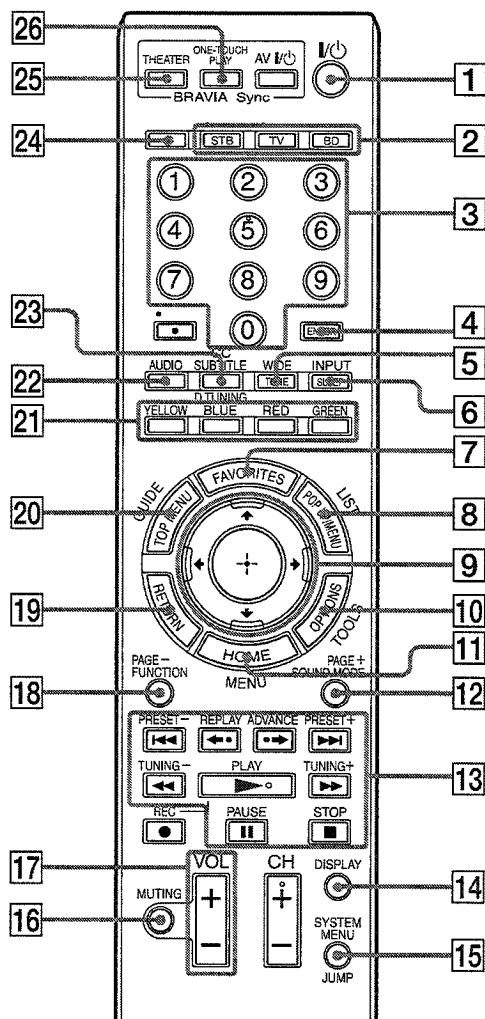

- Number 5, AUDIO, CH +, and ► buttons have a tactile dot. Use the tactile dot as a reference when operating the remote.
- Names of buttons that work after pressing the TV or STB operation mode buttons are indicated with yellow label.

1 I/⏻ (on/standby) (pages 30, 44)

Turns on the system or sets it to standby mode.

2 Operation mode buttons (page 56)

Changes the component to be operated on the remote.

STB: You can operate a cable box, digital satellite receiver, digital video receiver, etc.

TV: You can operate a TV.

BD: You can operate this Blu-ray Disc/ DVD Home Theatre System.

3 Number buttons (pages 45, 56)

Enters the title/chapter numbers, radio frequencies, etc.

4 ENTER (page 56)

Enters the selected item.

5 TONE (page 43)

Adjusts the sound.

6 SLEEP (page 55)

Sets the sleep timer.

7 FAVORITES

Displays the contents of Internet entries added to the Favorites List. You can save 18 favorite Internet contents.

8 POP UP/MENU

Opens or closes the BD-ROM's Pop-up Menu, or the DVD's menu.

9 ←/↑/↓/→

Moves the highlight to a displayed item.

⊕ (ENTER)

Enters the selected item.

10 OPTIONS (page 38)

Displays the options menu on the TV screen.

11 HOME (pages 30, 44, 46, 52, 53, 59)

Enters or exits the system's home menu.

12 SOUND MODE (page 41)

Selects the sound mode.

13 Playback operation buttons

See "Playback" (page 35).

◀◀/▶▶ (previous/next)

Skip to the previous/next chapter, track, or file.

◀•/•▶ REPLAY/ADVANCE

Briefly replay the current scenes for 10 seconds./Briefly fast forwards the current scenes for 15 seconds.

◀◀/▶▶ (fast reverse/fast forward)

Fast reverse/fast forward the disc during playback. Each time you press the button, search speed changes.

Activates slow-motion play when pressed for more than one second in pause mode. Plays one frame at a time when pressed in pause mode.

▶ PLAY

Starts or re-starts playback (resume play). Plays a slideshow when a disc containing JPEG image files is inserted.

II PAUSE

Pauses or re-starts playback.

■ STOP

Stops playback and remembers the stop point (resume point). The resume point for a title/track is the last point you played or the last photo for a photo folder.

Radio operation buttons

See "Tuner" (page 44).

PRESET +/-

TUNING +/-

14 DISPLAY (pages 35, 38)

Displays the playback information on the TV screen.

Displays stream information in the front panel display when: ① The function is set to "TV"/"SAT/CABLE"/"HDMI1"/"HDMI2," and ② Digital signals are input via the DIGITAL IN/HDMI (IN 1)/HDMI (IN 2) jack.

15 SYSTEM MENU (pages 33, 40, 43, 44)

Enters the system menu.

16 MUTING

Turns off the sound temporarily.

17 VOL +/- (page 44)

Adjusts the volume.

18 FUNCTION (pages 32, 44)

Selects the playback source.

19 RETURN

Returns to the previous display.

20 TOP MENU

Opens or closes the BD's or DVD's Top Menu.

21 Color buttons (YELLOW/BLUE/RED/GREEN)

Shortcut keys for selecting items on some Blu-ray menus (can also be used for Java interactive operations on BDs).

22 AUDIO (pages 41, 42)

Selects the audio format/track.

23 SUBTITLE (page 62)

Selects the subtitle language when multilingual subtitles are recorded on a BD-ROM/DVD VIDEO.

D.TUNING (Direct Tuning) (page 44)

Tunes in to the desired radio frequency.

24 ▲ (open/close) (page 35)

Opens or closes the disc tray.

25 THEATER (page 51)

Switches to the optimum video mode for watching movies automatically.

26 ONE-TOUCH PLAY (page 51)

Activates One-Touch Play.

Controlling Your TV or Other Components with the Supplied Remote

You can control your TV and other components such as a cable box or digital satellite receiver with the supplied remote. The remote is initially set to control Sony components.

You can control non-Sony components by changing the preset code of the remote. For operation, see "Changing the preset code of the remote (Preset mode)" (page 57).

You can also set a new code which is not stored on the remote. For operation, see "Programming the remote code from another remote (Learning mode)" (page 57).

Note

- When you replace the batteries of the remote, the remote setting may be reset to the default (SONY) setting.

Controlling your components with the supplied remote

- 1 Press the TV or STB operation mode button that matches the component you want to control.
- 2 Press the appropriated buttons listed in the following table.
 - ●: The button can be used with the default setting of the remote.
 - ○: The button can be used when you change the preset code of the remote.

Button	Remote's mode	
	TV	STB
AV I/O	●	●
Number buttons	●	●
.	●	●
ENTER	●	●
AUDIO	●	●
SUBTITLE (CC)	●	○
TONE (WIDE)	●	○

Button	Remote's mode	
	TV	STB
SLEEP (INPUT)	●	●
Color buttons (YELLOW/BLUE/RED/GREEN)	●	○
TOP MENU (GUIDE)	●	●
FAVORITES	●	●
POP UP/MENU (LIST)	●	●
◀/▶/↶/↷, ⊕	●	●
RETURN	●	●
HOME (MENU)	●	●
OPTIONS (TOOLS)	●	●
FUNCTION (PAGE -)	●	○
SOUND MODE (PAGE +)	●	○
⏮/⏭	●	○
◀•	●	○
•▶	●	●
⏮/⏭	●	●
▷	●	●
⏮	●	●
■	●	●
MUTING	●	
VOL +/-	●	
CH +/-	●	●
DISPLAY	●	●
SYSTEM MENU (JUMP)	●	●
▷ while pressing ● (starts recording)	●	●
⏮ while pressing ● (pauses recording)	●	○
■ while pressing ● (stops recording)	●	○

Note

- In TV or STB mode, if you press any of the buttons above, the TV or STB operation mode button lights up. (However, depending on the code setting, some buttons may not work, and the TV or STB operation mode button may not light up.)
- If you press other than the buttons above when the remote is in TV or STB mode, the TV or STB operation mode button does not light up.
- Depending on the TV or component, you may not be able to use some of the buttons.

Changing the preset code of the remote (Preset mode)

- 1 Press HOME.**
The home menu appears on the TV screen.
- 2 Press $\leftarrow/\rightarrow$ to select  [Setup].**
- 3 Press $\uparrow/\downarrow$ to select [Remote Controller Setting Guide], then press $\oplus$.**
- 4 Press $\uparrow/\downarrow$ to select [Preset Mode], then press $\oplus$.**
- 5 Press $\uparrow/\downarrow$ to select the component type that you want to operate with the supplied remote, then press $\oplus$.**
- 6 Press $\uparrow/\downarrow$ to select the device's manufacturer, then press $\oplus$.**
- 7 Press POP UP/MENU while pressing the operation mode button TV (for a TV) or STB (for a cable box, digital satellite receiver, digital video recorder, etc.).**
The remote enters Preset mode. The TV or STB operation mode button (whichever button you pressed) starts flashing.
- 8 When the TV or STB operation mode button starts flashing, enter the code on the TV screen using the number buttons, then press ENTER.**
If you successfully set the code, the TV or STB operation mode button will flash twice slowly. If the setting is unsuccessful, the TV or STB operation mode button will flash five times quickly.

Note

- You can quit Preset mode by pressing the TV or STB operation mode button (whichever button is flashing).

- If you do not operate the remote for more than 10 seconds during presetting mode, the remote exits from presetting mode.

Programming the remote code from another remote (Learning mode)

You can program a remote code that is not stored in the supplied remote from a different component's remote, such as a TV remote. Buttons other than THEATER, ONE-TOUCH PLAY, , BD, TV, and STB are assignable.

- 1 Press HOME.**
The home menu appears on the TV screen.
- 2 Press $\leftarrow/\rightarrow$ to select  [Setup].**
- 3 Press $\uparrow/\downarrow$ to select [Remote Controller Setting Guide], then press $\oplus$.**
- 4 Press $\uparrow/\downarrow$ to select [Learning Mode], then press $\oplus$.**
- 5 Press $\oplus$.**
- 6 Prepare the other remote with the button which you want to program to the supplied remote.**
- 7 Press TOP MENU while pressing the operation mode button TV (for a TV) or STB (for a cable box, digital satellite receiver, digital video recorder, etc.) for one second.**
The remote enters Learning mode. The BD operation mode button lights up and the TV or STB operation mode button (whichever button you pressed) starts flashing.
- 8 Press the button on the supplied remote to which you want to assign the new remote code.**
The TV or STB operation mode button lights up.

Note

- If the pressed button has already been assigned a remote code, the TV or STB operation mode button flashes five times quickly. In this case, clear the learned remote code of the button (page 58), then assign the new desired remote code.

- You cannot use ● individually. ● is used with ▷, ■, or ■. When learning, press ▷, ■, or ■ while pressing ●.

9 Point the remotes at each other.

10 Press the button on the other remote that you want to program to the supplied remote.

Note

- If you do not press a button for more than 10 seconds after Step 8, the supplied remote status returns to its status after Step 7. Re-perform from Step 8.

11 Repeat Steps 8 to 10 to continue programming more buttons.

If you successfully program the remote code, the BD operation mode button will flash twice slowly. If the setting is unsuccessful, the TV or STB operation mode button will flash five times quickly.

Note

- You can exit from Learning mode by pressing the TV or STB operation mode button (whichever button is flashing).
- If you do not press a button to be programmed during Learning mode for more than 1 minute, the remote exits from Learning mode.

To clear a programmed remote code

1 Follow Steps 1 to 7 of “Programming the remote code from another remote (Learning mode).”

2 Press I/⏻ for more than 1 second.

The TV or STB operation mode button flashes twice.

3 Press the button on the supplied remote for which you want to clear the remote code.

If you successfully clear the remote code, the BD operation mode button will flash twice slowly. If the clearing is unsuccessful, the BD operation mode button will flash five times quickly.

4 Repeat Step 3 to continue clearing more buttons.

Note

- When you clear the programmed remote code, the button's operation returns to the default setting.

Clearing all the preset and programmed remote codes from the remote's memory

1 Press and hold AV I/⏻ first, then press VOL –, then press CH –.

The BD, TV, and STB operation buttons light up.

2 Release all buttons.

The BD, TV, and STB operation mode buttons turn off and all the added remote codes are cleared. The remote returns to its default settings.

Saving Power in Standby Mode

Check that the following settings are made:

- [Control for HDMI] in [HDMI Settings] is set to [Off] (page 50).
- [Standby] in [S-AIR Settings] is set to [Off] (page 47).
- [Quick Start Mode] is set to [Off] (page 64).