


Other Operations

Controlling the TV with the Supplied Remote

You can control your TV (SONY only) with the supplied remote.

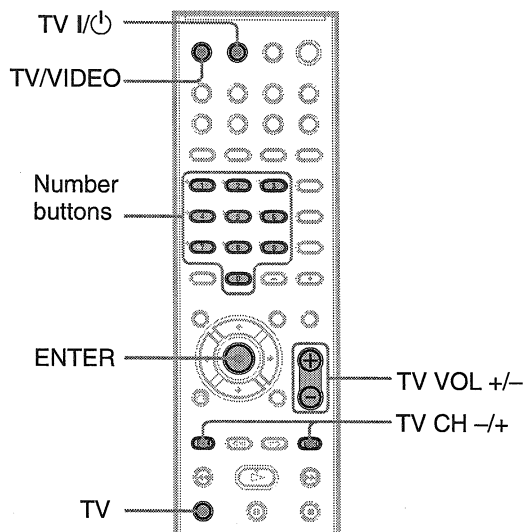

You can select the TV channels by using the number buttons.

To select the TV channels, press the number buttons, then ENTER.

Note

- Depending on the TV, you may not be able to control your TV or to use some of the buttons above.

Controlling TVs with the remote


To control the TV

You can control the TV by using following buttons.

By pressing	You can
TV I/⏻	Turn the TV on or off.
TV/VIDEO	Switch the TV's input source between the TV and other input sources.
TV VOL +/- while pressing the TV button	Adjust the TV volume.
TV CH +/- while pressing the TV button	Select the TV channel.
Number buttons while pressing the TV button	Select the TV channel.

Using the THEATRE SYNC Function

THEATRE SYNC allows you to turn on your SONY TV and this system, changes the system mode to "DVD," and then switches the TV's input source you set with one button push.

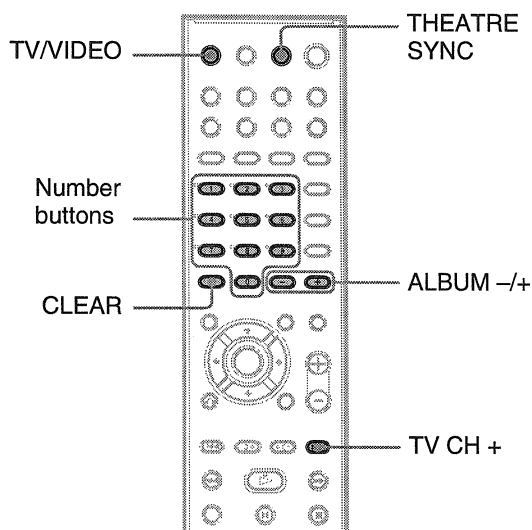

Preparing for the THEATRE SYNC function

Register the TV's input source connected to this system.

Press and hold TV/VIDEO while entering the code for the TV's input source connected to this system (see the table) using the number buttons.

The TV's input source is selected.

Set your TV's input to the input you used to connect the system. For details, see the instructions of your TV.

By pressing	Number	TV's input source
TV/VIDEO	0	No input source (Default)
	1	VIDEO1
	2	VIDEO2
	3	VIDEO3
	4	VIDEO4
	5	VIDEO5
	6	VIDEO6
	7	VIDEO7
	8	VIDEO8
	9*	COMPONENT 1 INPUT
	CLEAR*	COMPONENT 2 INPUT
	ALBUM -*	COMPONENT 3 INPUT
	ALBUM +*	COMPONENT 4 INPUT

* Except for North American models.

Operating for the THEATRE SYNC function

Point the remote to the direction of TV and this system, then press THEATRE SYNC once.

If this function does not work, change the transmit time. The transmit time varies depending on the TV.

To change the transmit time

Press and hold TV CH + while entering the code for transmit time (see the table) using the number buttons.


The transmit time from the remote is selected.

By pressing	Number	Transmit time
TV CH +	1	0.5 (Default)
	2	1
	3	1.5
	4	2
	5	2.5
	6	3
	7	3.5
	8	4

Note

- This function is only for SONY TVs. (This function may not work on some SONY TVs.)
- If distance between TV and this system is too far, this function may not work. Install the system near the TV.
- Keep the remote pointed in the direction of the TV and this system while entering the code.

Enjoying the Sound of Other Components

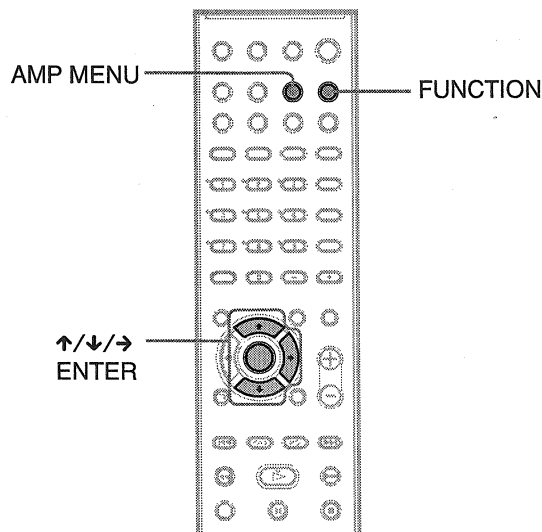

Other Operations

Selecting the connected component

You can use a VCR or other components connected to the VIDEO/SAT jacks on the rear panel. Refer to the operation manual supplied with the components for further information on the operation.

Press FUNCTION repeatedly until "VIDEO" or "SAT" appears in the front panel display.

Each time you press FUNCTION, the mode of the system changes in the following sequence.

When "ATTENUATE" is set to "ATT OFF."

DVD → TUNER FM → TUNER AM →
VIDEO → DVD → ...

When "ATTENUATE" is set to "ATT ON."

DVD → TUNER FM → TUNER AM → SAT
→ DVD → ...

For details on "ATTENUATE," see page 66.

Using a digital satellite receiver or other components with a high audio output level


Connect the satellite receiver to the VIDEO/SAT jacks on the rear panel. You can also connect the components with a high audio output level (including 2V r.m.s components, such as MD, etc.) to the VIDEO/SAT jacks, and perform the following to prevent distortion occurring.

- 1** Press **FUNCTION** repeatedly until “VIDEO” appears in the front panel display.
- 2** Press **AMP MENU**.
- 3** Press **↑/↓** repeatedly until “ATTENUATE” appears in the front panel display, then press **ENTER** or **→**.
- 4** Press **↑/↓** to select “ATT ON” in the front panel display.
The output level is changed.
When you select “ATT OFF” and press **↓**, this operation will be canceled.
- 5** Press **ENTER** or **AMP MENU**.
The AMP menu turns off.
The function name in the front panel display changes to “SAT.”

Tip

- To return to the VIDEO function, select “ATT OFF” at Step 4.


Enjoying the Radio

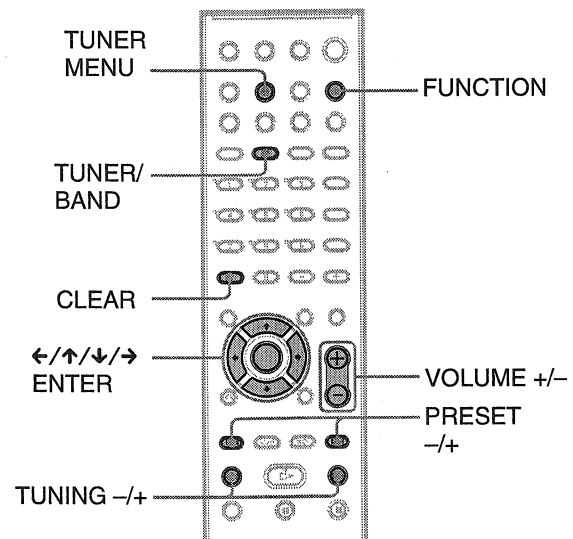

Presetting radio stations


You can preset 20 FM stations, and 10 AM stations. Before tuning, make sure to turn down the volume to minimum.

 - 1** Press **FUNCTION** repeatedly until the band you want appears in the front panel display.
- 2** Press and hold **TUNING +** or **-** until the auto scanning starts.
Scanning stops when the system tunes in a station. “TUNED” and “ST” (for stereo program) appear in the front panel display.



- 3** Press **TUNER MENU**.
- 4** Press **←/↑/↓/→** repeatedly until “MEMORY” appears in the front panel display.
- 5** Press **ENTER**.
A preset number appears in the front panel display.

Remote

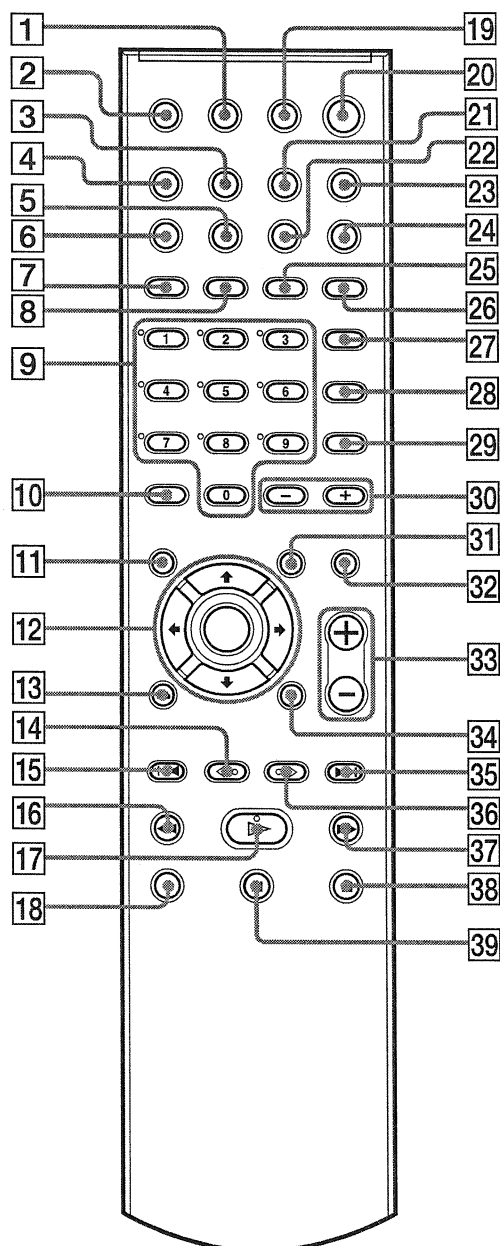

- 1 TV I/⏻ (on/standby) (63)
- 2 TV/VIDEO (63)
- 3 TUNER MENU (66)
- 4 SLEEP (68)
- 5 DISC SKIP (31)
- 6 PROGRESSIVE (22)
- 7 REPEAT/FM MODE (35, 67)
- 8 TUNER/BAND (67)
- 9 Number buttons (36, 59, 63)

The number 5 button has a tactile dot.*

- 10 CLEAR, -/-- (28, 33, 64)
- 11 TOP MENU (36)
- 12 ⏮/⏭/⏪/⏩/ENTER (27, 33, 54, 59, 65, 69, 70)
- 13 ⏮ RETURN (37)
- 14 ⏮/⏭ REPLAY, STEP (32)
- 15 ⏮ PRESET -, TV CH - (28, 32, 63, 67)
- 16 ⏮/⏭ SLOW, TUNING - (45, 66)
- 17 ▷ (play) (31)
The ▷ button has a tactile dot.*
- 18 TV (63)
- 19 THEATRE SYNC (64)
- 20 I/⏻ (on/standby) (27, 31, 67)
- 21 AMP MENU (27, 65, 69)
- 22 DSGX (57)
- 23 FUNCTION (22, 31, 56, 65)
- 24 SOUND FIELD (54)
- 25 DISPLAY (67)
- 26 PICTURE NAVI (41)
- 27 AUDIO (52)
- 28 SUBTITLE (58)
- 29 ANGLE (58)
- 30 ALBUM -/+ (32, 64)
- 31 MENU (36)
- 32 MUTING (32)
- 33 VOLUME, TV VOL +/- (31, 63, 67)
The VOLUME, TV VOL + button has a tactile dot.*
- 34 ⏮ DISPLAY (9, 28, 33, 59, 70)
- 35 ⏭ PRESET +, TV CH + (28, 32, 63, 67)
- 36 ⏭/⏭ ADVANCE, STEP (32)
- 37 ⏭/⏭ SLOW, TUNING + (45, 66)
- 38 ■ (stop) (32, 59, 67)
- 39 || (pause) (32)

* Use the tactile dot as a reference when operating the system.