

- If an error message appears, follow the message, then select [YES].

An error message appears when:

- the headphones are connected to the unit or surround amplifier.
- the calibration mic is not connected.
- front speakers are not correctly connected.
- surround speakers are not correctly connected.
- front and surround speakers are not correctly connected.

10 Press ←/→ to select [YES] or [NO], then press ⊕.

■ The measurement is OK.

Disconnect the calibration mic, then select [YES]. The result is implemented.

■ The measurement is not OK.

Follow the message, then select [YES] to retry.

Note

- While the Auto Calibration function works:
 - do not turn off the power.
 - do not press any button.
 - do not change the volume.
 - do not change the function.
 - do not change the disc.
 - do not insert or eject a disc.
 - do not connect the headphones to the unit or surround amplifier.
 - do not disconnect the calibration mic.
- The measurement for [SUBWOOFER] is always [YES] since the system does not perform subwoofer calibration.

Tip

- You can check the distance between the listening position and each speaker. See page 73.

Controlling the TV with the Supplied Remote

You can control the TV (Sony only) by using following buttons. Use these buttons (other than TV I/⏻, THEATER, TV INPUT, and TV VOL +/-) while pressing the TV button.

Note


- Depending on the TV, you may not be able to control your TV or to use some of the buttons.

By pressing	You can
TV I/⏻	Turn the TV on/off.
THEATER	Enjoy optimal image suited for movies.
TV INPUT	Switch the TV's input source between the TV and other input sources.
TV VOL +/-	Adjust the TV volume.
TV CH +/-*	Select the TV channel.
Number buttons*, ENTER*	Select the TV channel.
TOOLS*	Displays the operation menu for the current display.
RETURN*	Return to the previous channel or layer on the menu of the TV.
MENU*	Display the menu of the TV.
MUTING*	Turn off the TV sound temporarily.
←/↑/↓/→*, ⊕ *	Select the item on the menu.

- * Use these buttons while pressing the TV button.

Remote control

ALPHABETICAL ORDER		BUTTON DESCRIPTIONS
A - O	P - Z	
ANGLE 3 (54)	PICTURE NAVI 15 (63)	Number buttons 14 (56, 76, 91)
AUDIO 16 (54)	PRESET +/- 27 (77)	I/⏻ (on/standby) 1 (41, 44, 52)
CLEAR 32 (58, 68, 77)	S-AIR MODE 4	TV I/⏻ (on/standby) 19 (91)
D.TUNING 22 (77)	SLEEP 17 (92)	⏮/⏪/⏩/⏭/⊕ 12 (41, 44, 55, 58, 76, 89)
DISC SKIP 33 (52)	SOUND MODE 5 (51)	⏮/•/•/⏭ REPLAY/ADVANCE 9 (52)
DISPLAY 21 (78, 93)	SUBTITLE 22 (54)	⏮/⏭/⏭ 27 (52)
DVD MENU 25 (60)	SYSTEM MENU 24 (41, 48, 92, 93, 83)	⏮/⏭/⏭ 10 (52)
DVD TOP MENU 13 (60)	THEATER 18 (79)	STEP ⏮/⏭/⏭ 9 (52)
DYNAMIC BASS 6 (92)	TOOLS 26 (91)	SLOW ⏮/⏭/⏭ 10 (52)
ENTER* 24 (41, 44, 55, 58, 76, 89)	TUNING +/- 10 (76)	▷ (play) 30 (52)
FUNCTION +/- 2 (47, 52)	TV 29 (91)	■ (stop) 28 (52)
MENU 25 (91)	TV CH +/- 27 (91)	⏮ (pause) 11 (52)
MUTING 7 (52)	TV INPUT 20 (91)	⏮ DISPLAY** 26 (44, 55, 58, 89)
NIGHT 23 (92)	TV VOL +/- 34 (91)	⏮ RETURN 31 (56, 91)
ONE-TOUCH PLAY 35 (80)	VOLUME +/- 8 (52)	⊙ 32 (91)

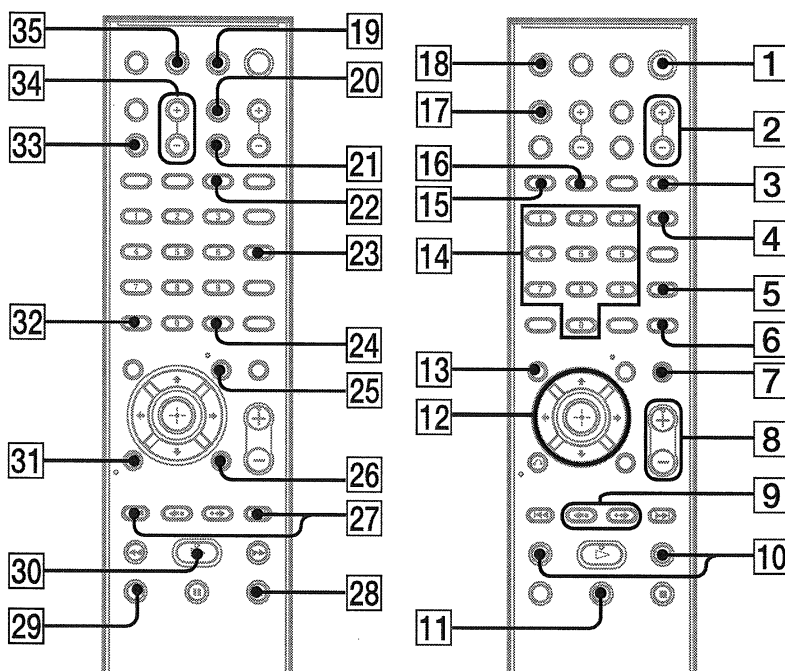

* The ENTER button has the same function as the ⊕ button. When you operate the TV, the ENTER button is used for selecting a channel, and the ⊕ button is used for selecting menu items (page 91).

** This button is available for the "DVD" or "DMPORT" function. Depending on the DIGITAL MEDIA PORT adapter, this button may not work.